



8. Level 3 Repair

8-1. Components Layout

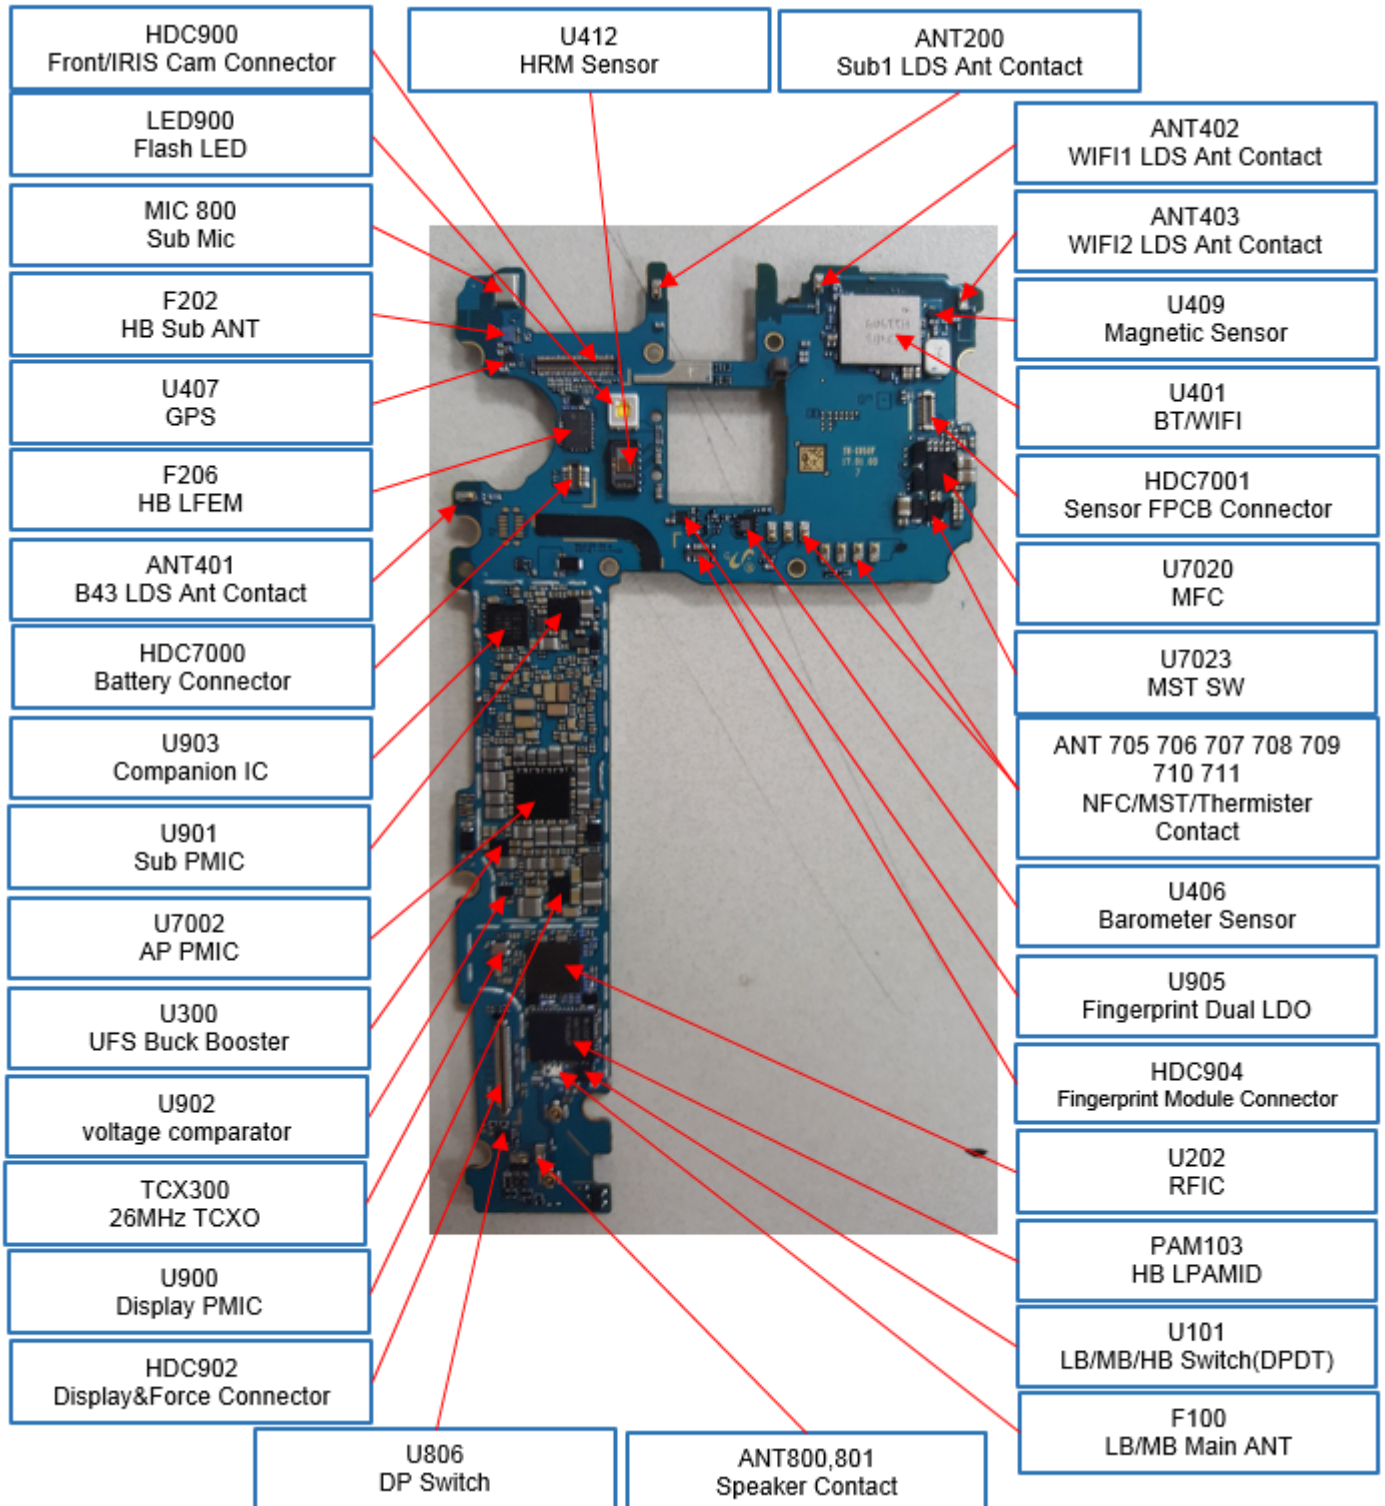

8. Level 3 Repair

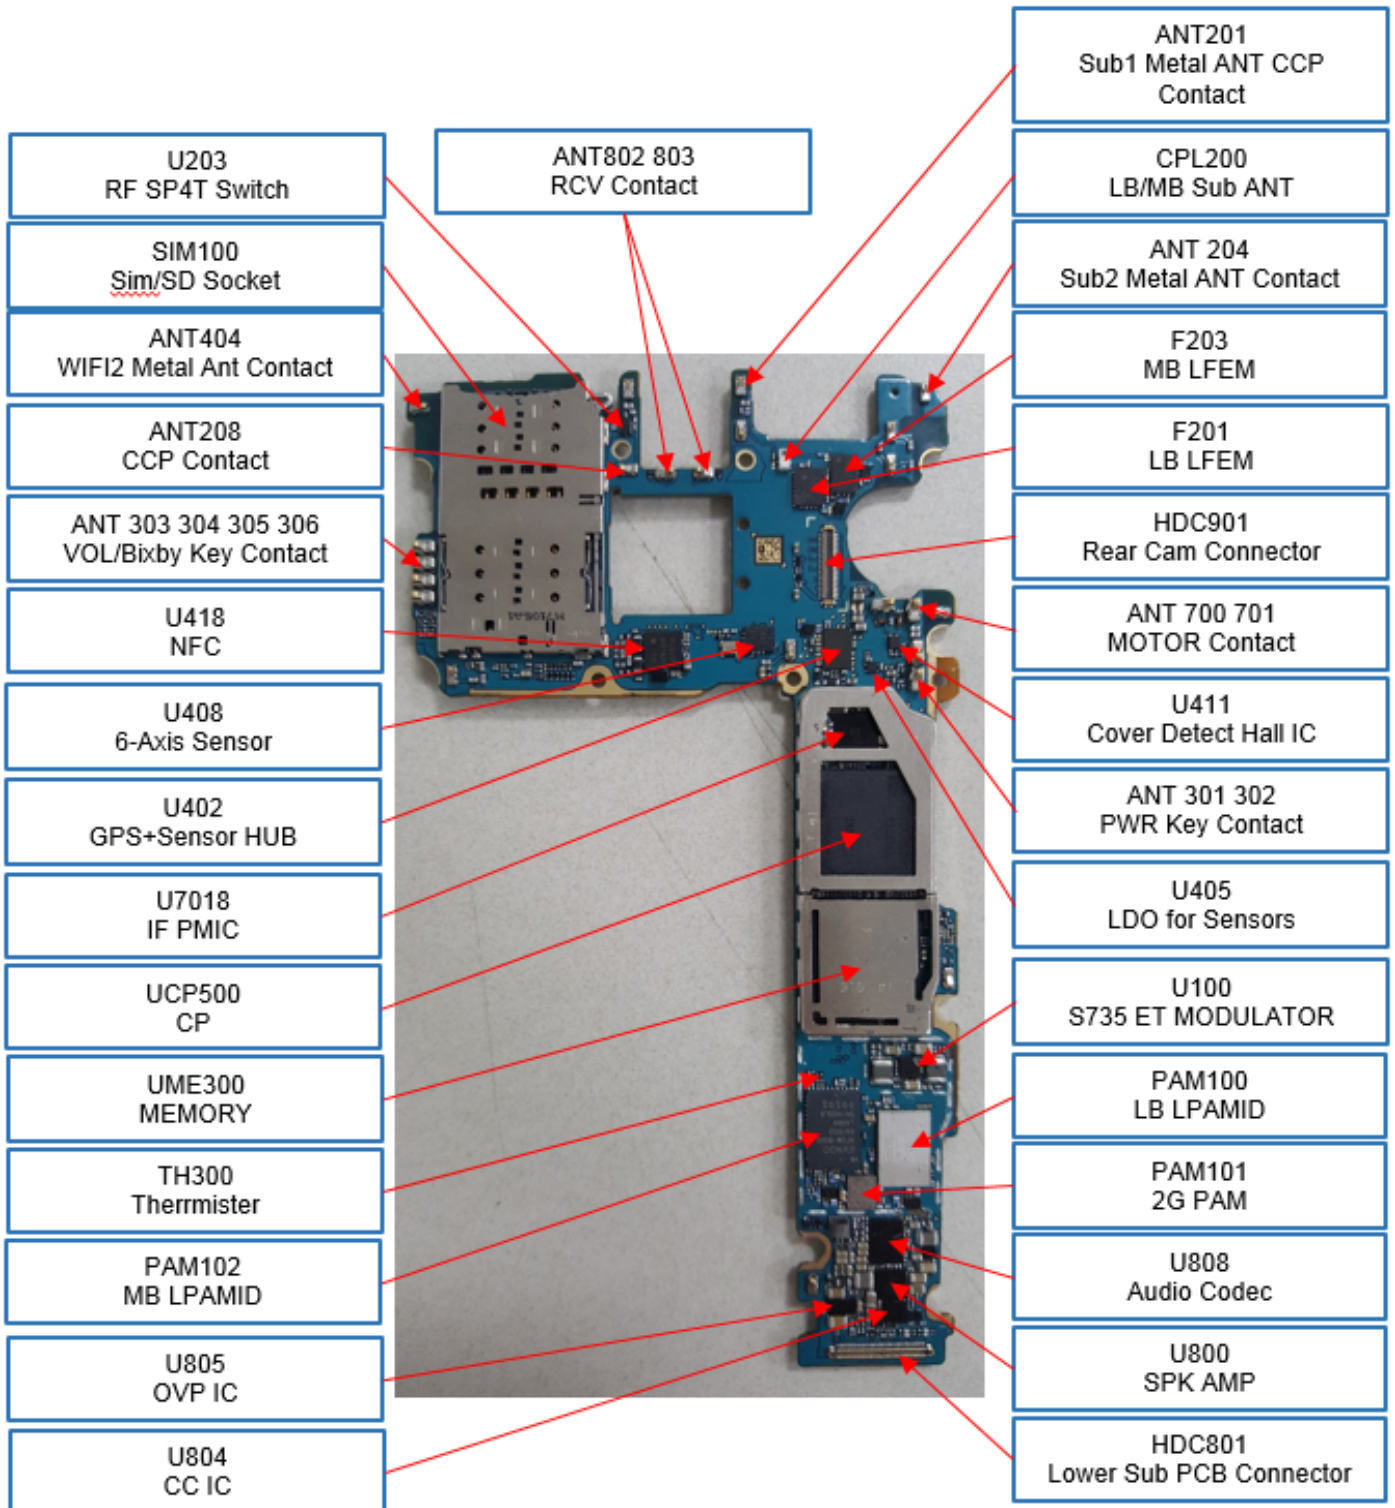



Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

SM-G950F REV0.7

Confidential

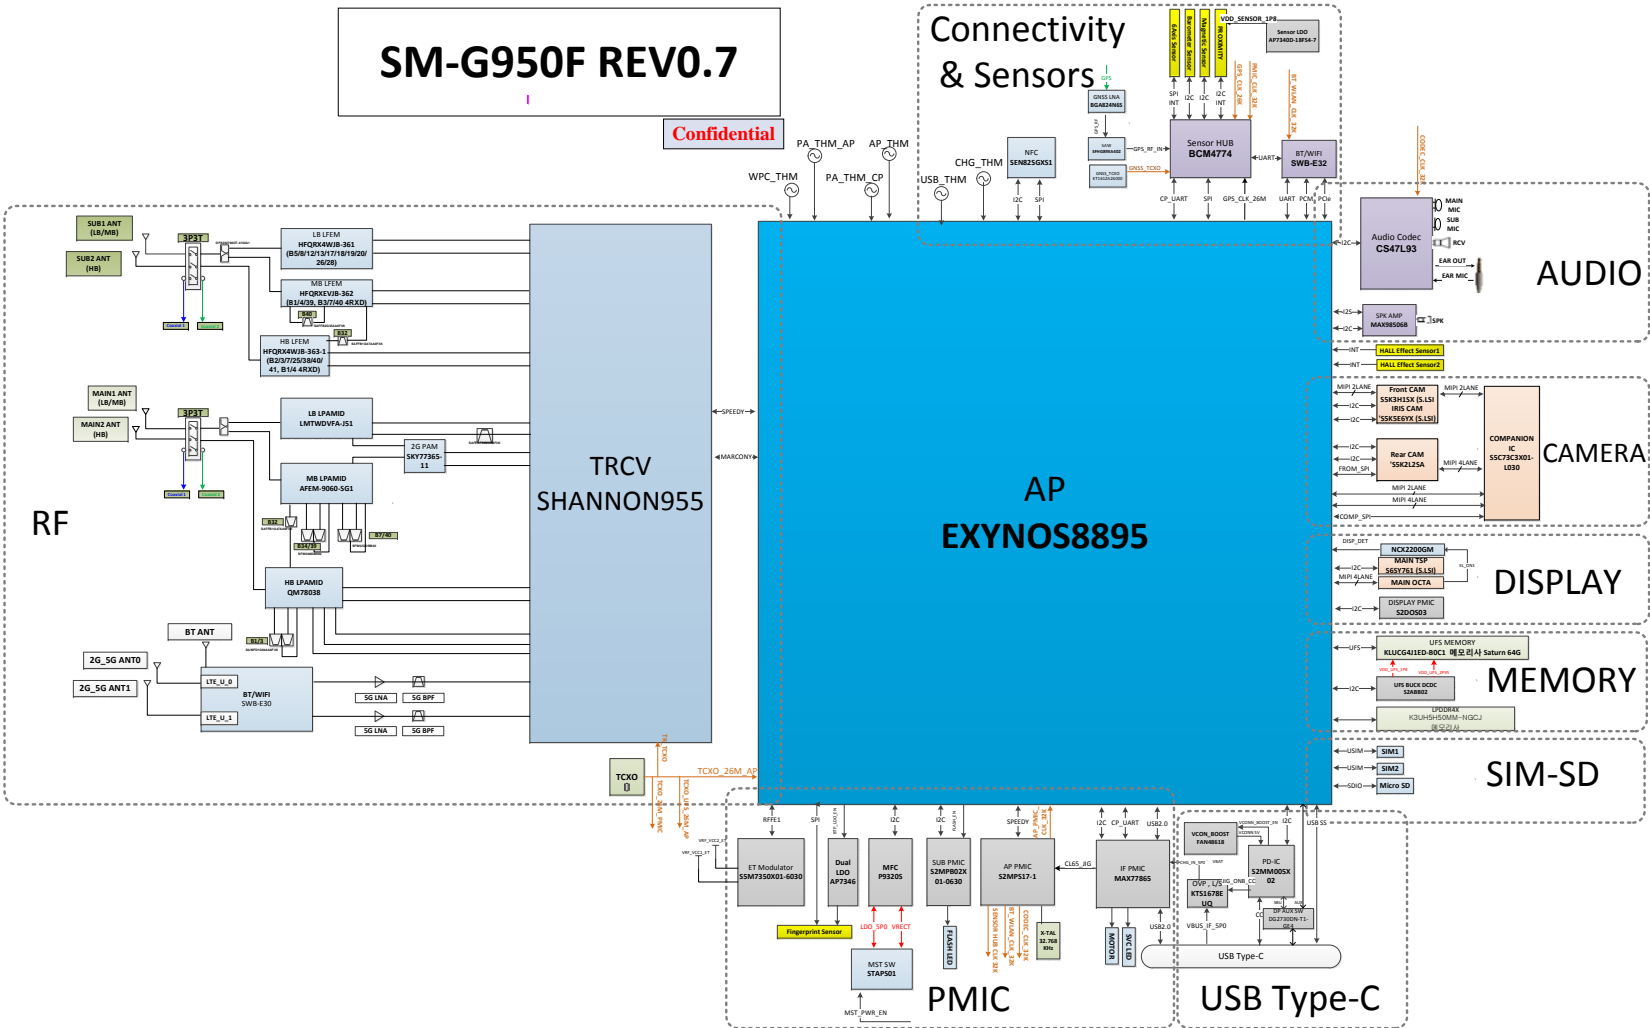

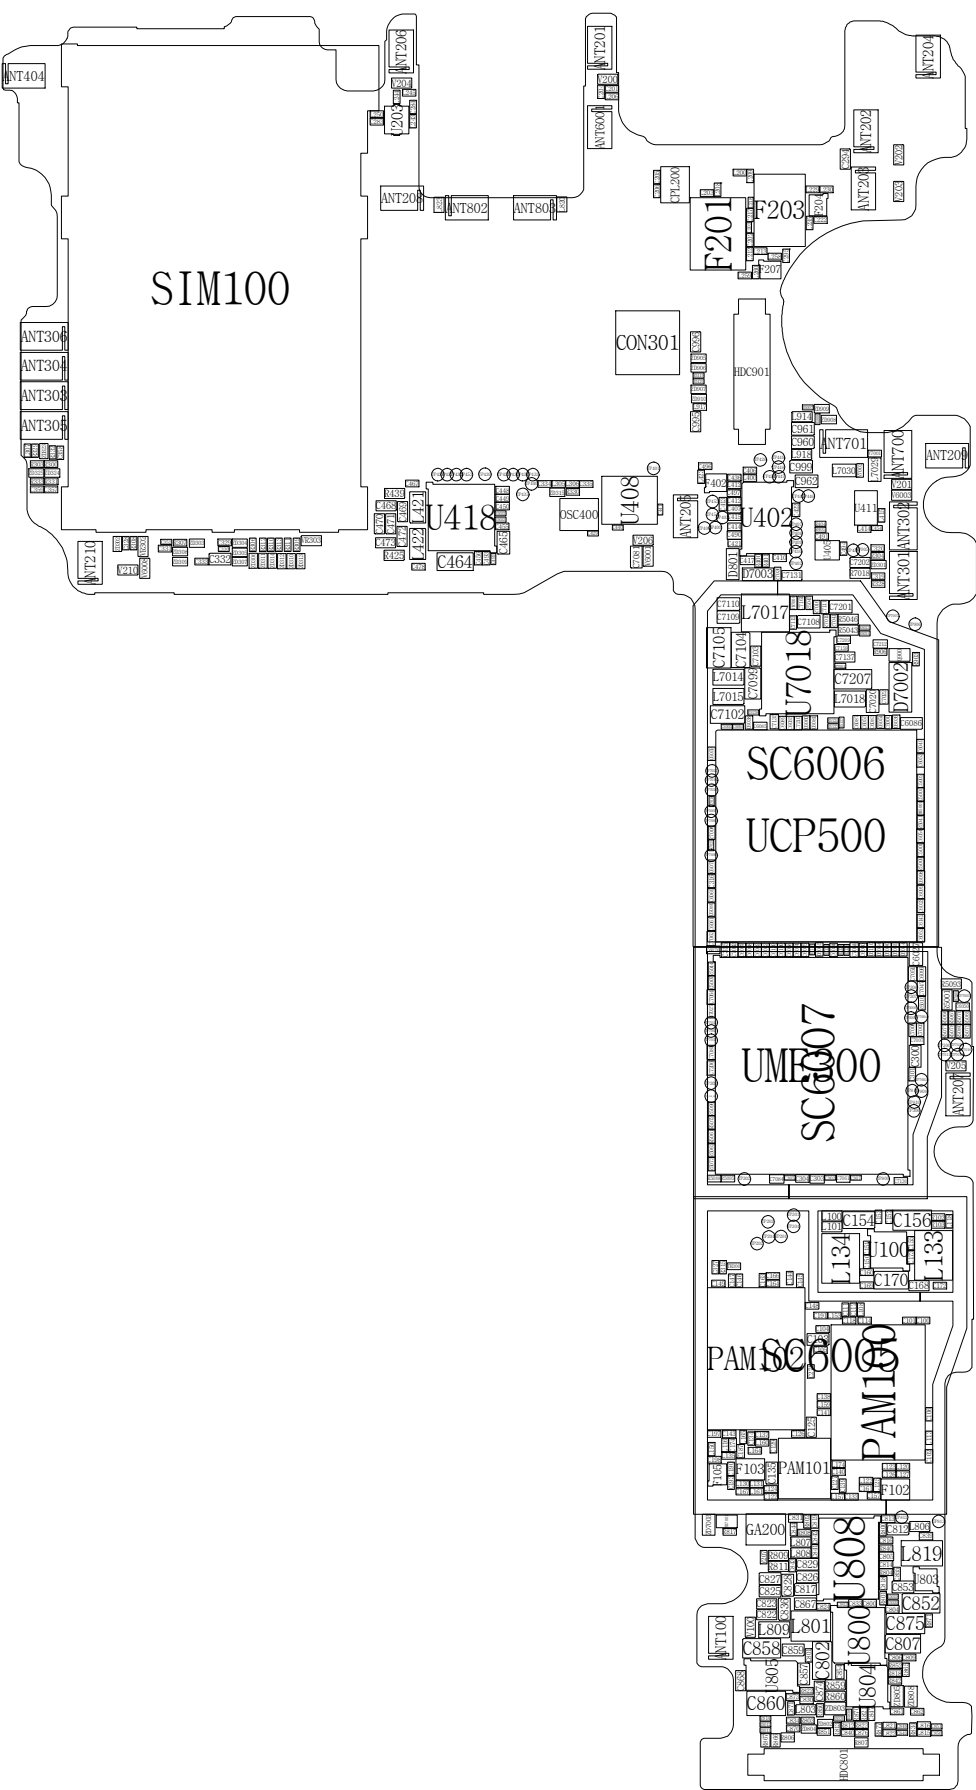



JTAG5000


JTAG5001

JTAG5002

JTAG5003

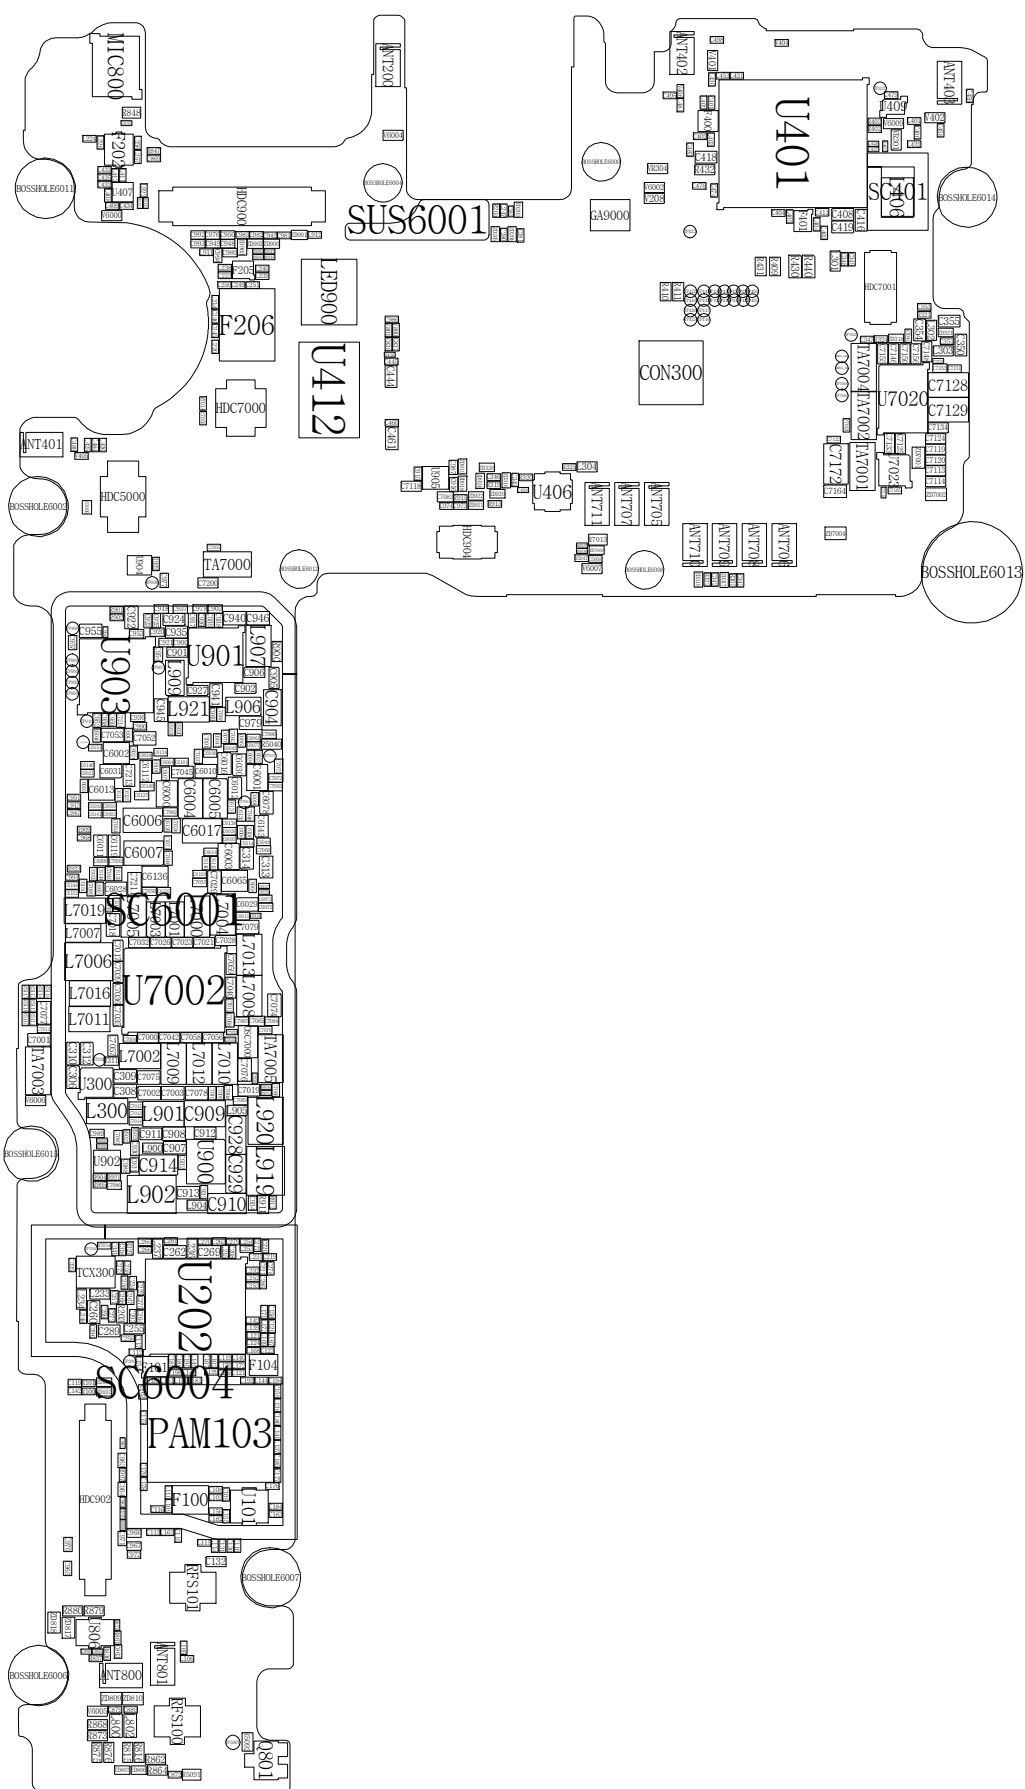

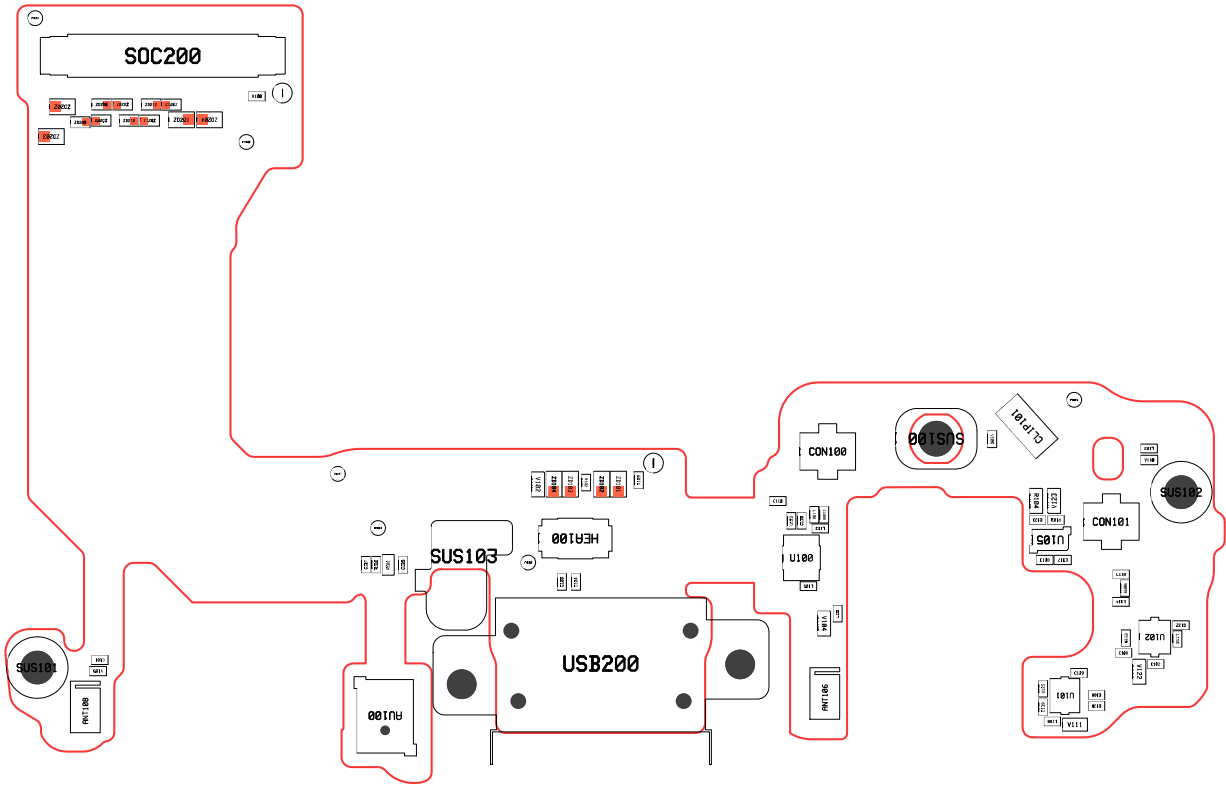

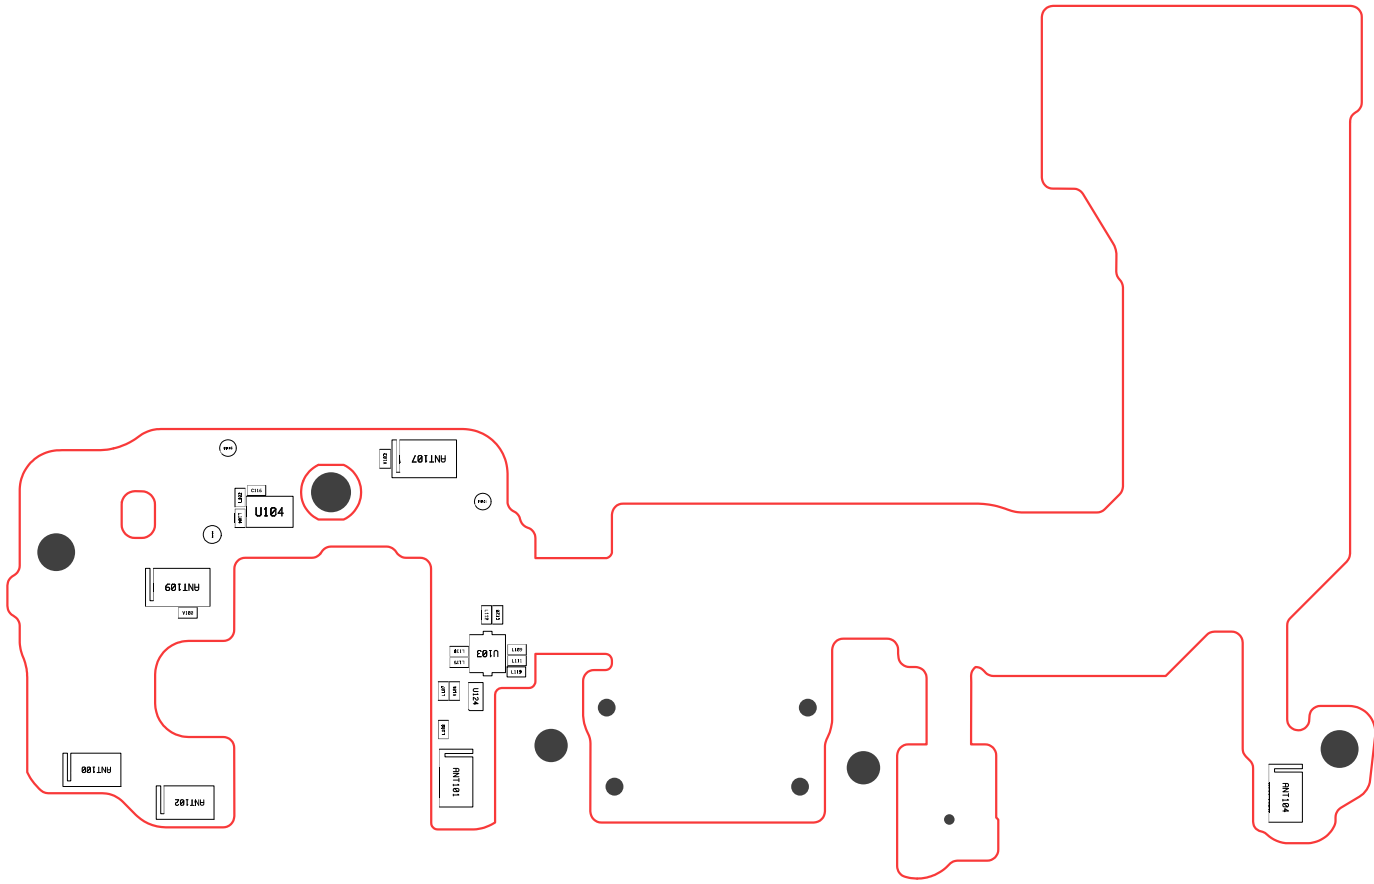

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.


	
<p>Oscilloscope</p>	<p>Digital Multimeter</p>
	
<p>Power Supply</p>	<p>+ driver, ESD Safe Tweezer</p>
	
<p>8960 & Spectrum Analyzer</p>	<p>Soldering iron</p>

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.


8. Level 3 Repair

8-4-1. Power On

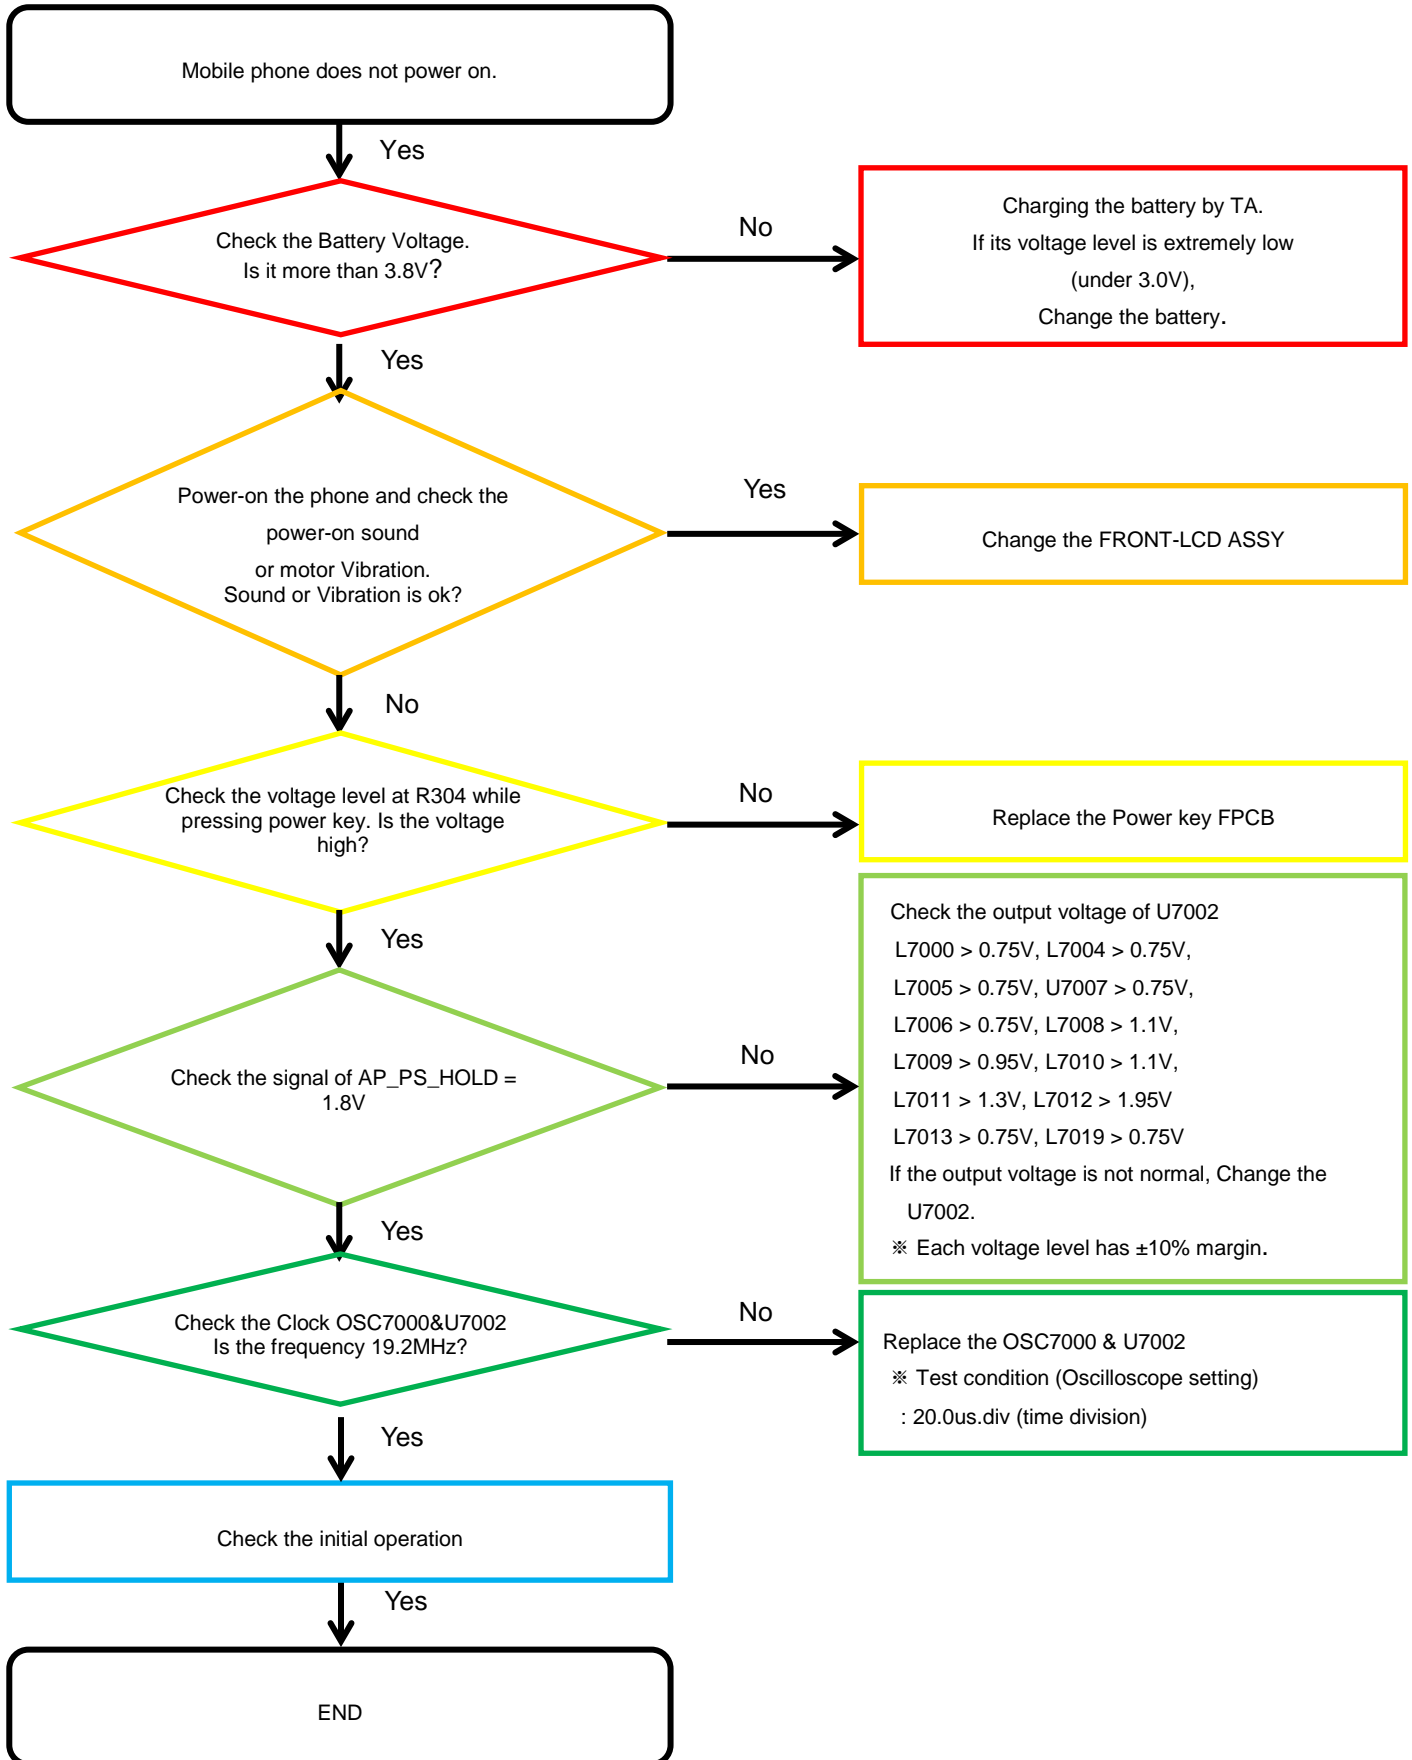


8. Level 3 Repair

8-4-2. Initial

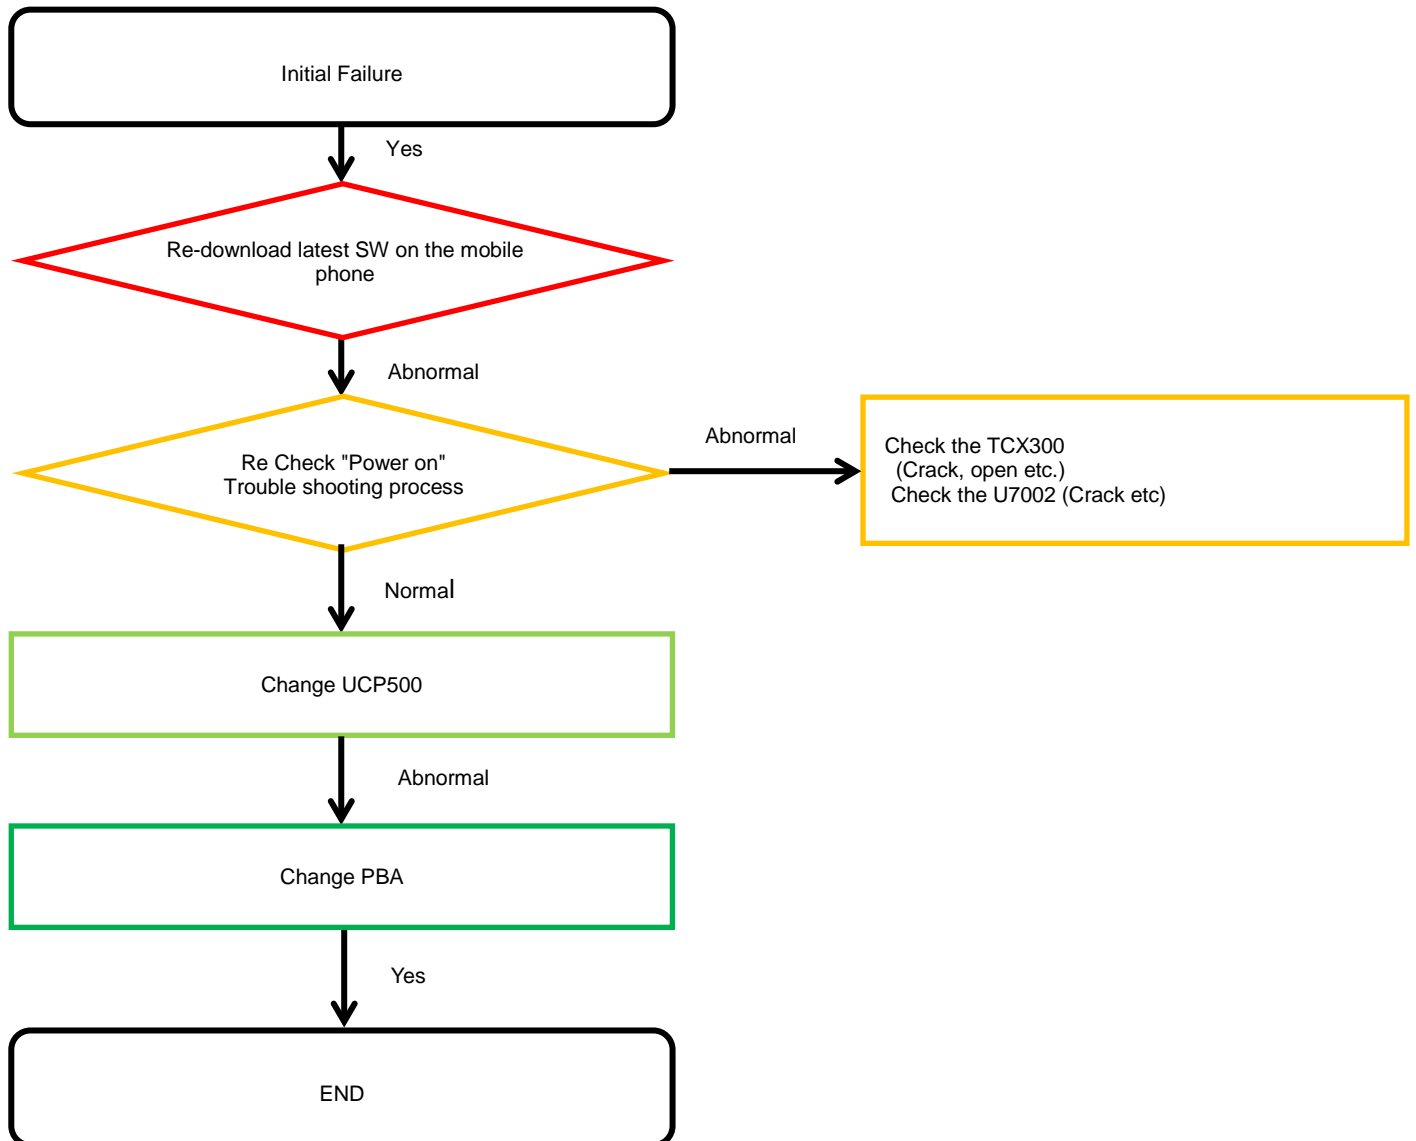


8. Level 3 Repair

8-4-3. No Service

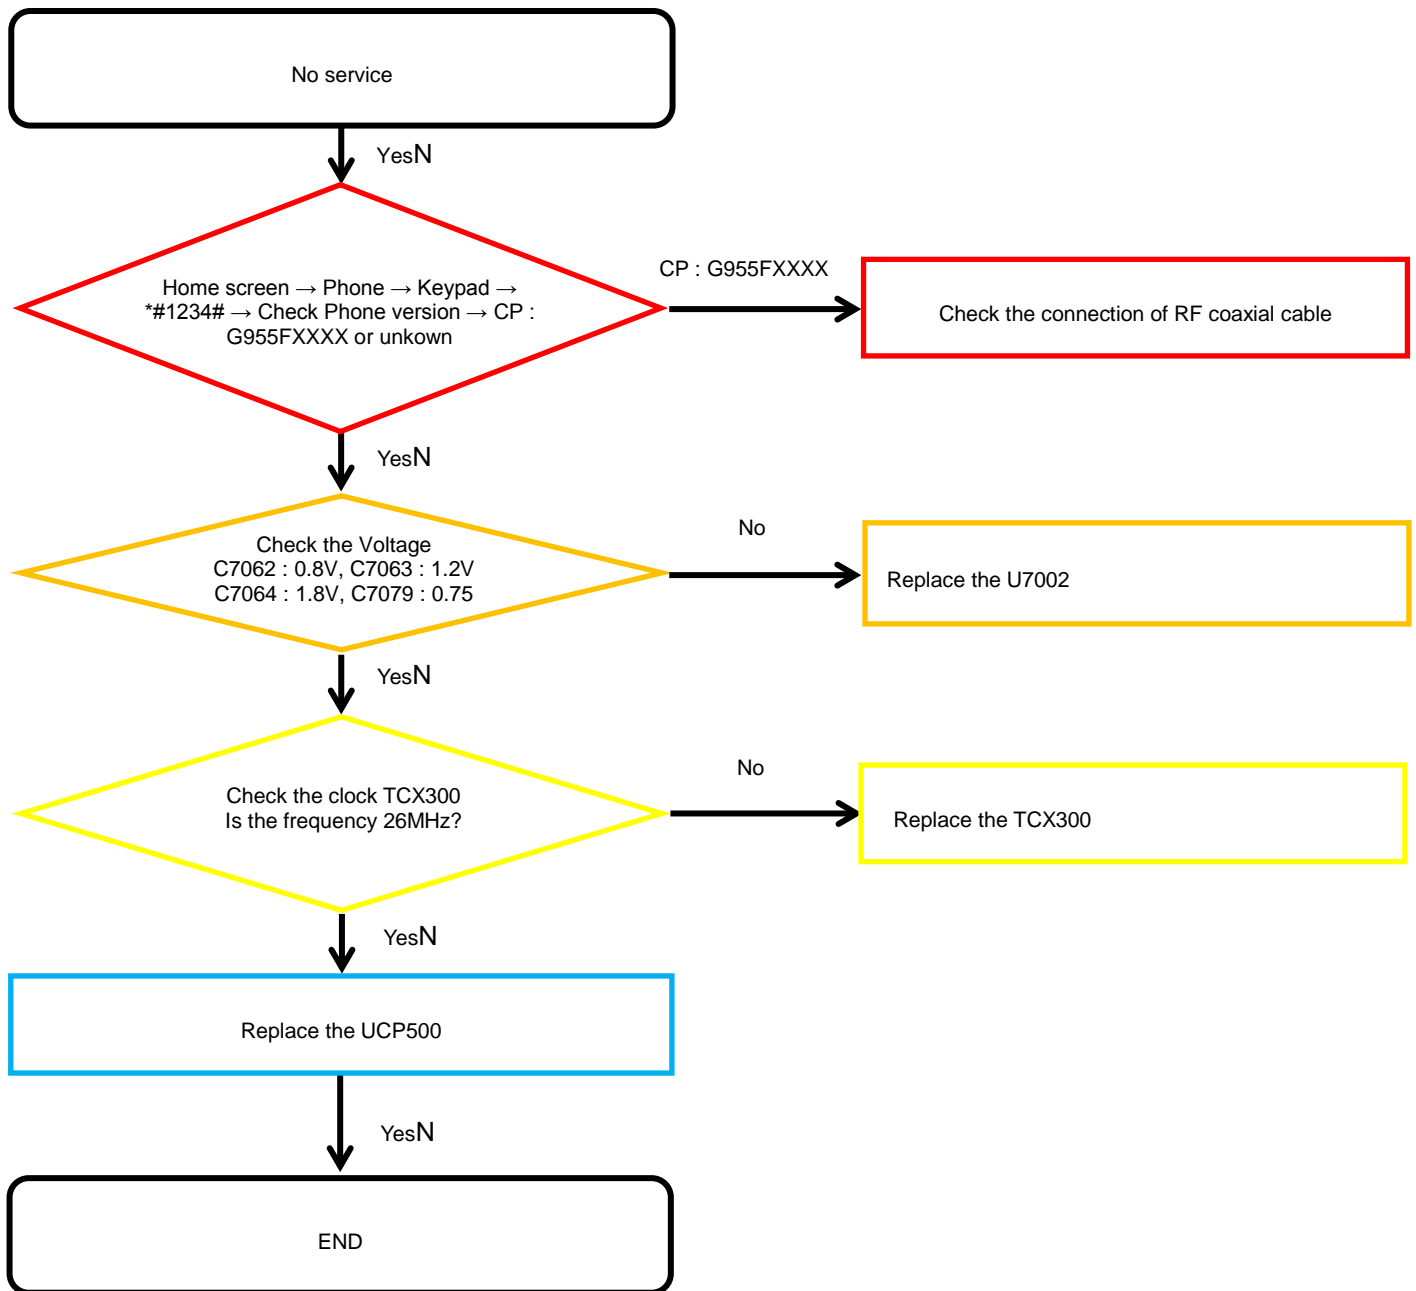


8. Level 3 Repair

8-4-3. SIM Part

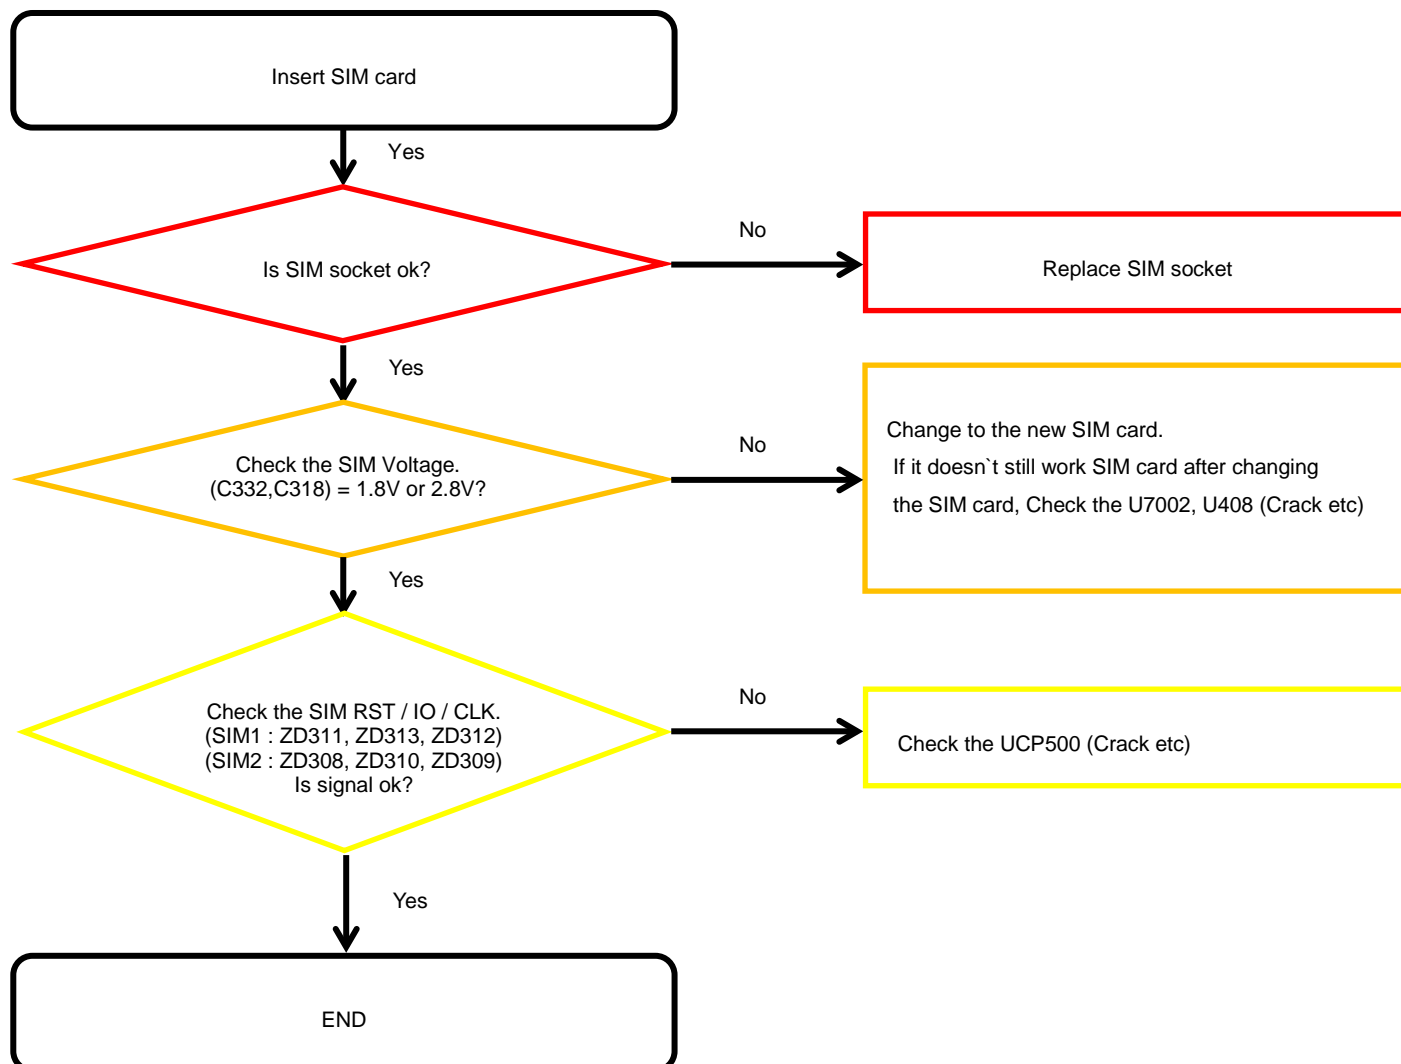


8. Level 3 Repair

8-4-4. T-Flash Part

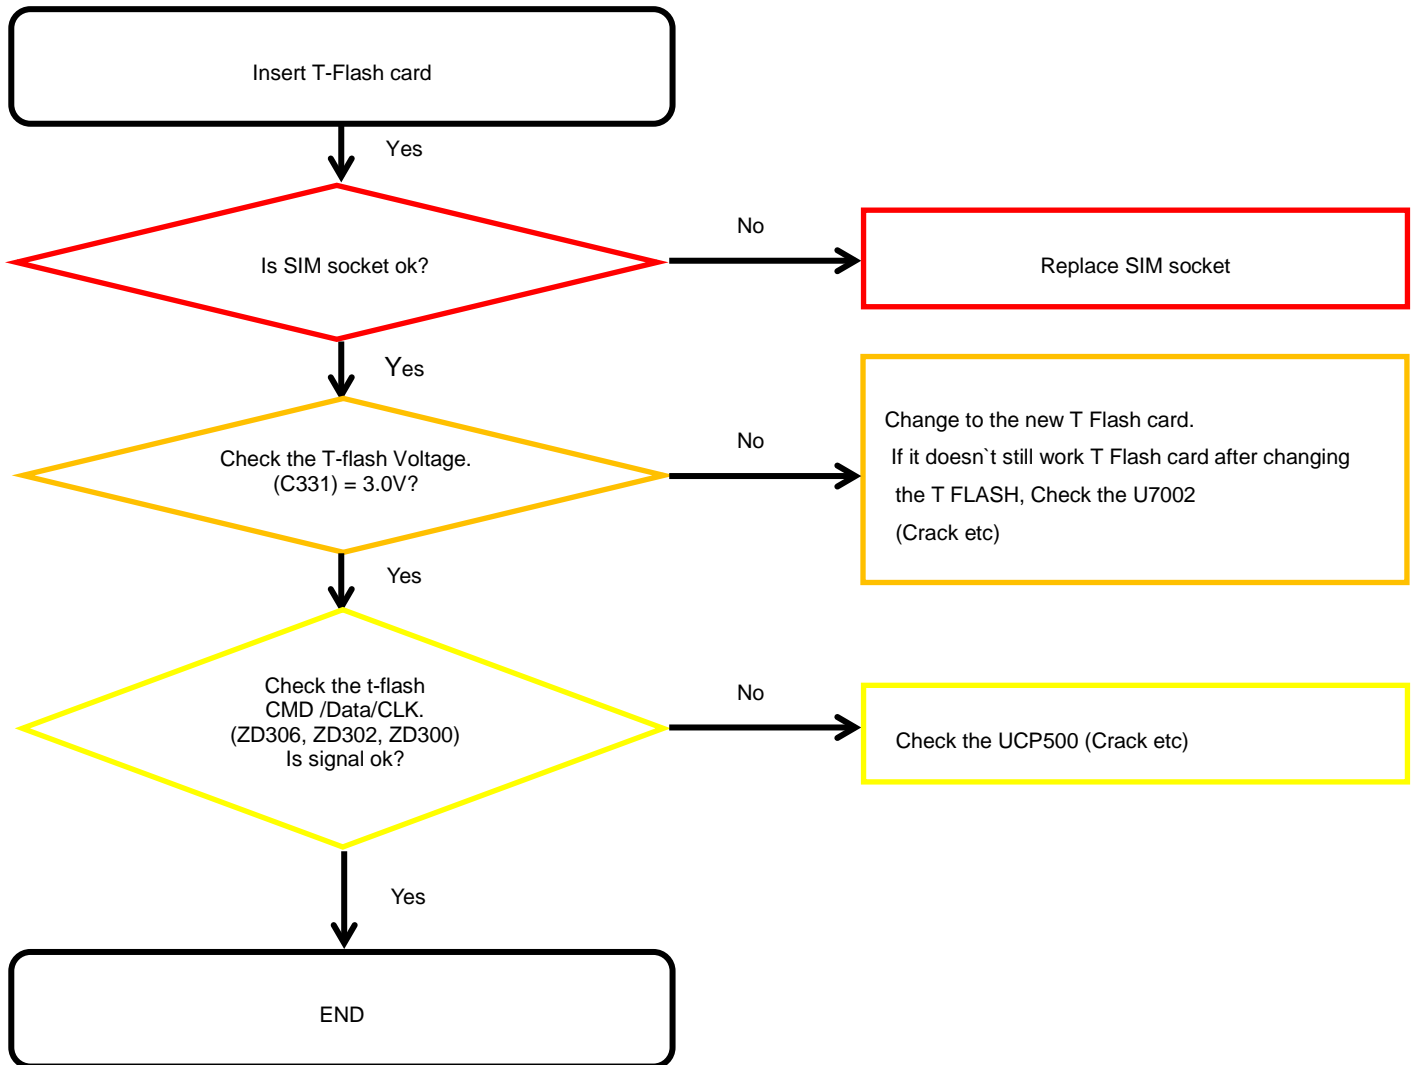


8. Level 3 Repair

8-4-5-1. Cable Charging Part (Normal/Fast)

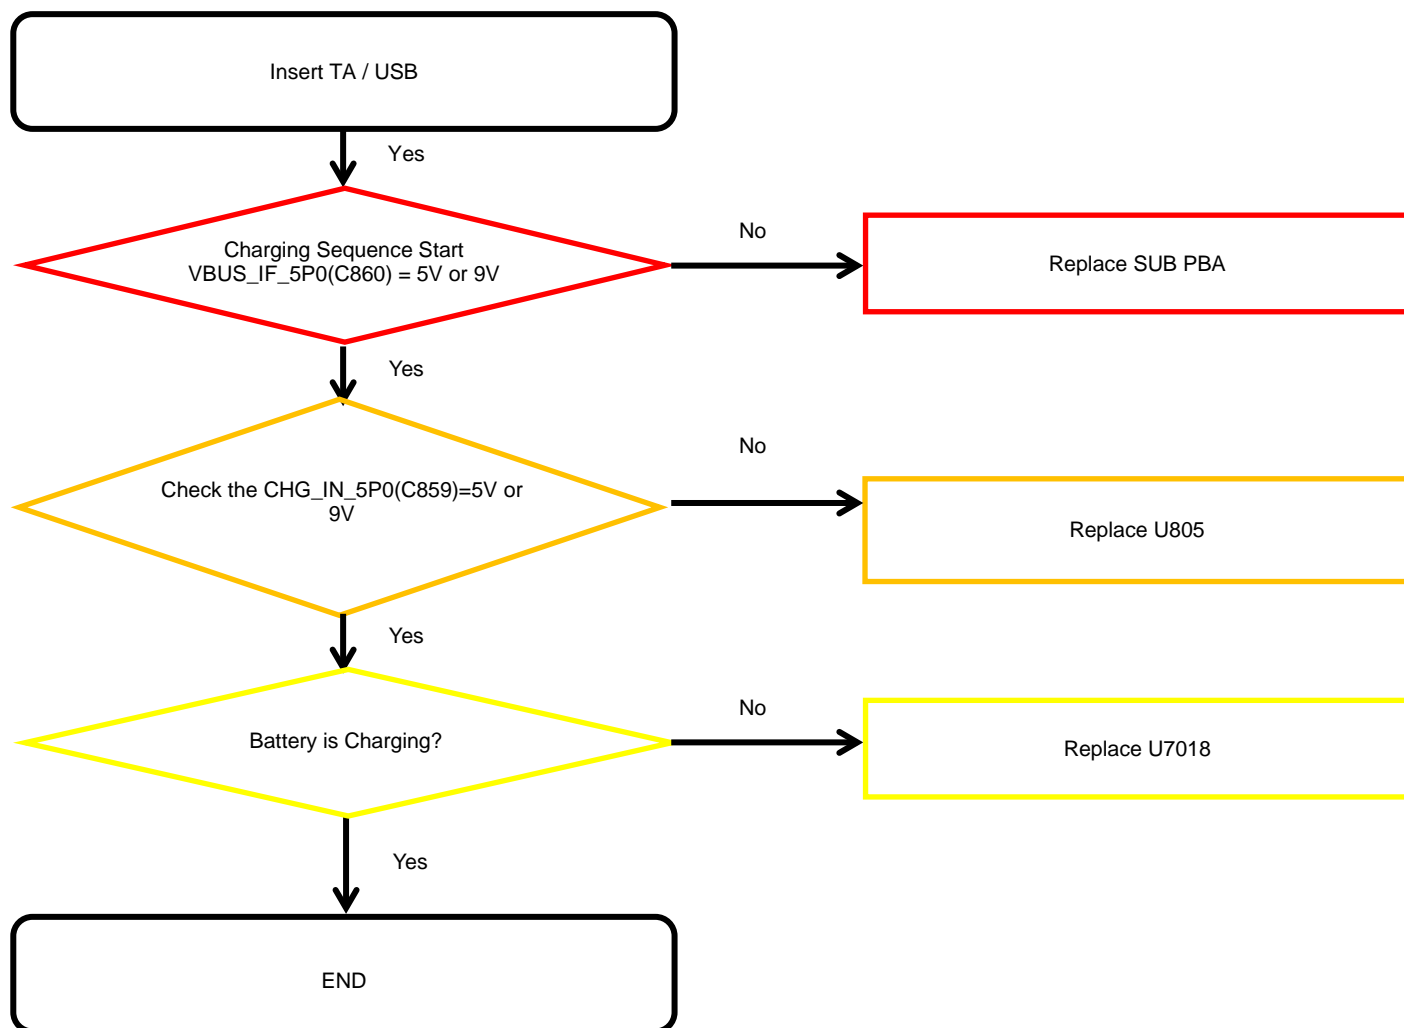


8. Level 3 Repair

8-4-5-2. Wireless Charging Part (Normal/Fast)

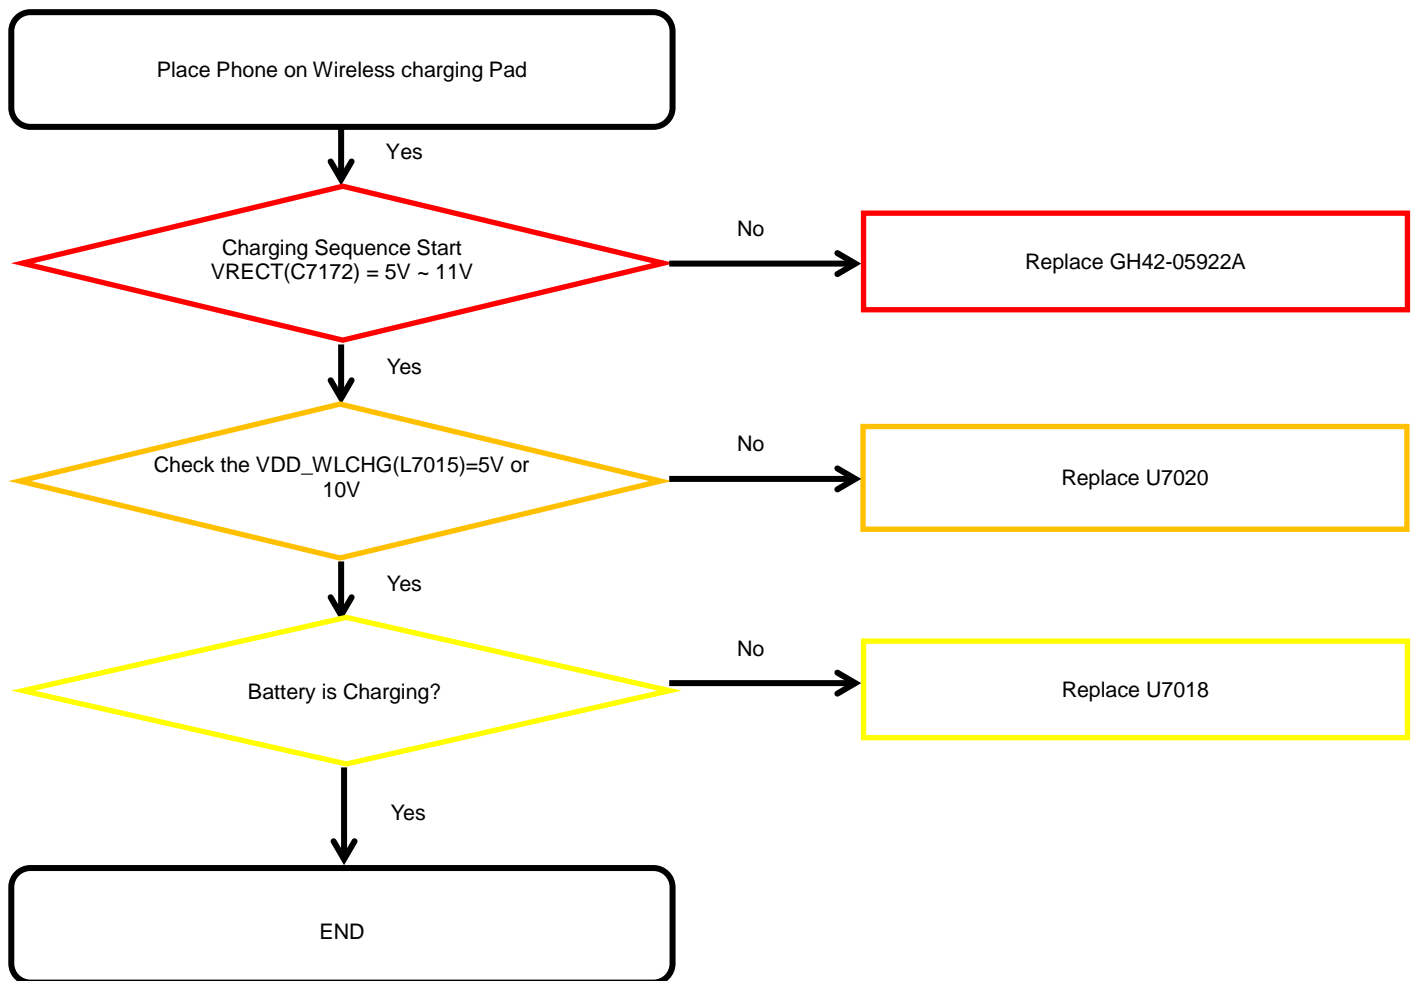


8. Level 3 Repair

8-4-6. OTG

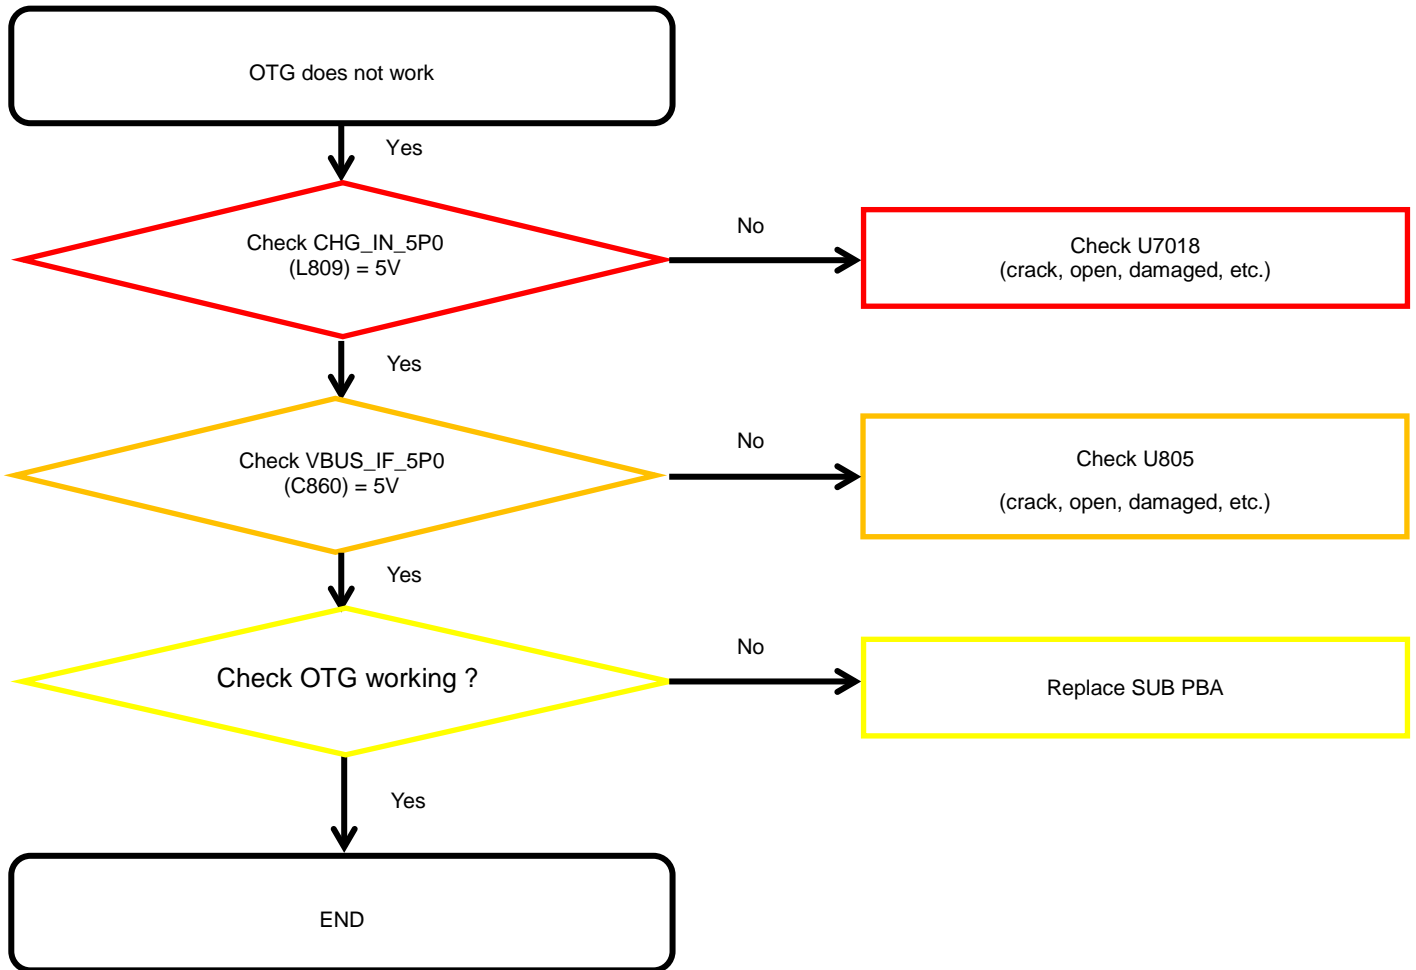


8. Level 3 Repair

8-4-7-1. Sensor Hub

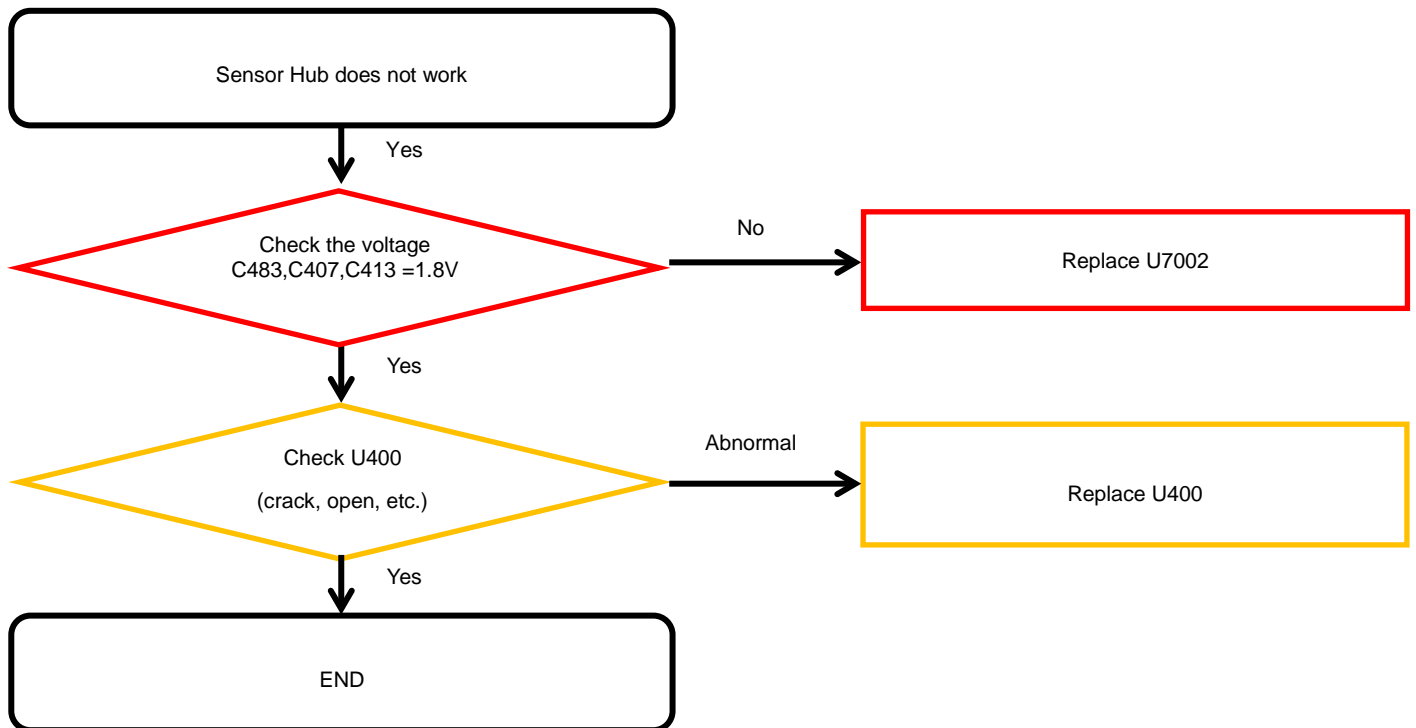


8. Level 3 Repair

8-4-7-2. Magnetic Sensor

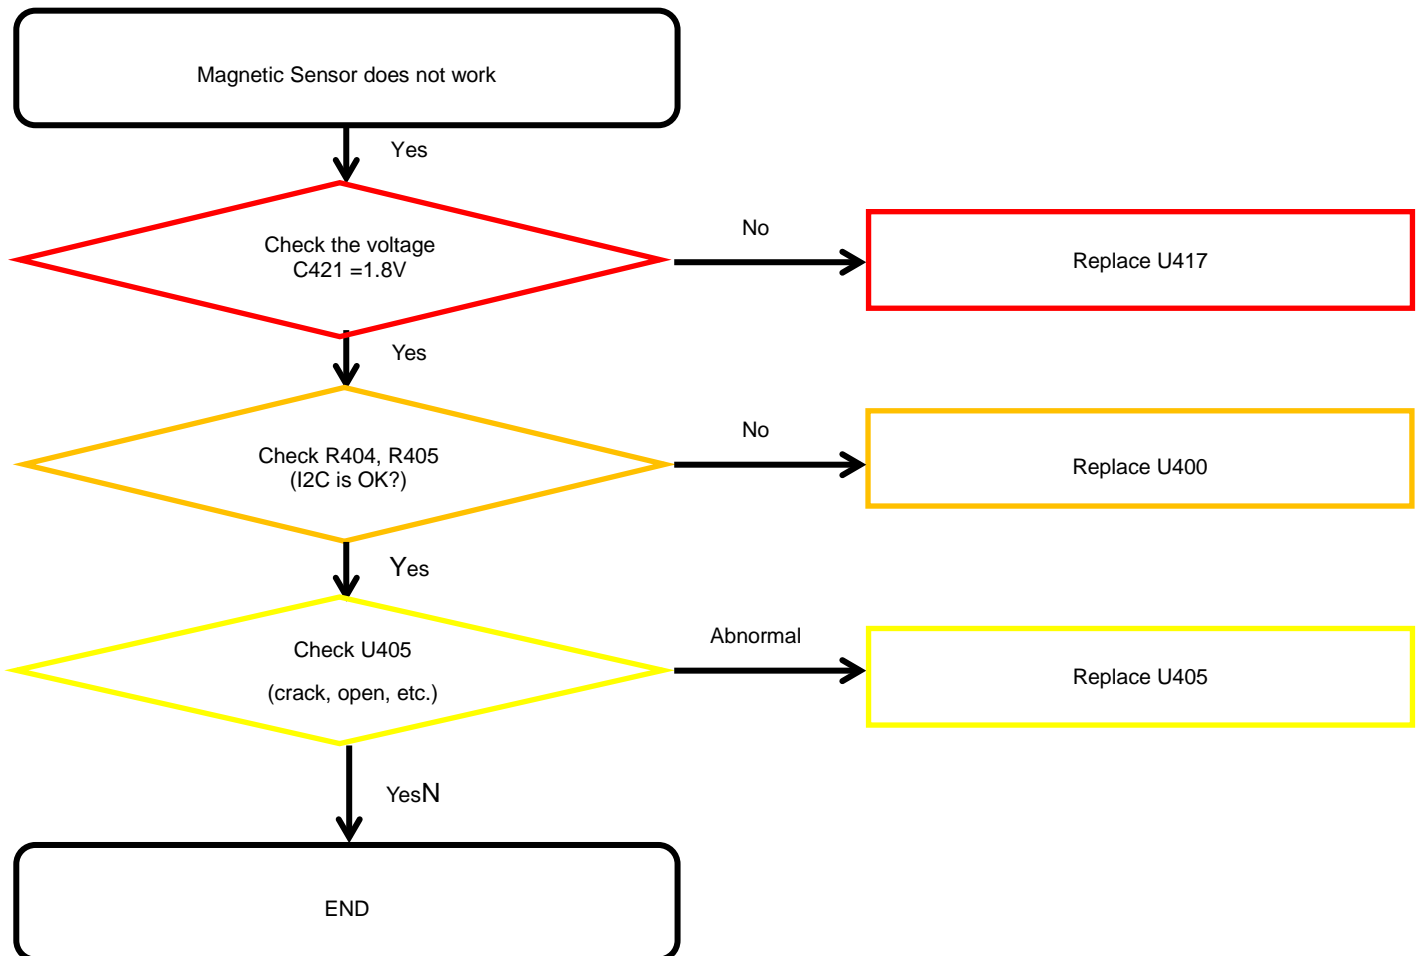


8. Level 3 Repair

8-4-7-3. 6Axis Sensor

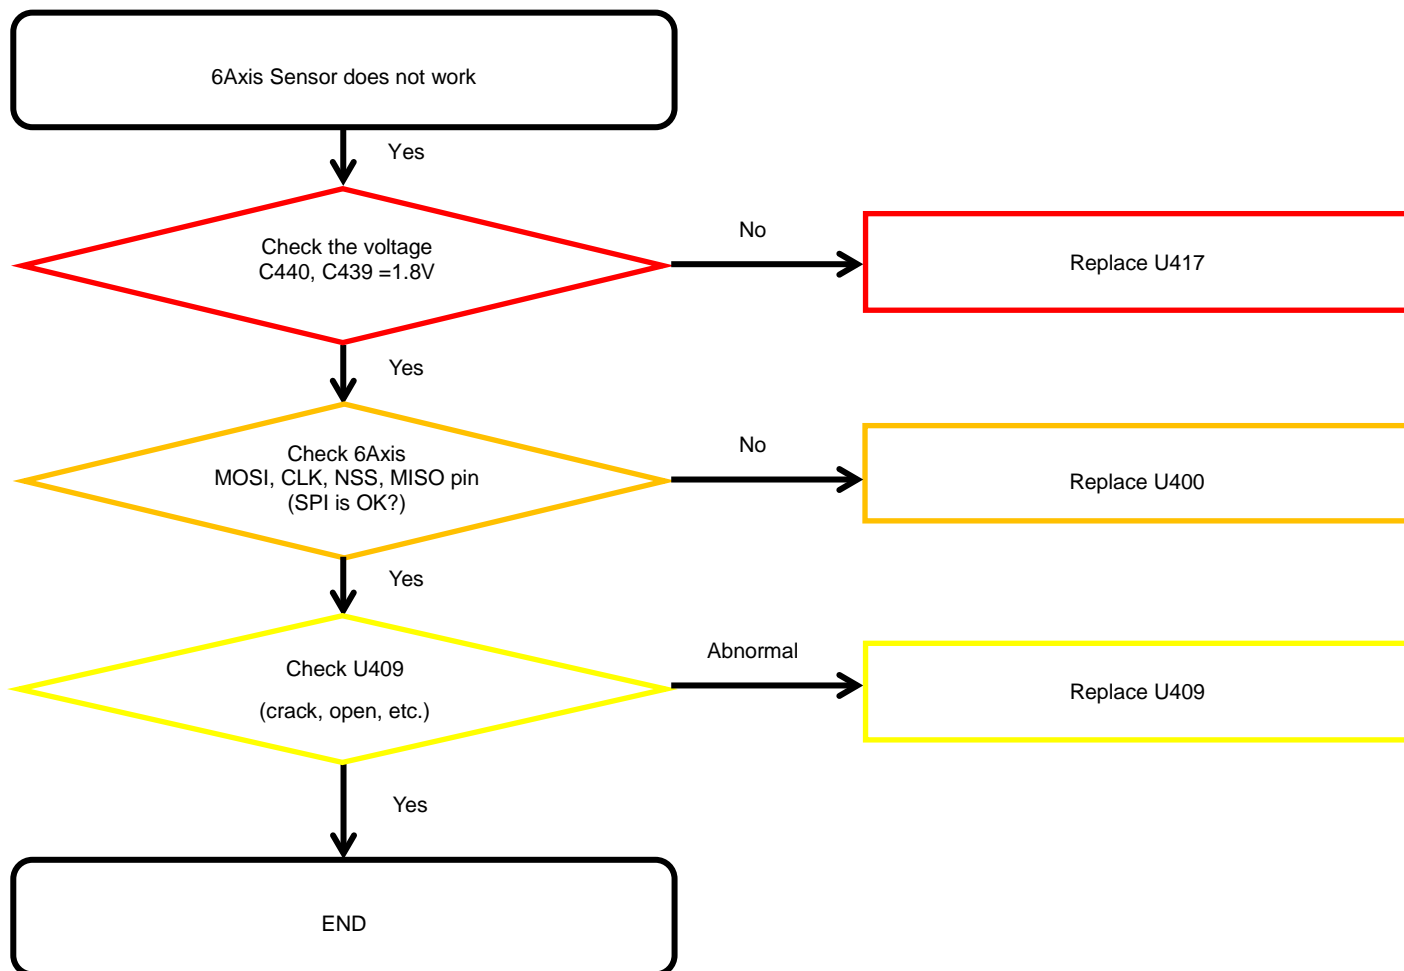


8. Level 3 Repair

8-4-7-4. Barometer sensor

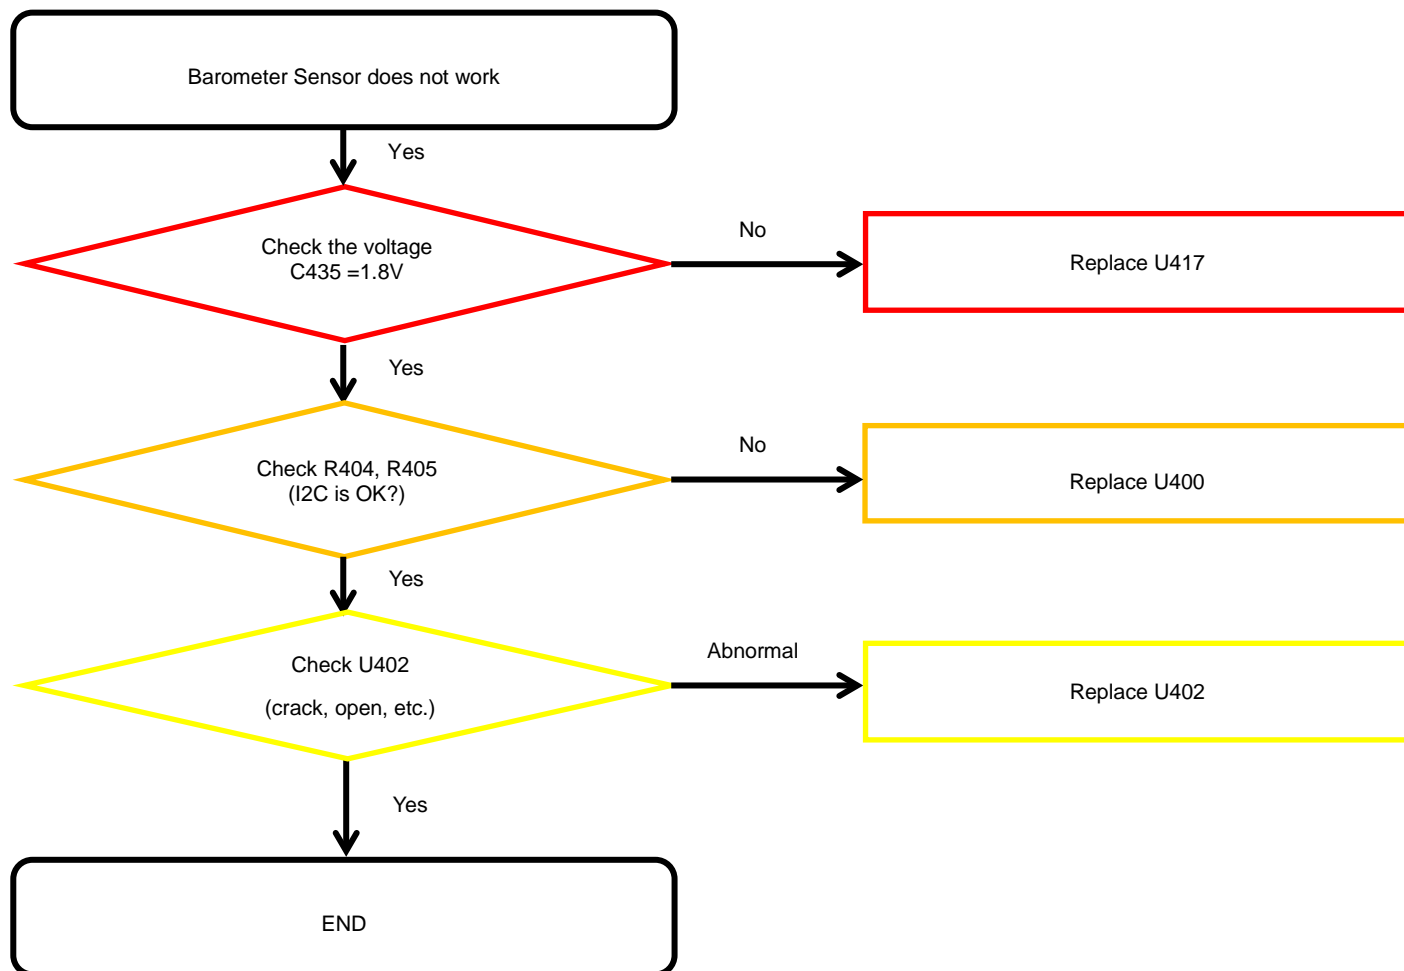


8. Level 3 Repair

8-4-7-5. Proximity + RGB Light sensor

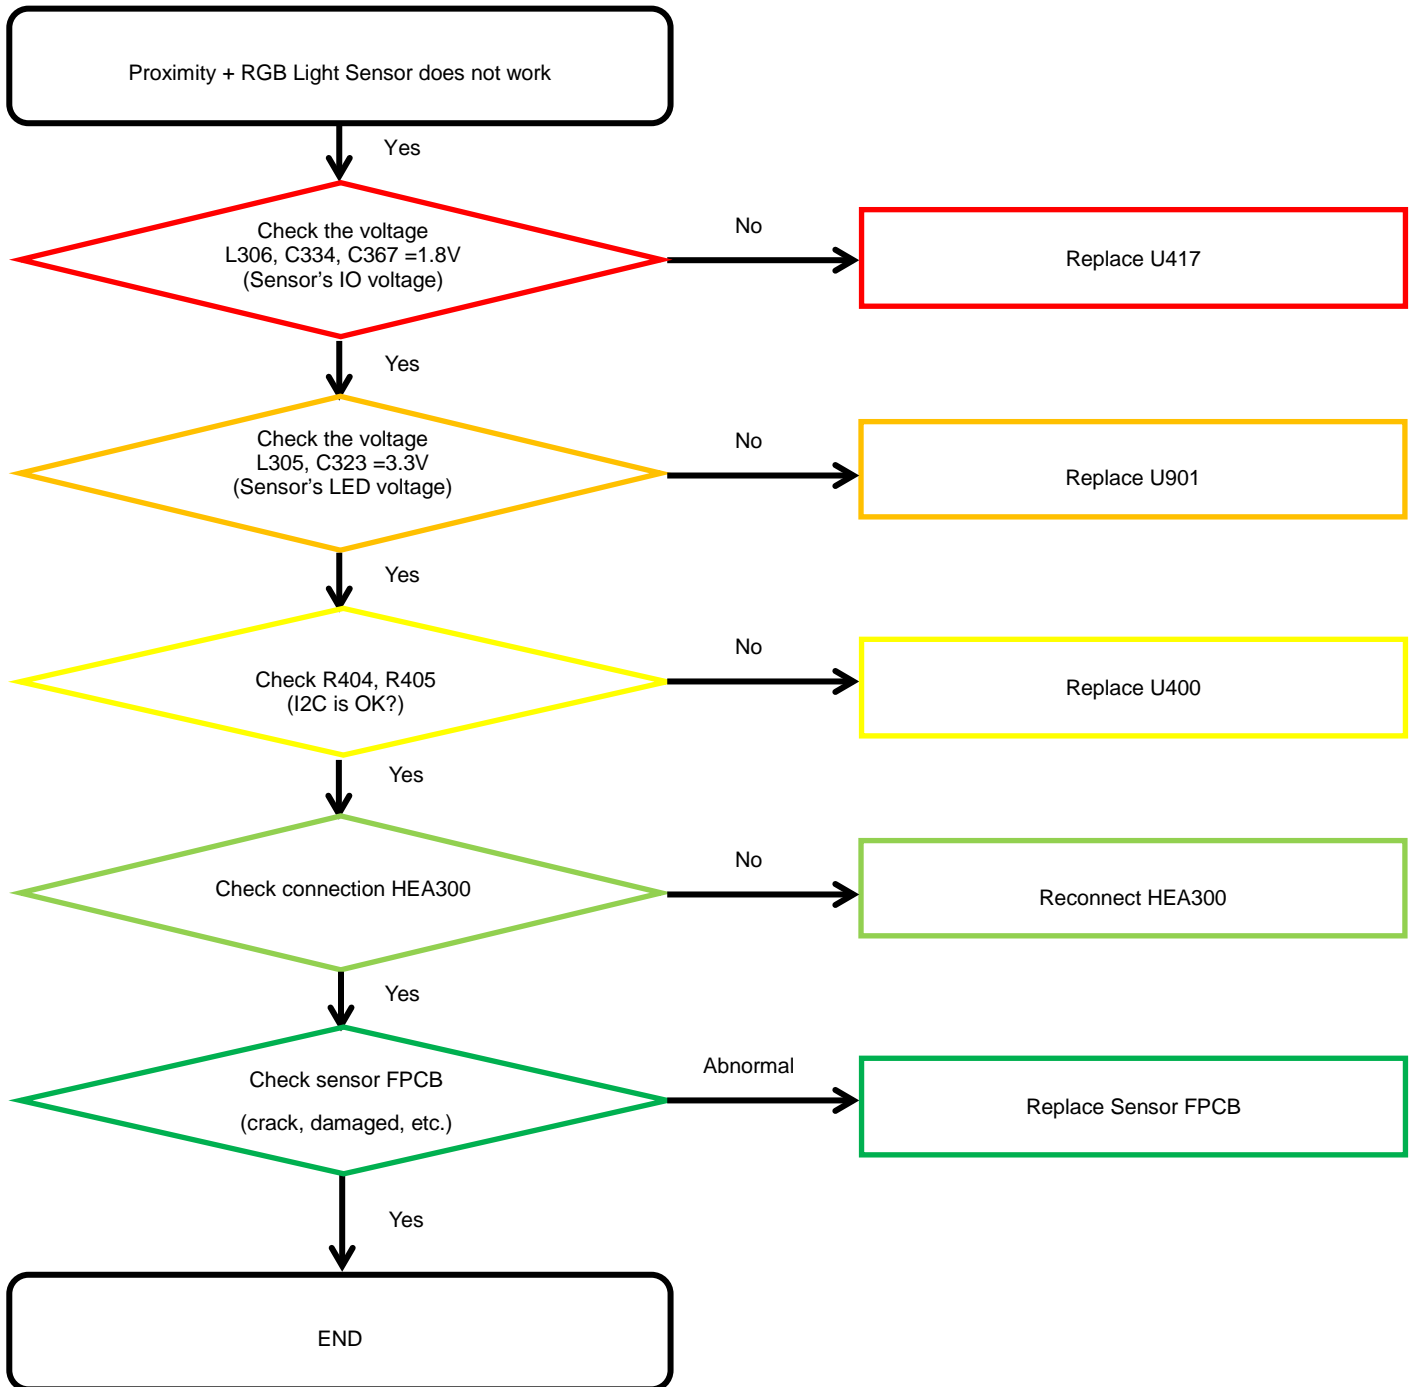



8. Level 3 Repair

8-4-7-6. HRM Sensor

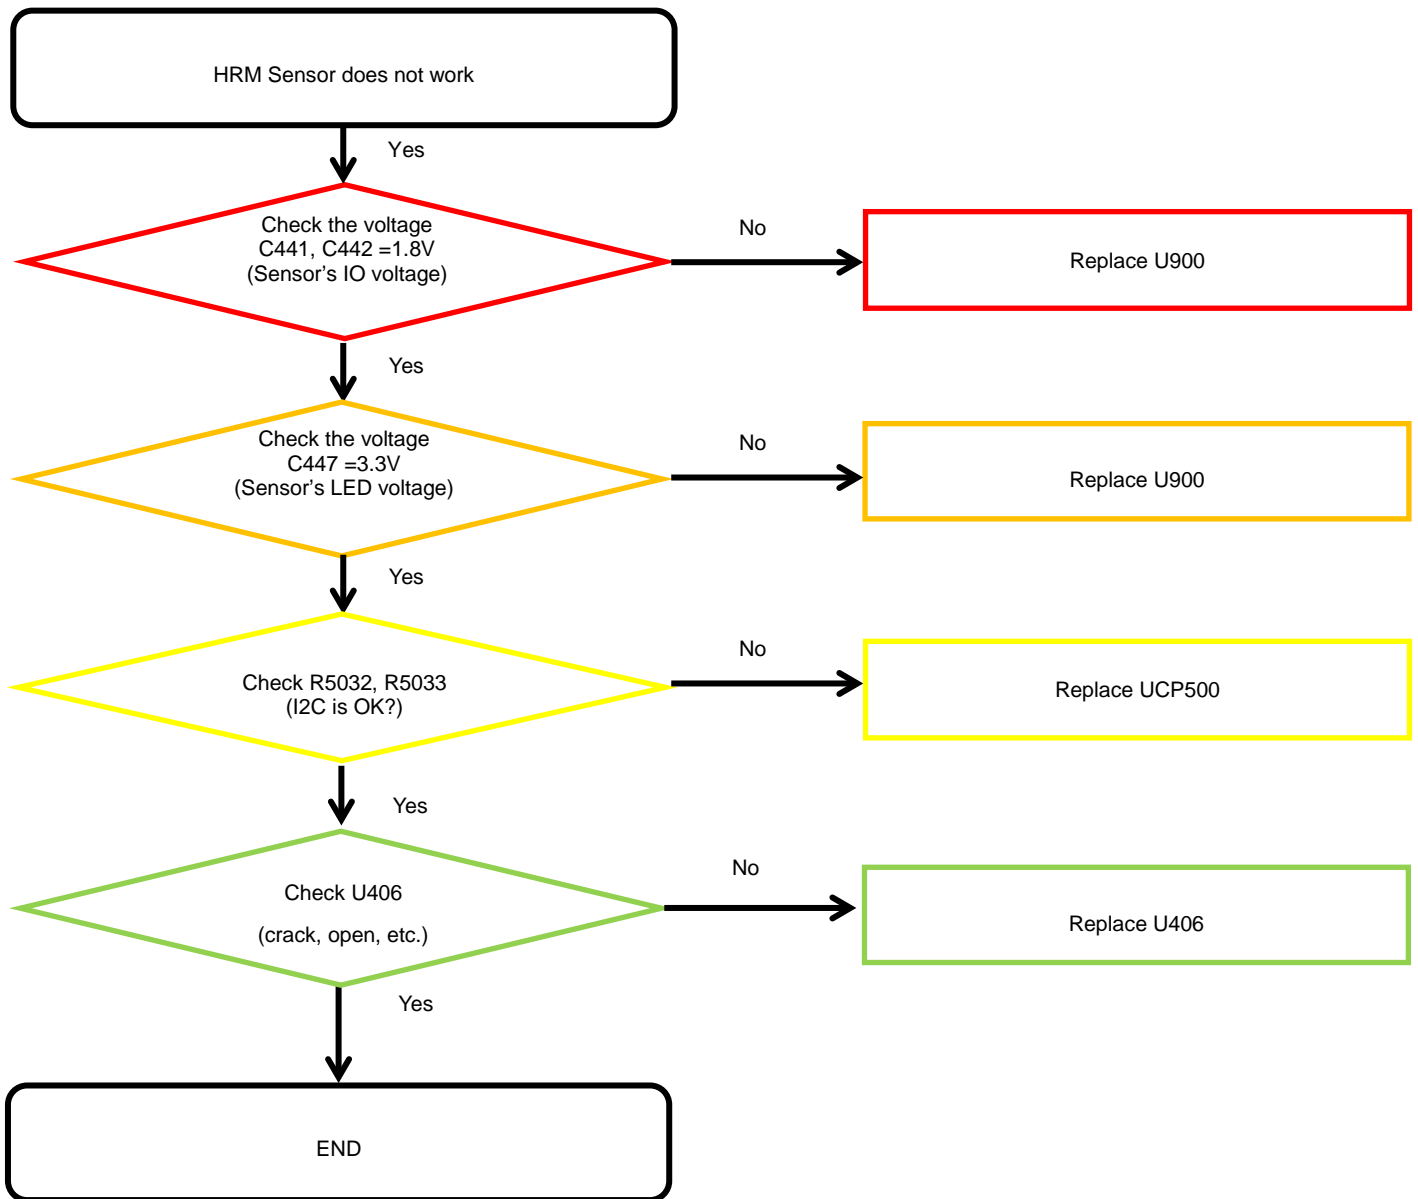


8. Level 3 Repair

8-4-7-7. Hall Sensor

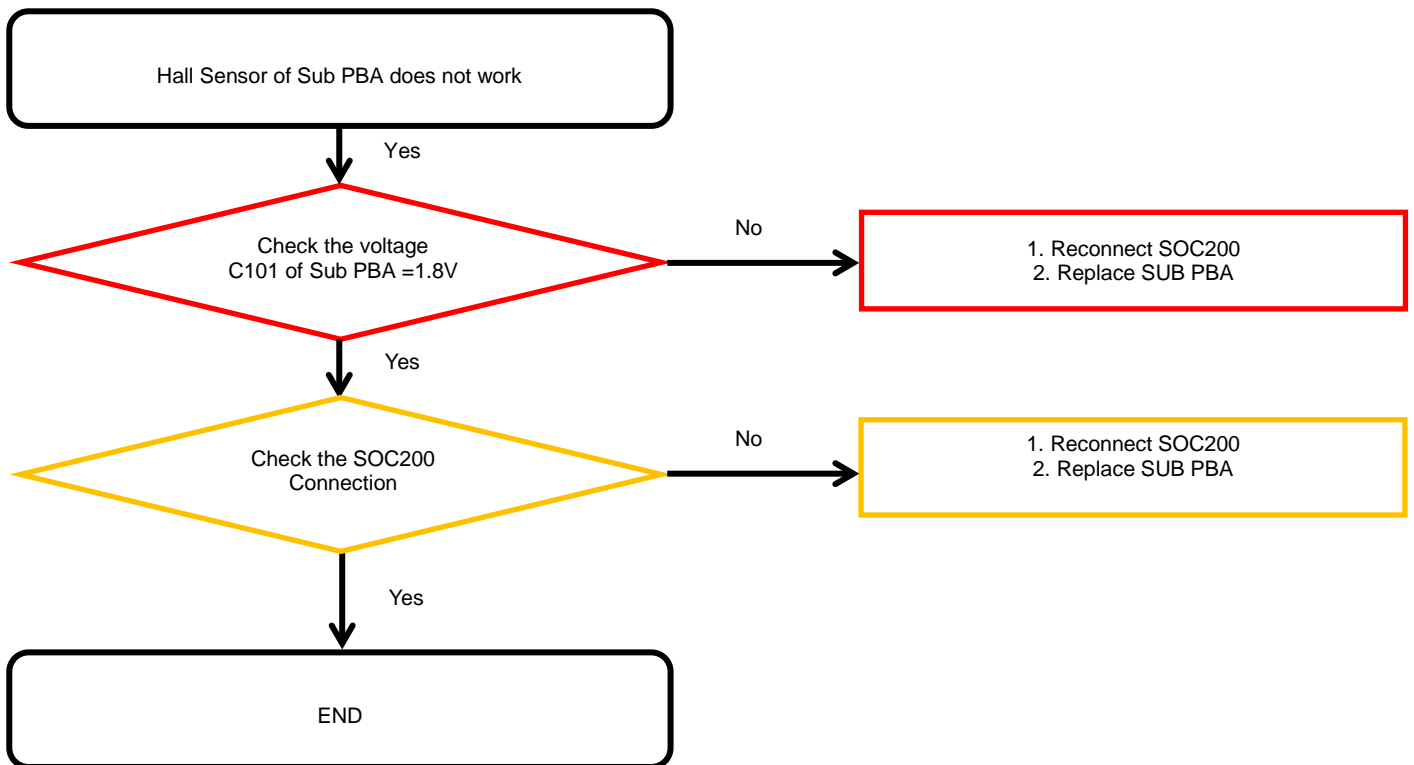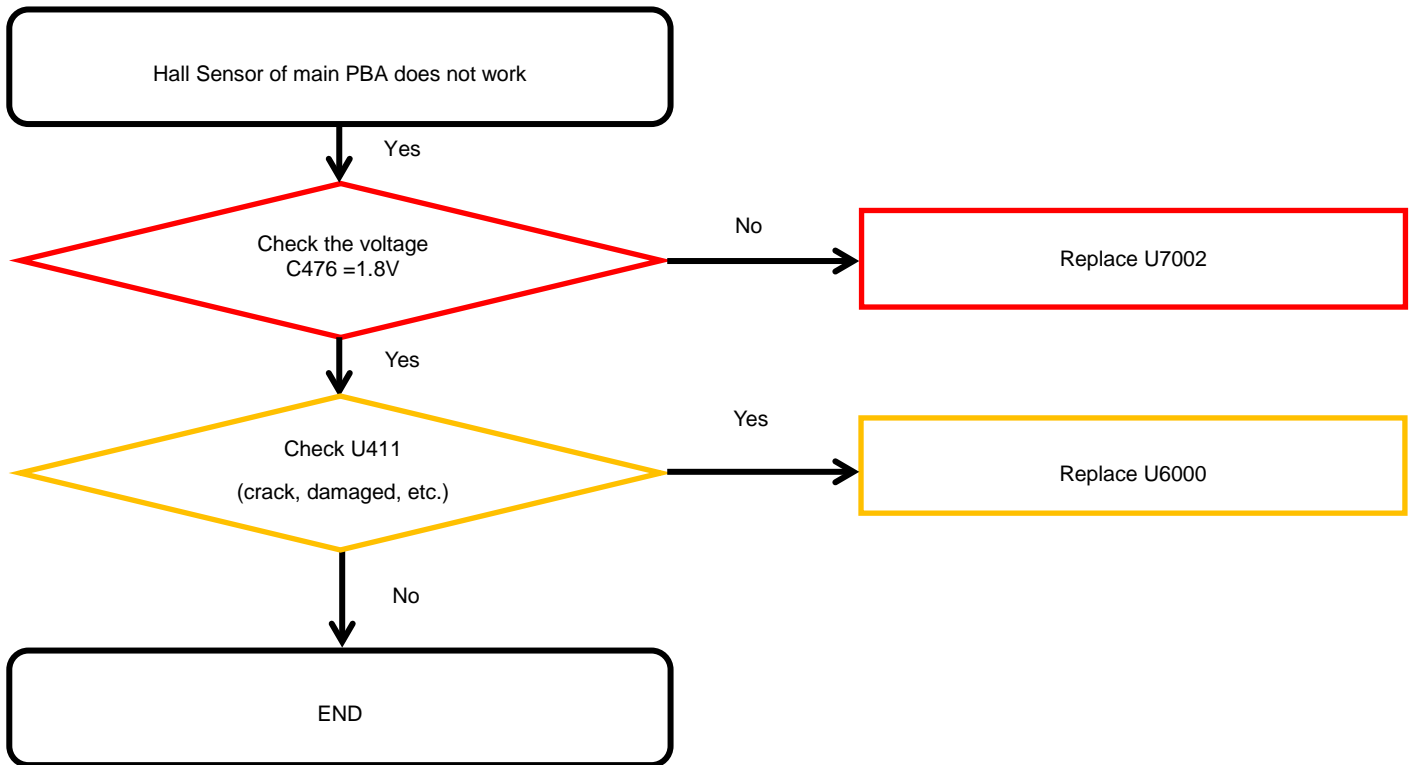


8. Level 3 Repair

8-4-8-1. Microphone Part - Main MIC

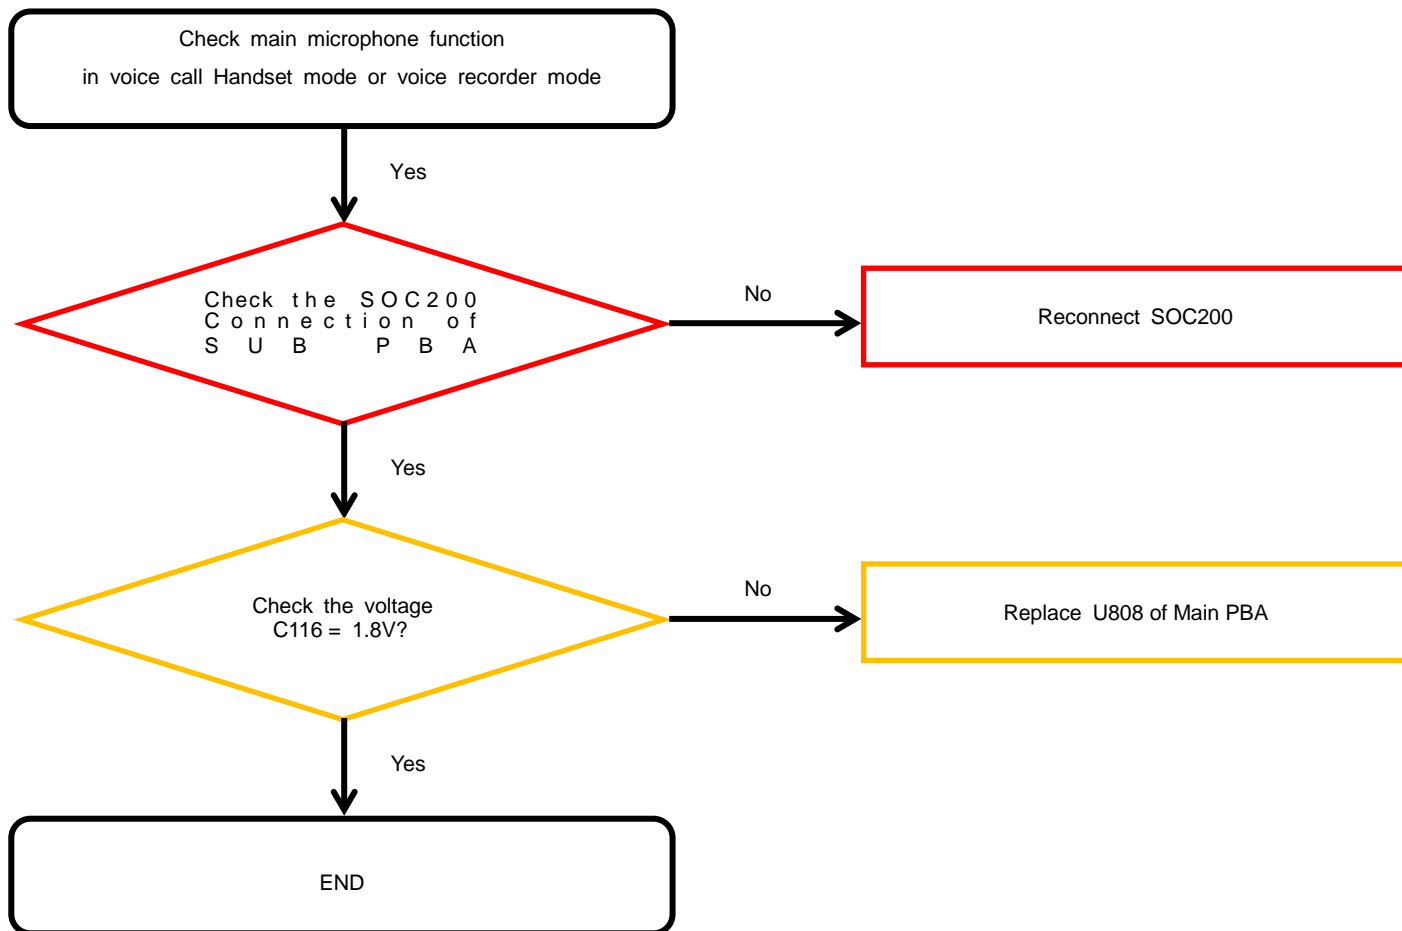


8. Level 3 Repair

8-4-8-2. Microphone Part - Sub(2nd) MIC

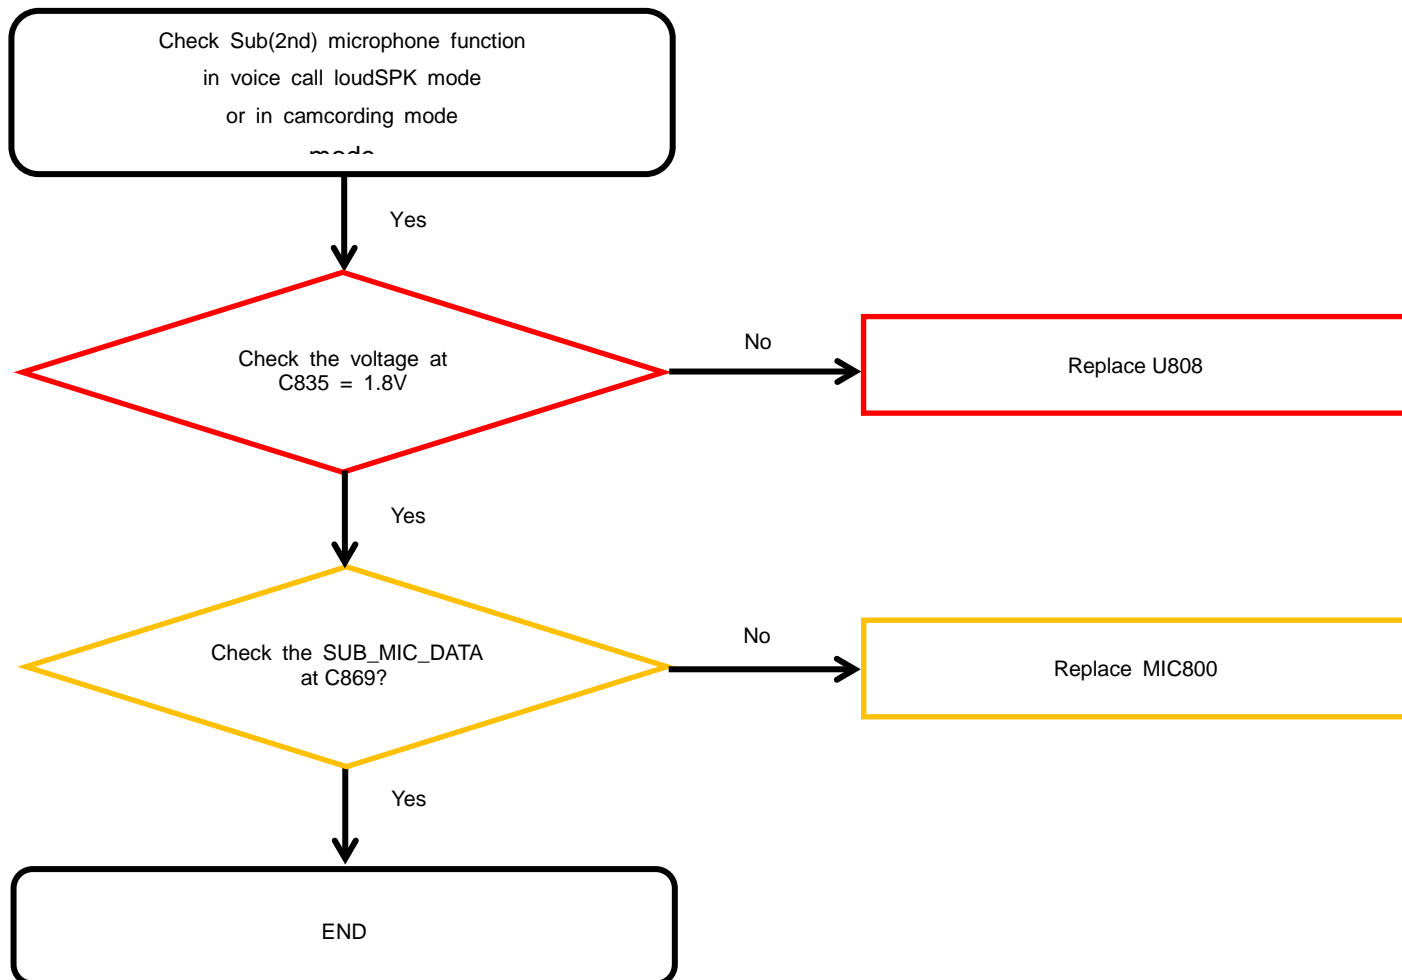


8. Level 3 Repair

8-4-9. Speaker Part

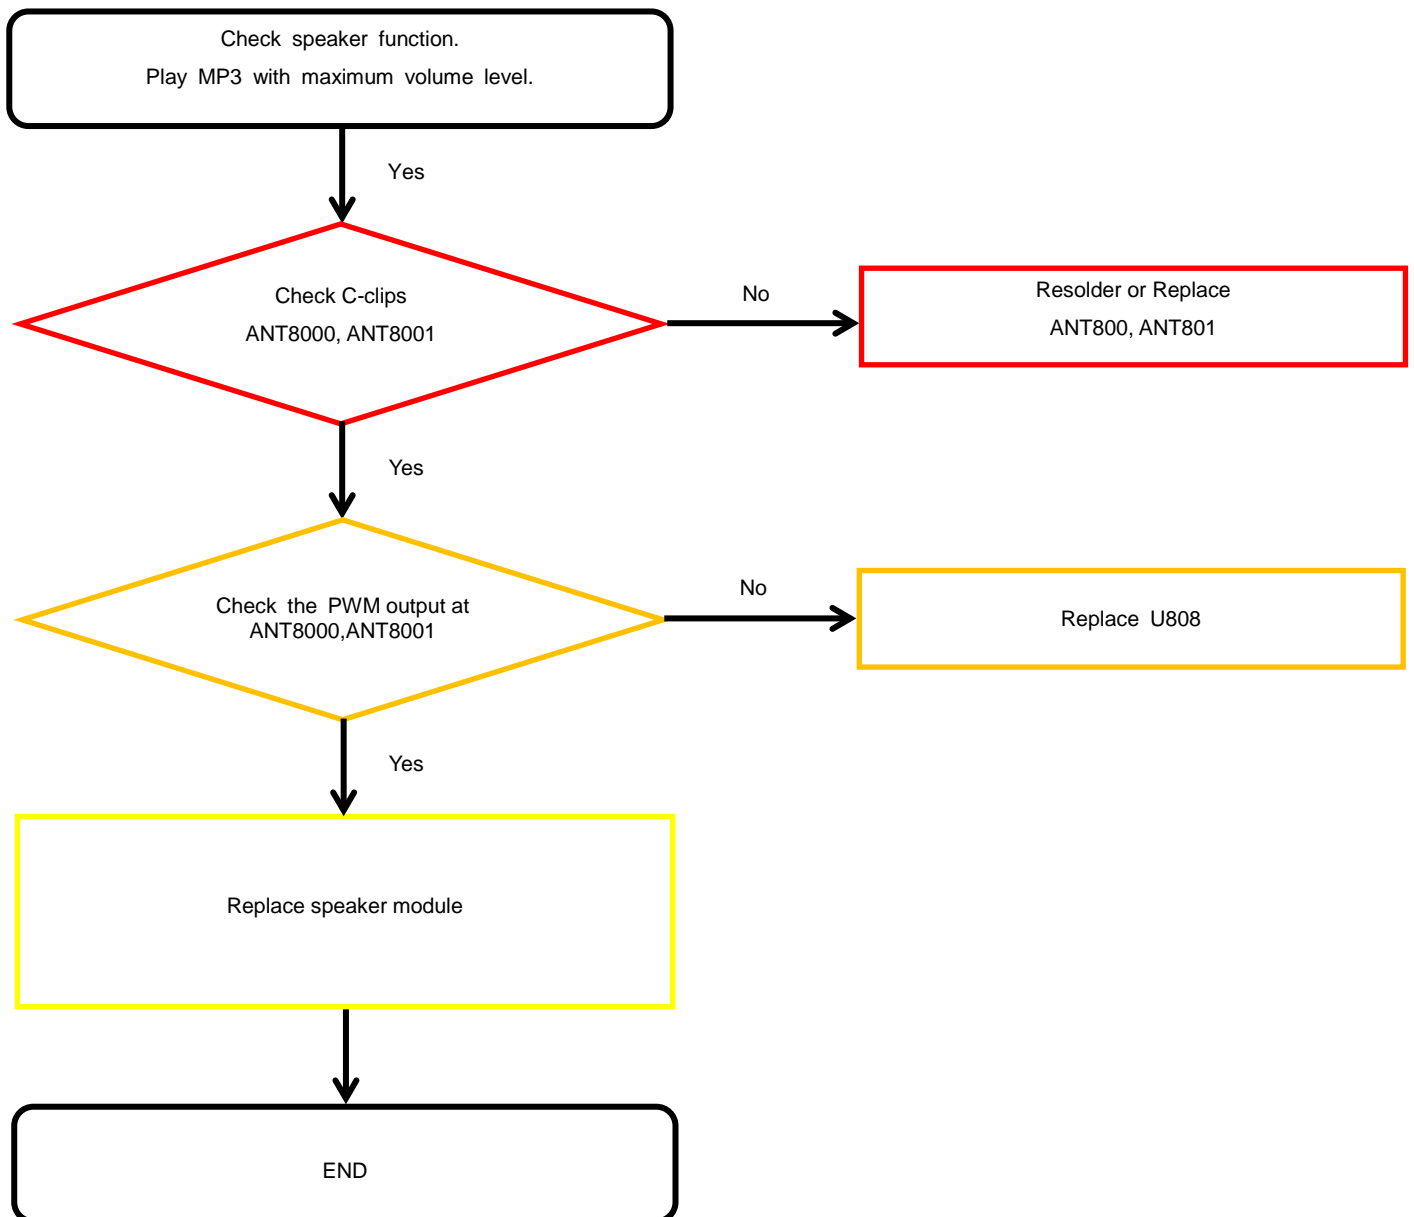


8. Level 3 Repair

8-4-10. Receiver Part

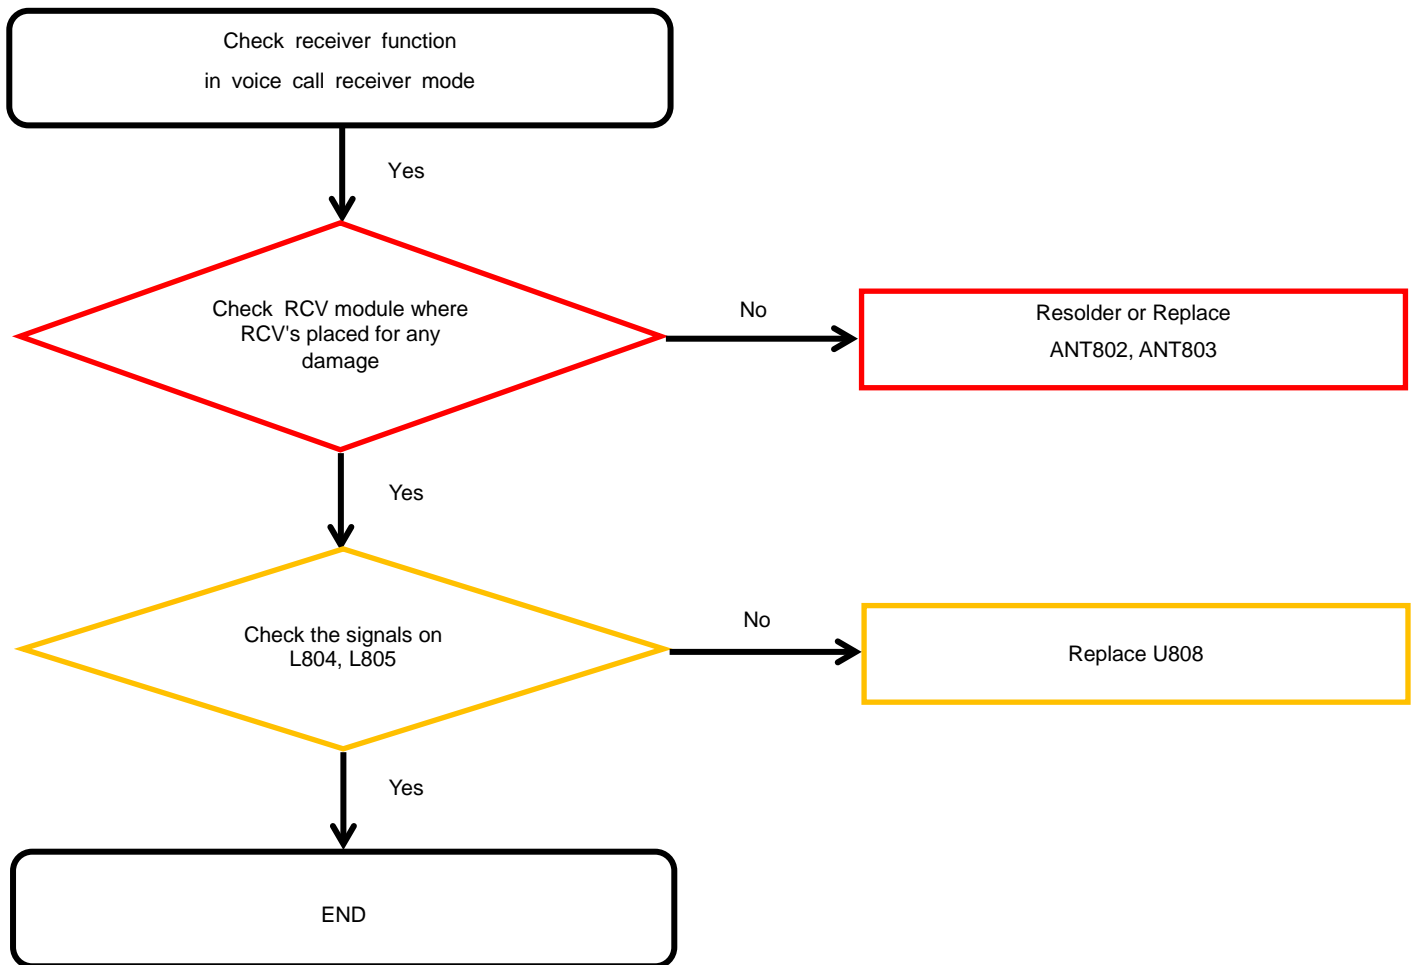


8. Level 3 Repair

8-4-11. BT/WIFI

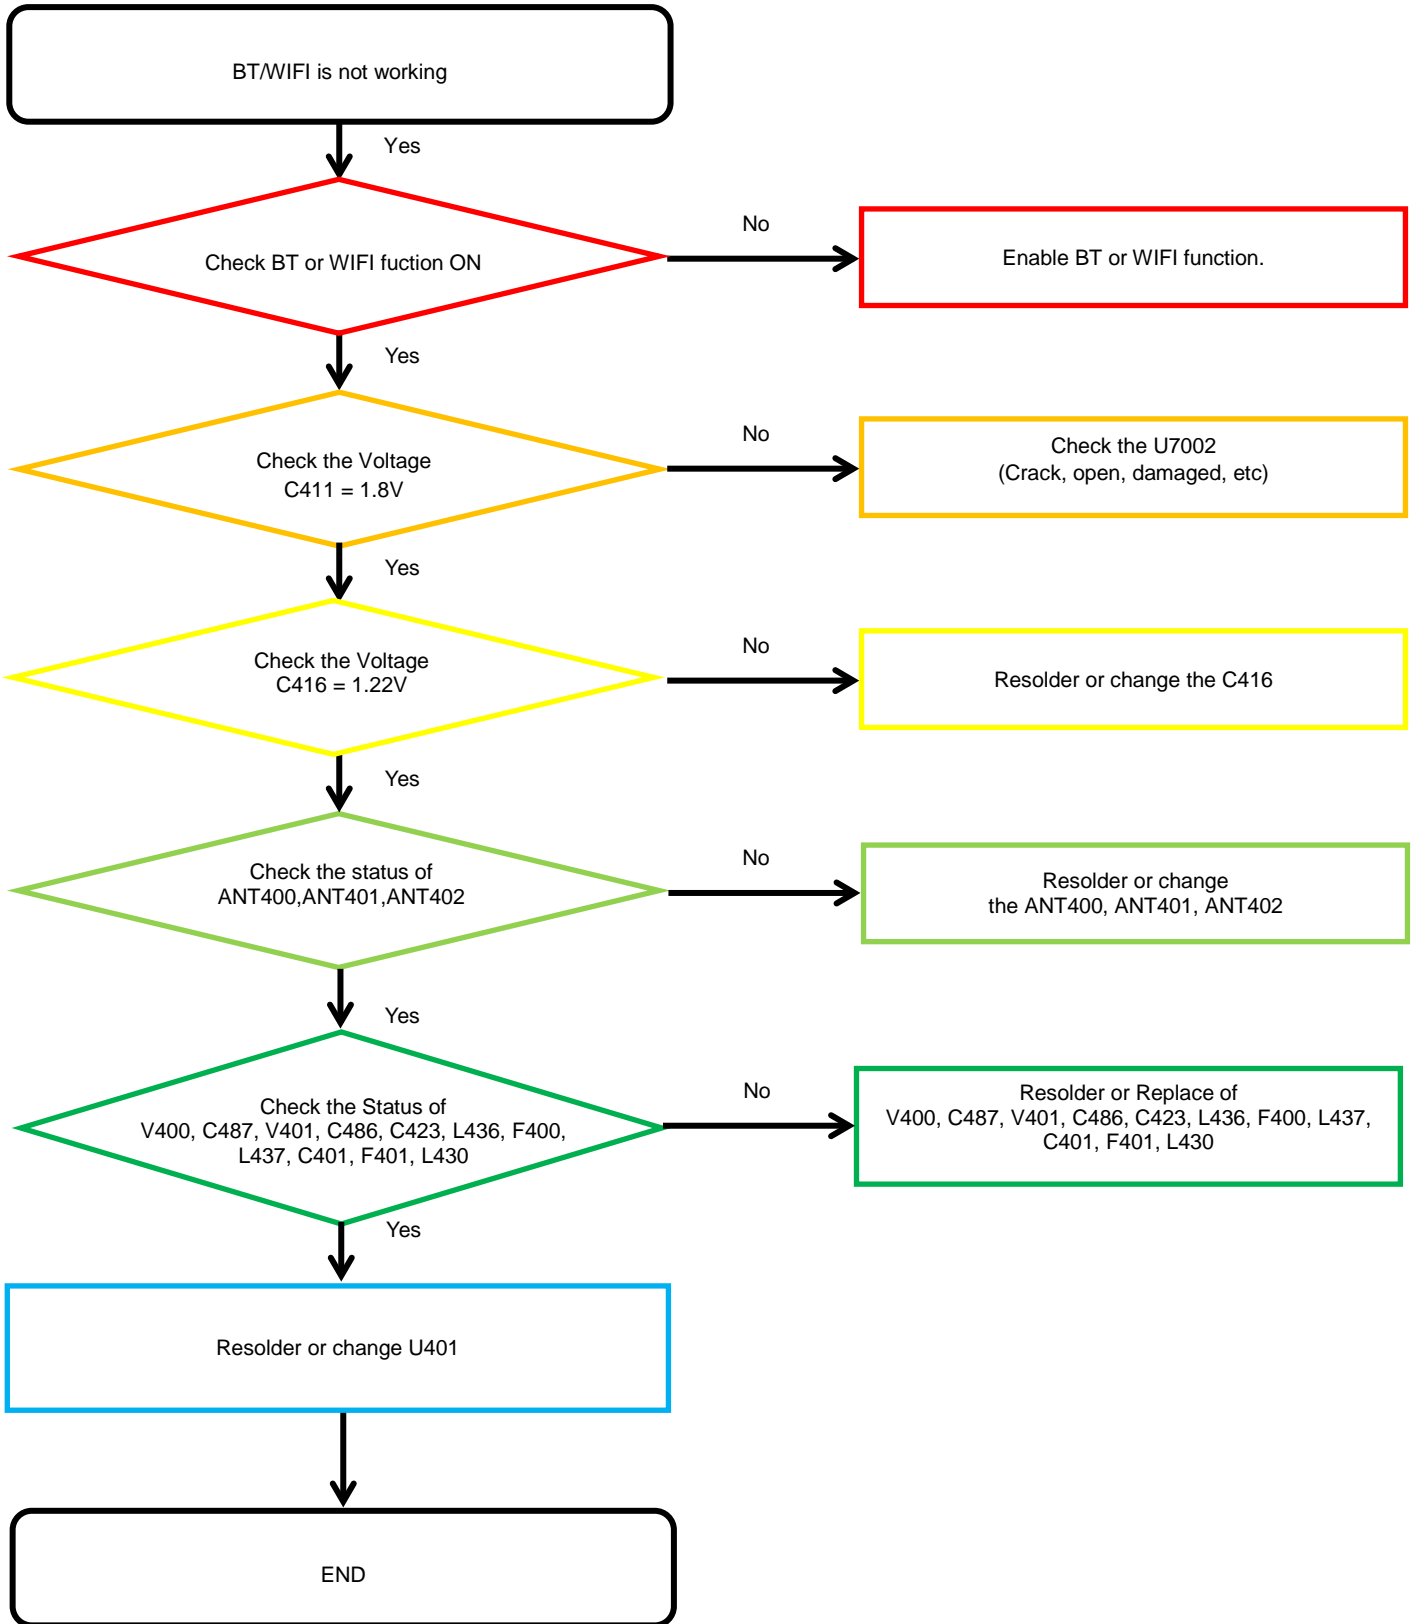


8. Level 3 Repair

8-4-12. GPS

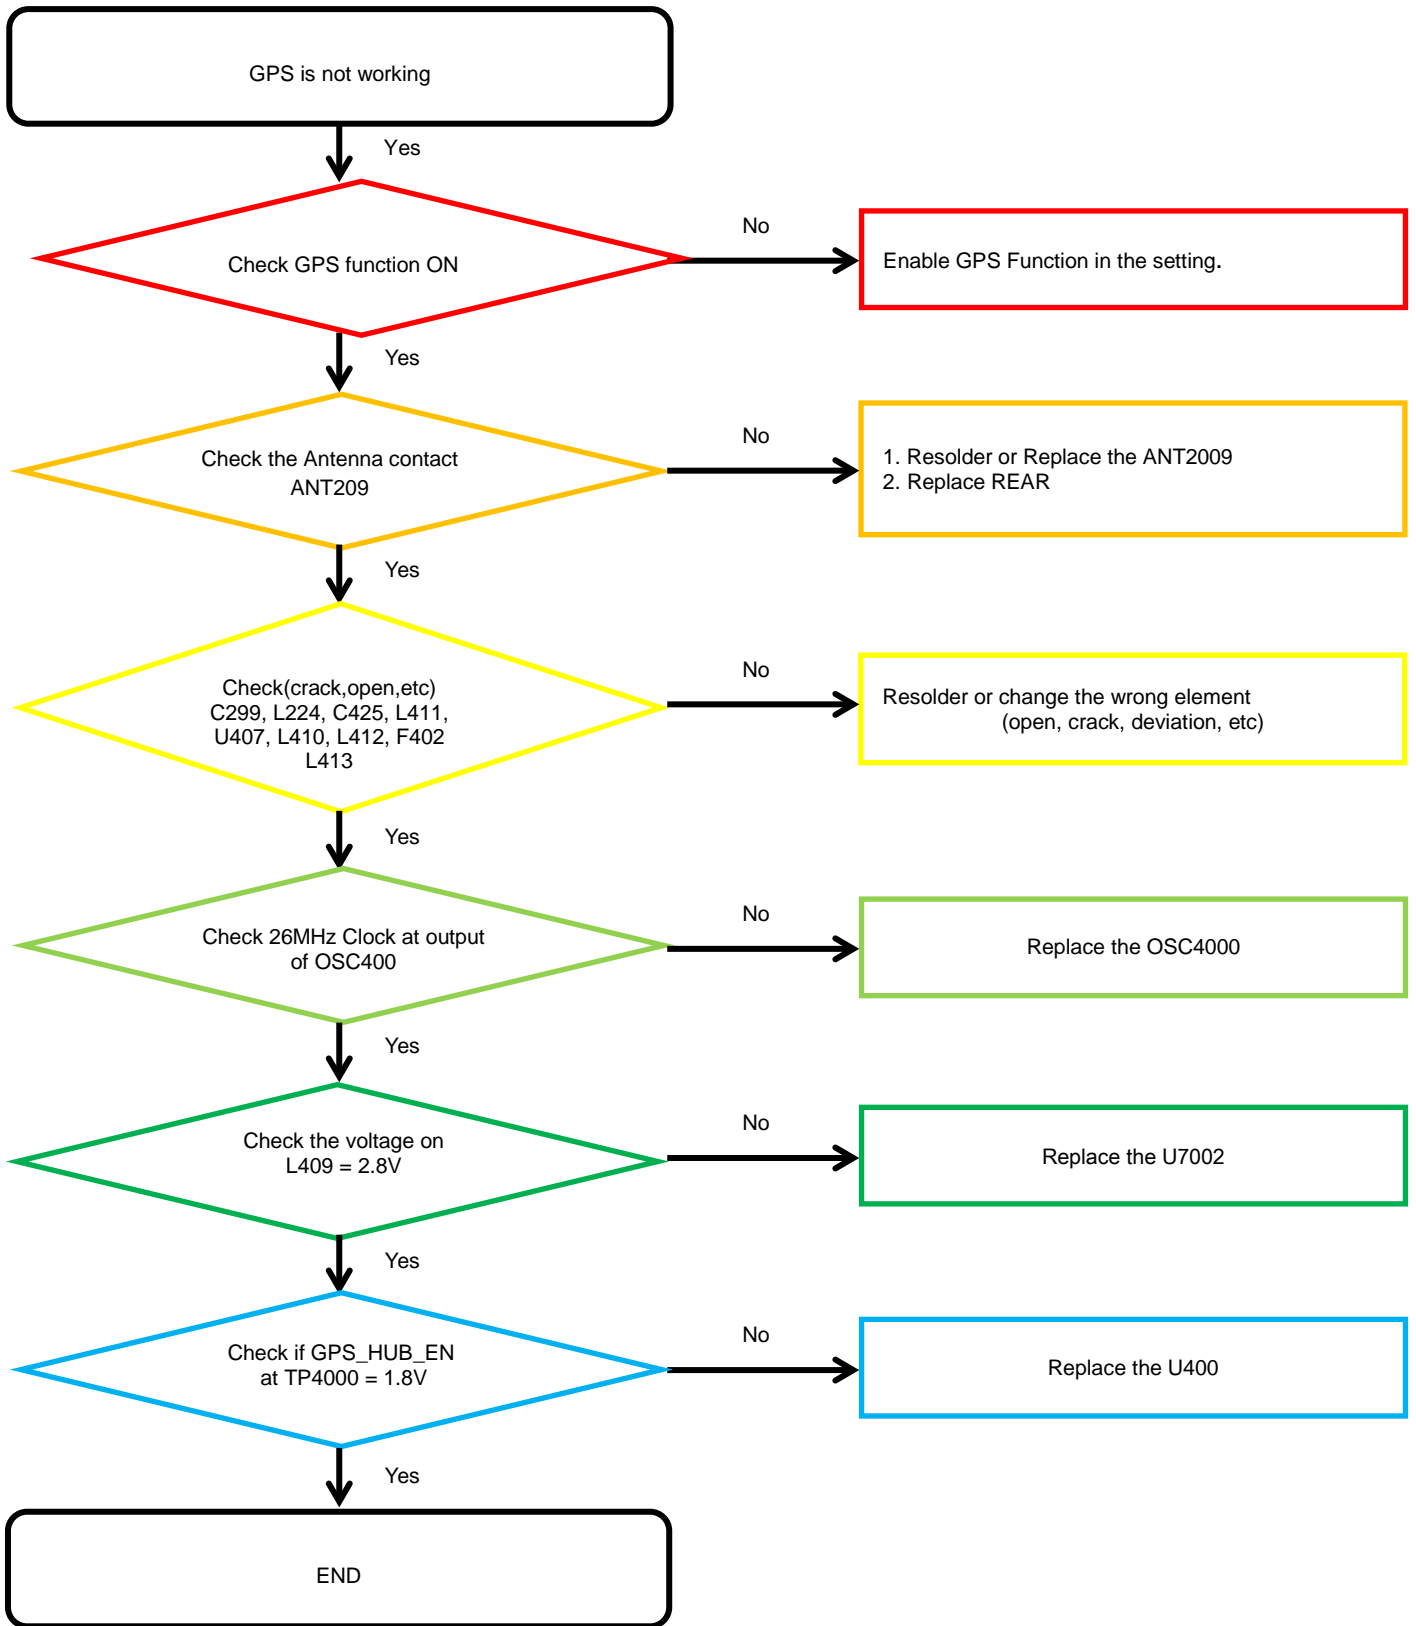


8. Level 3 Repair

8-4-13. NFC

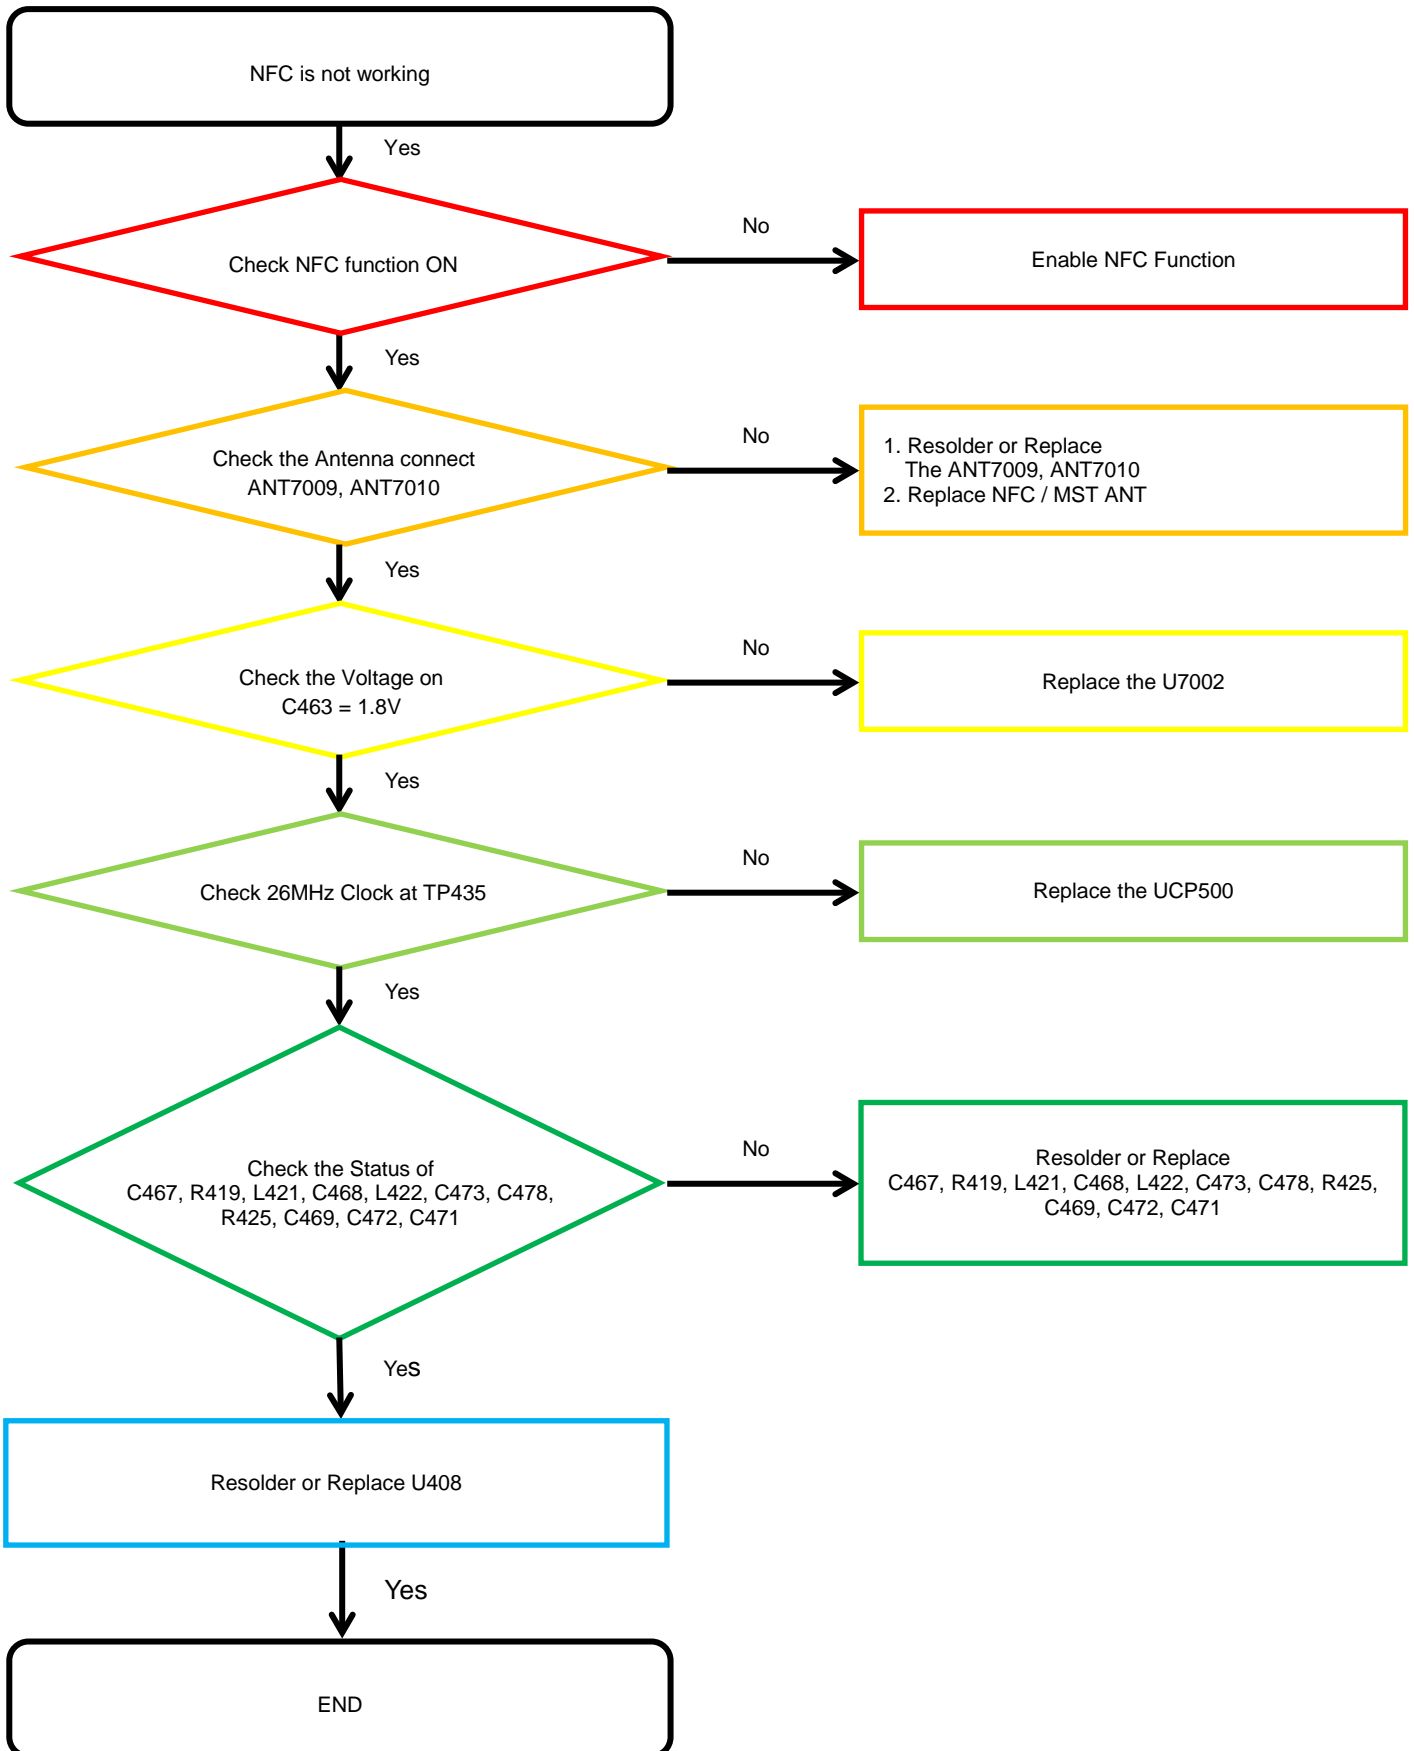


8. Level 3 Repair

8-4-14. Display

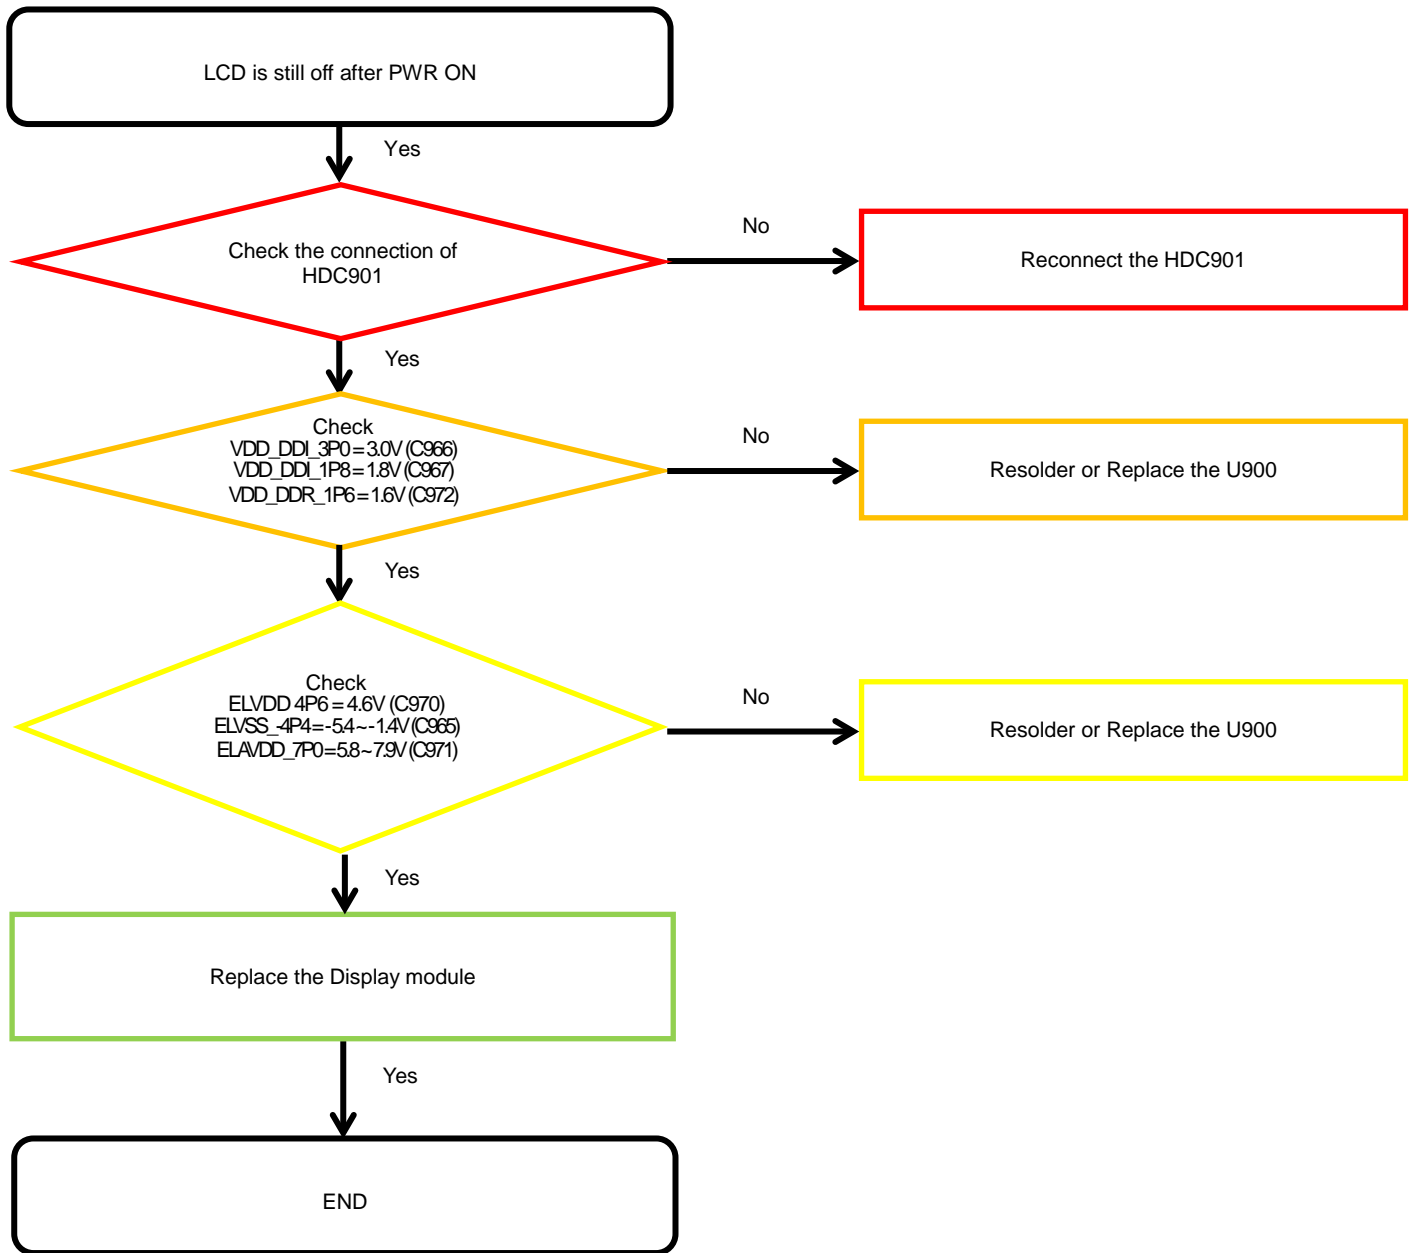


8. Level 3 Repair

8-4-15. 12M CAMERA

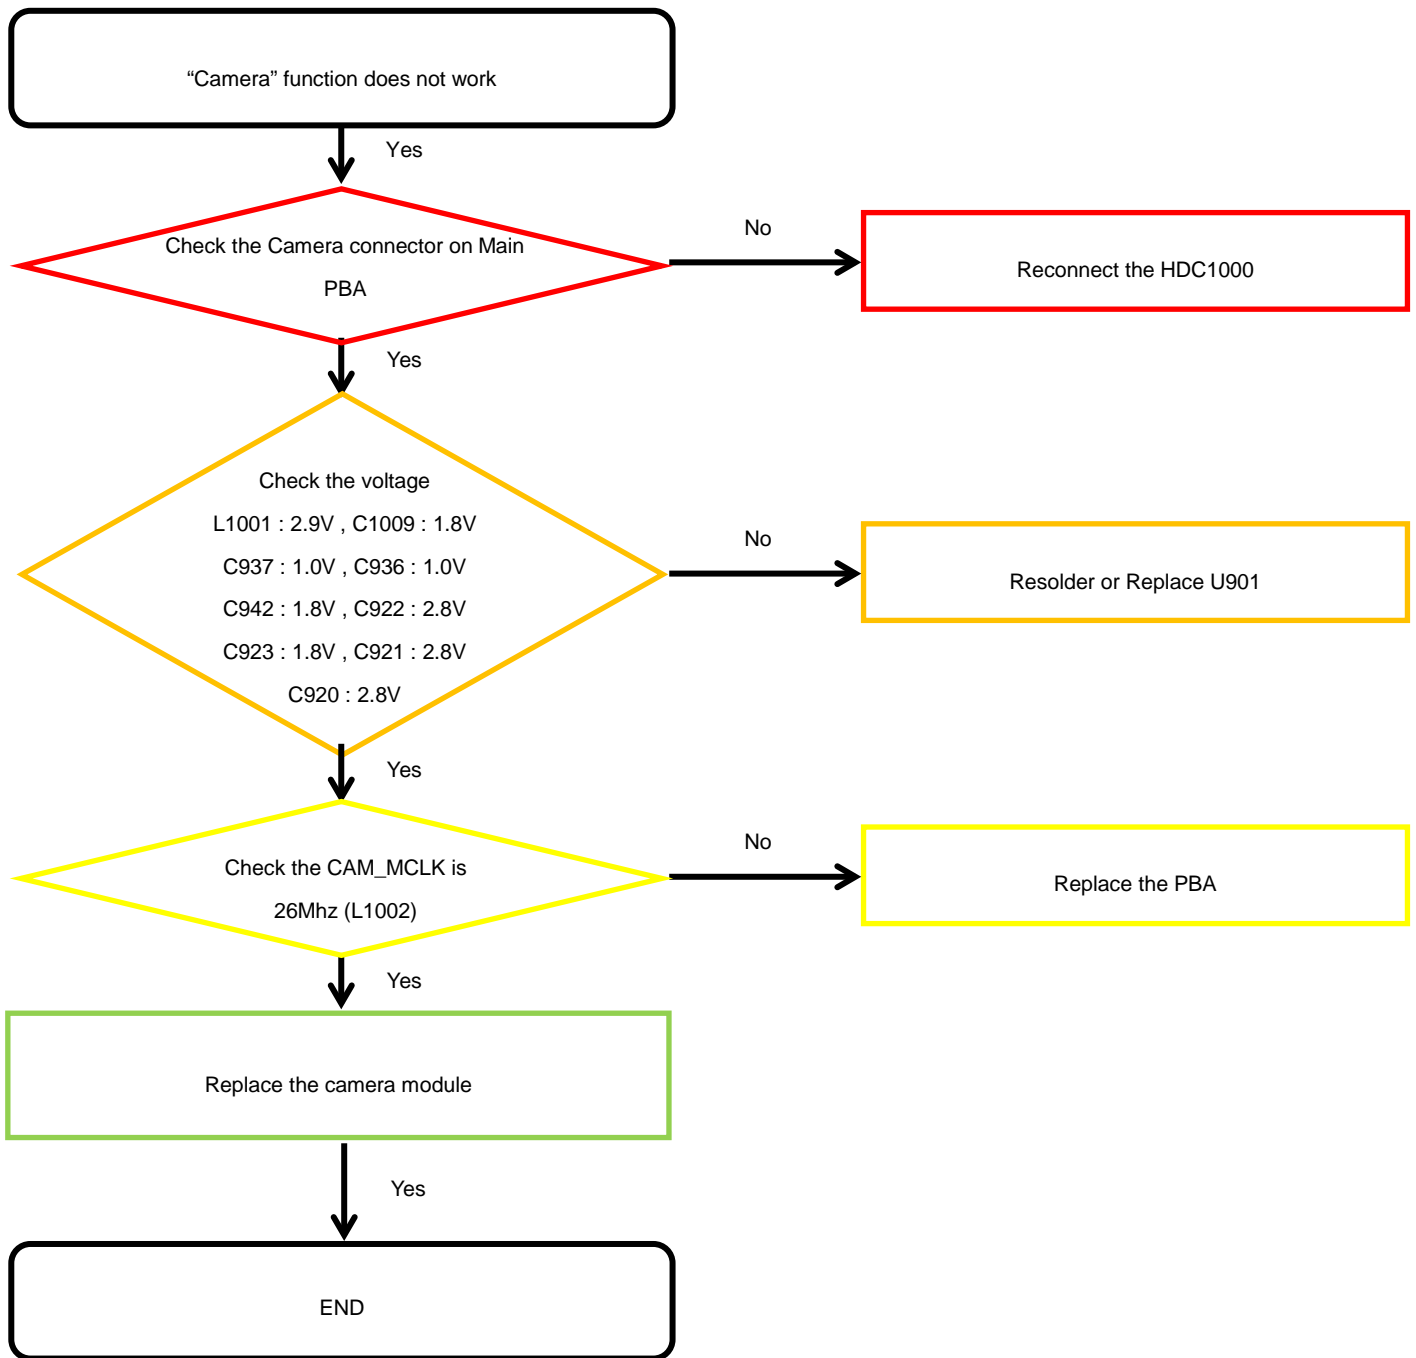


8. Level 3 Repair

8-4-16. 8M CAMERA

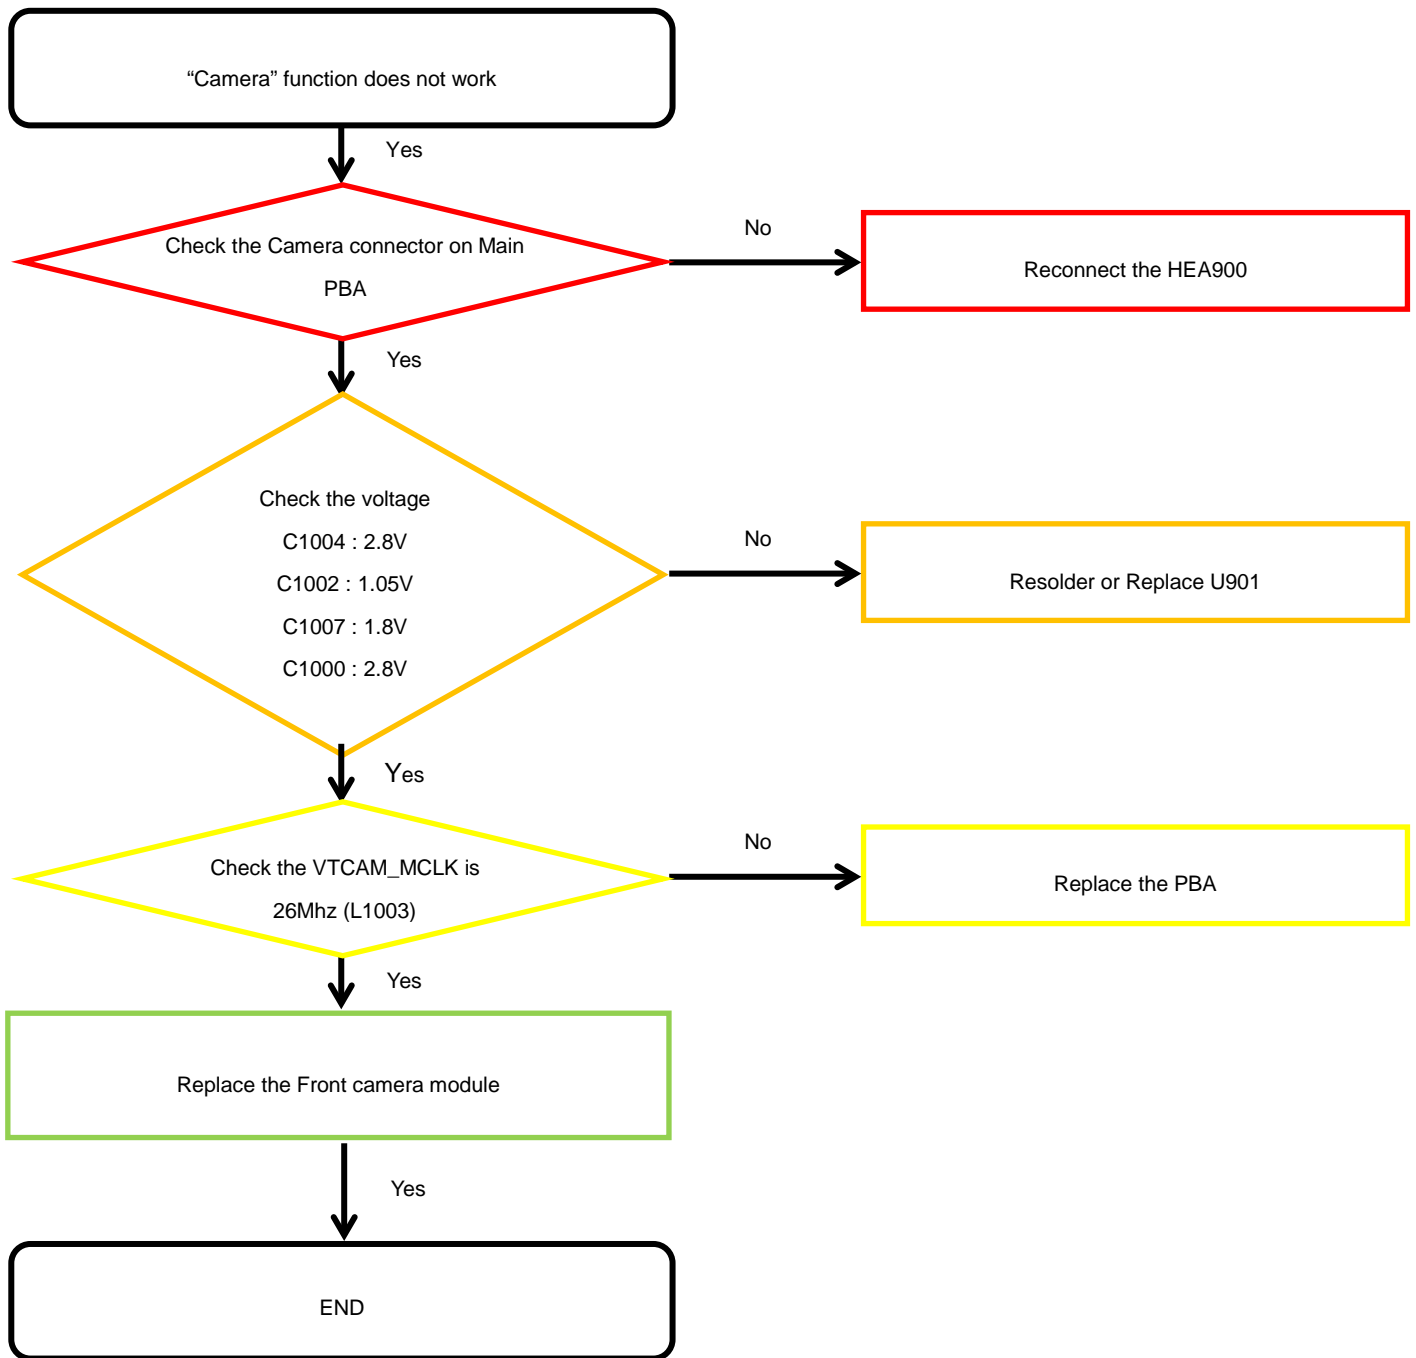


8. Level 3 Repair

8-4-17. IRIS CAM

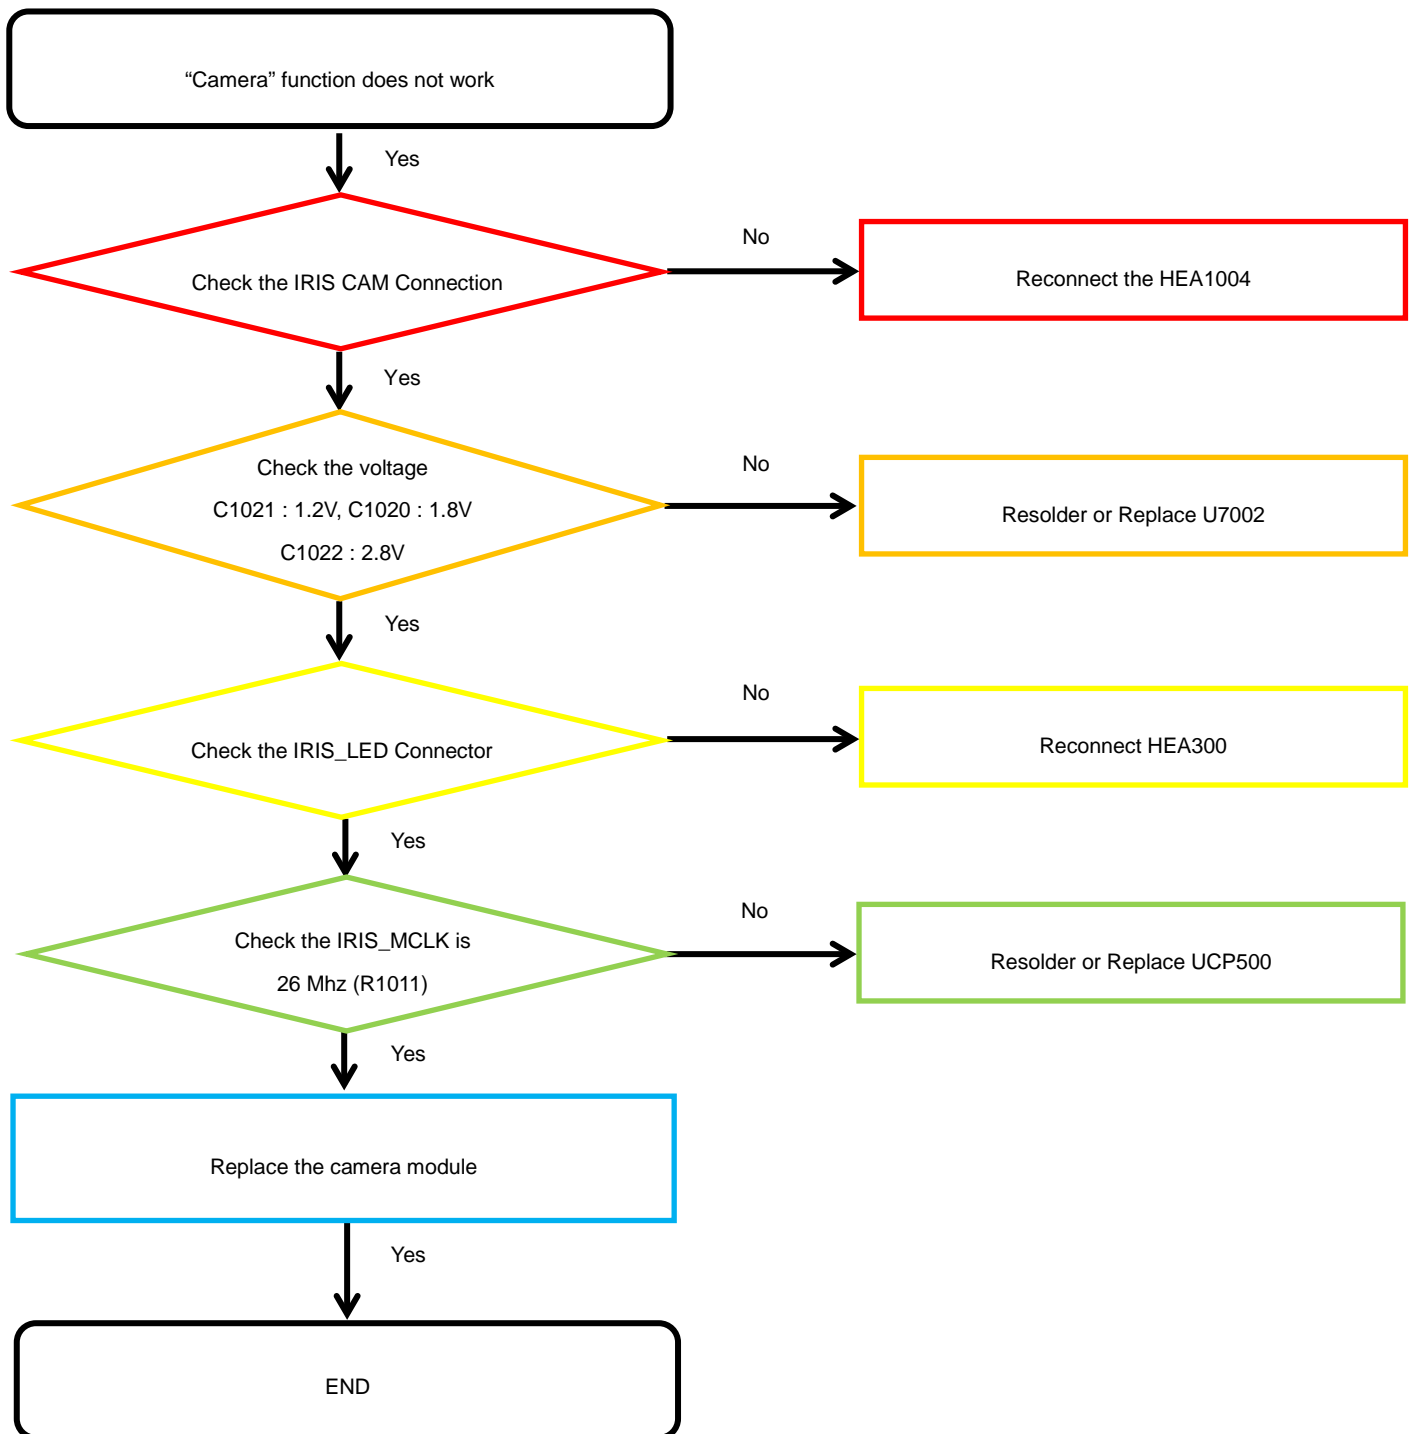


8. Level 3 Repair

8-4-18. TSP

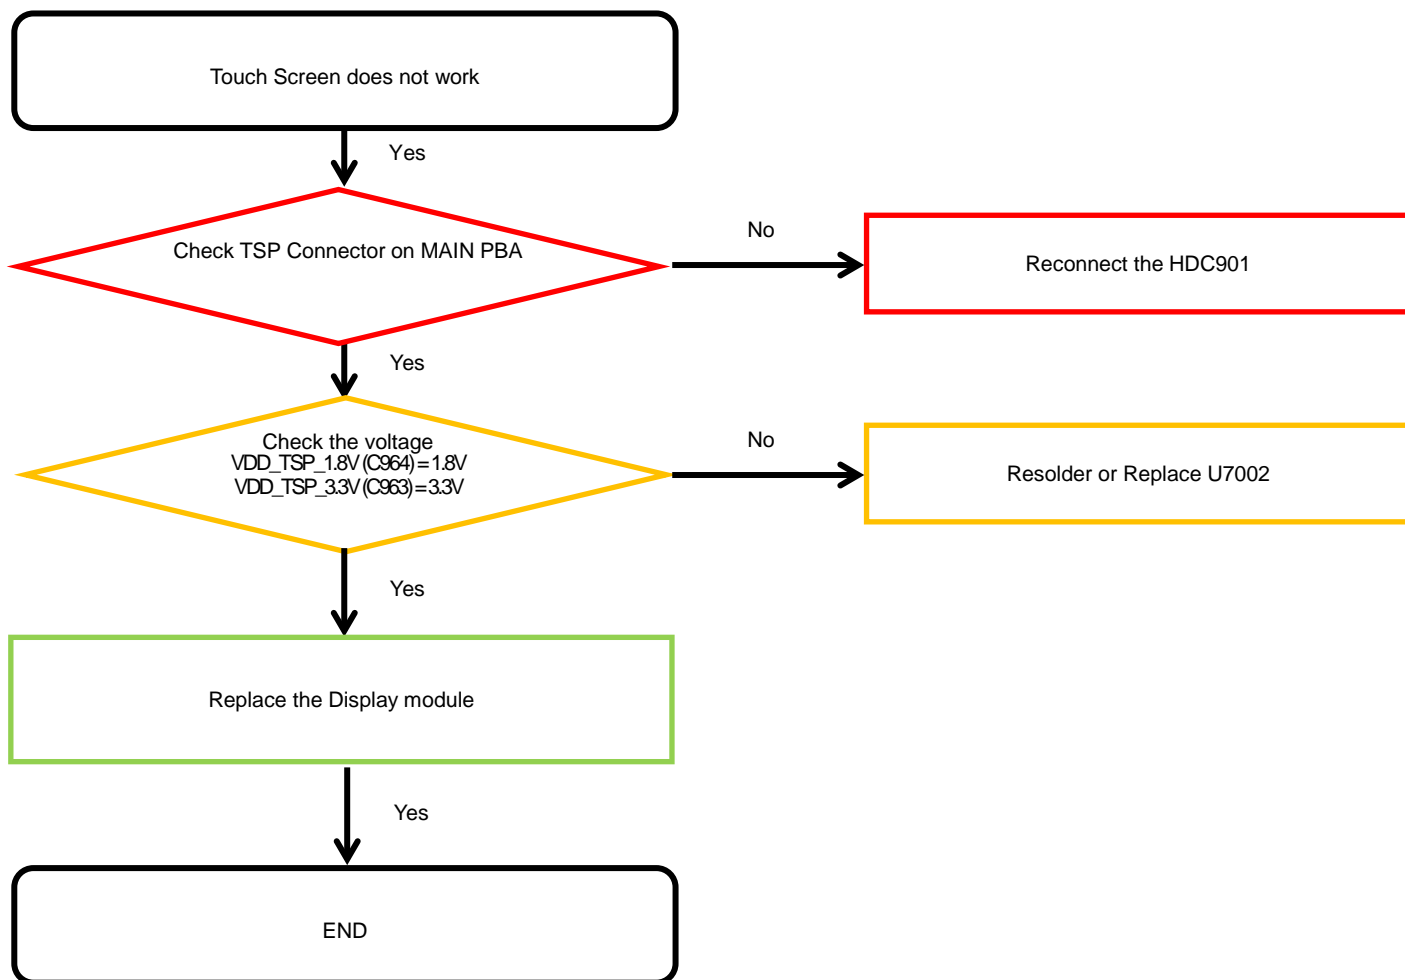


8. Level 3 Repair

8-4-19. Pressure Touch (Home Button function)

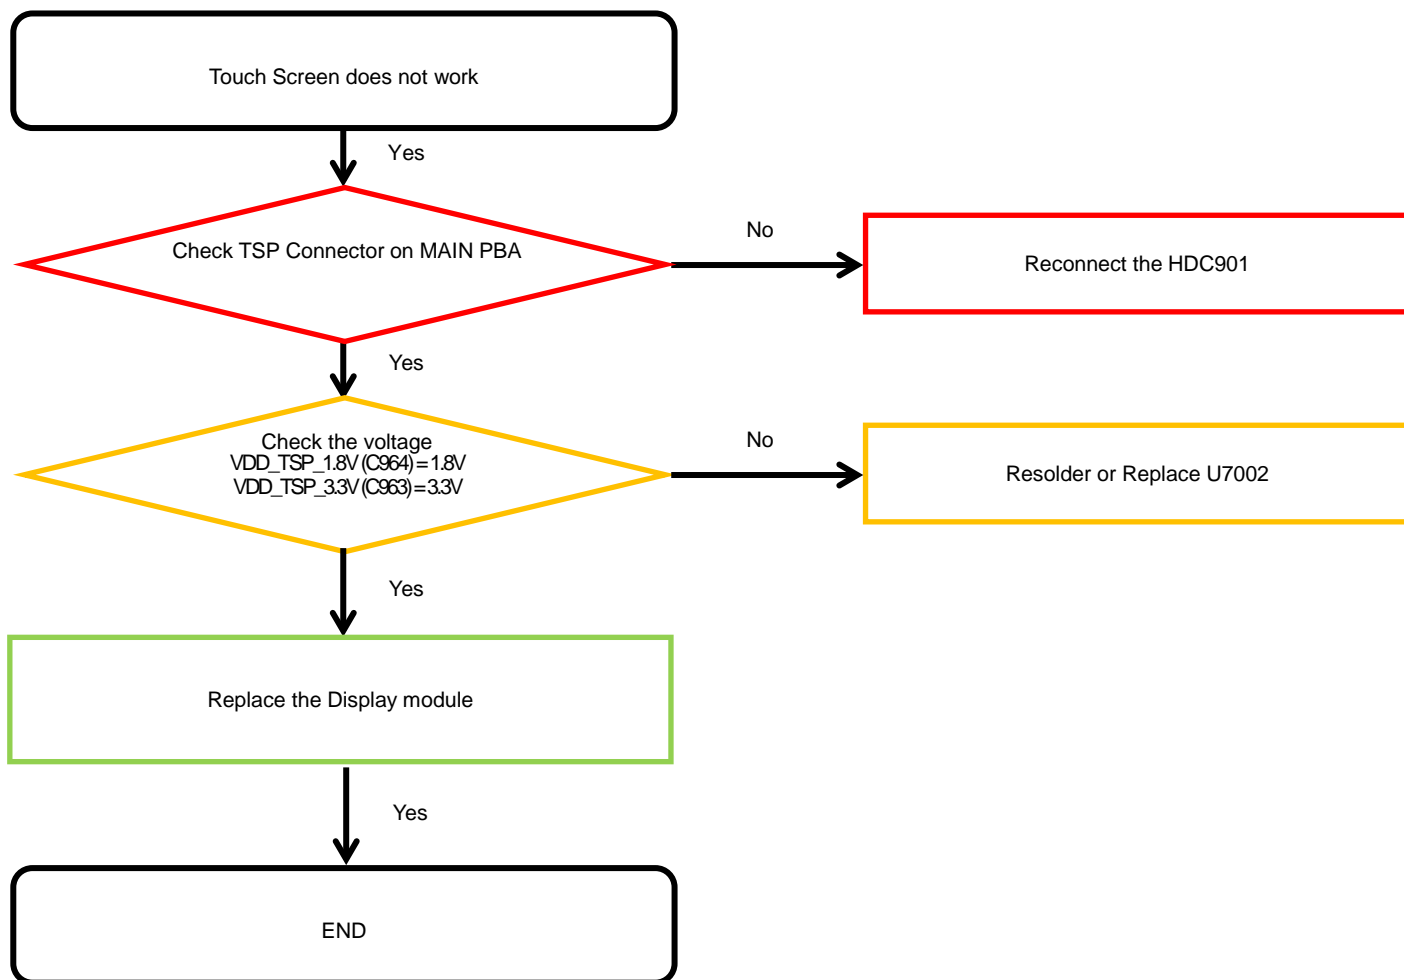


8. Level 3 Repair

8-4-20. Motor

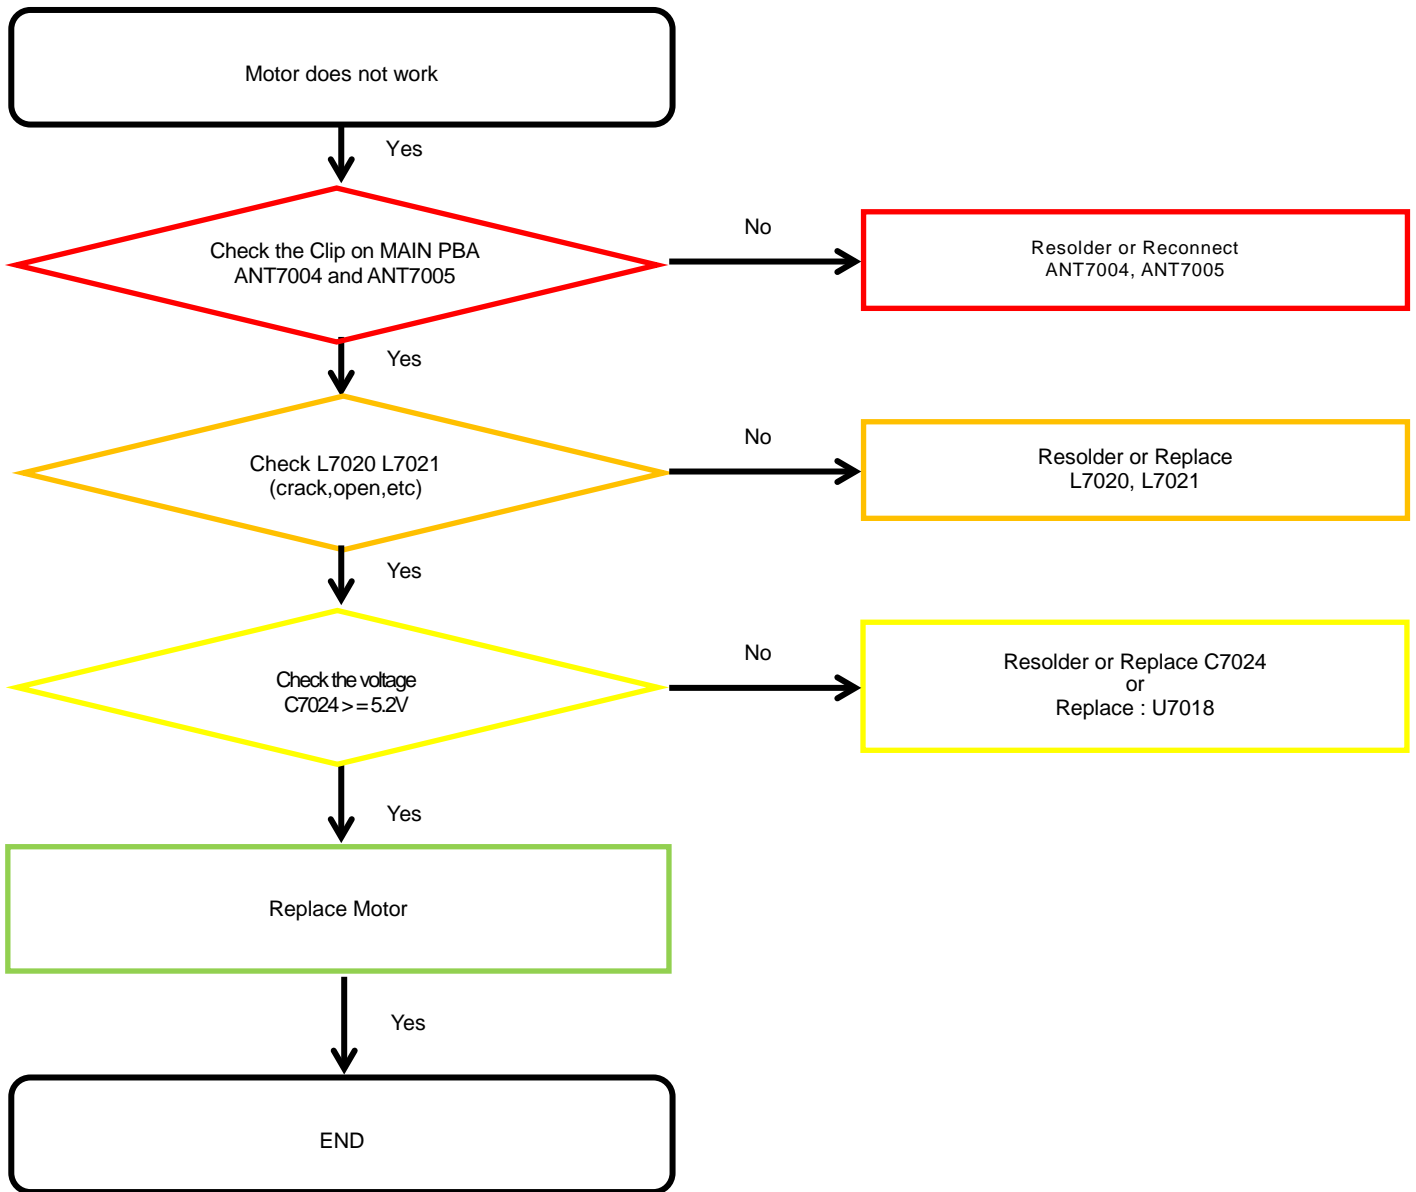


8. Level 3 Repair

8-4-21. MST

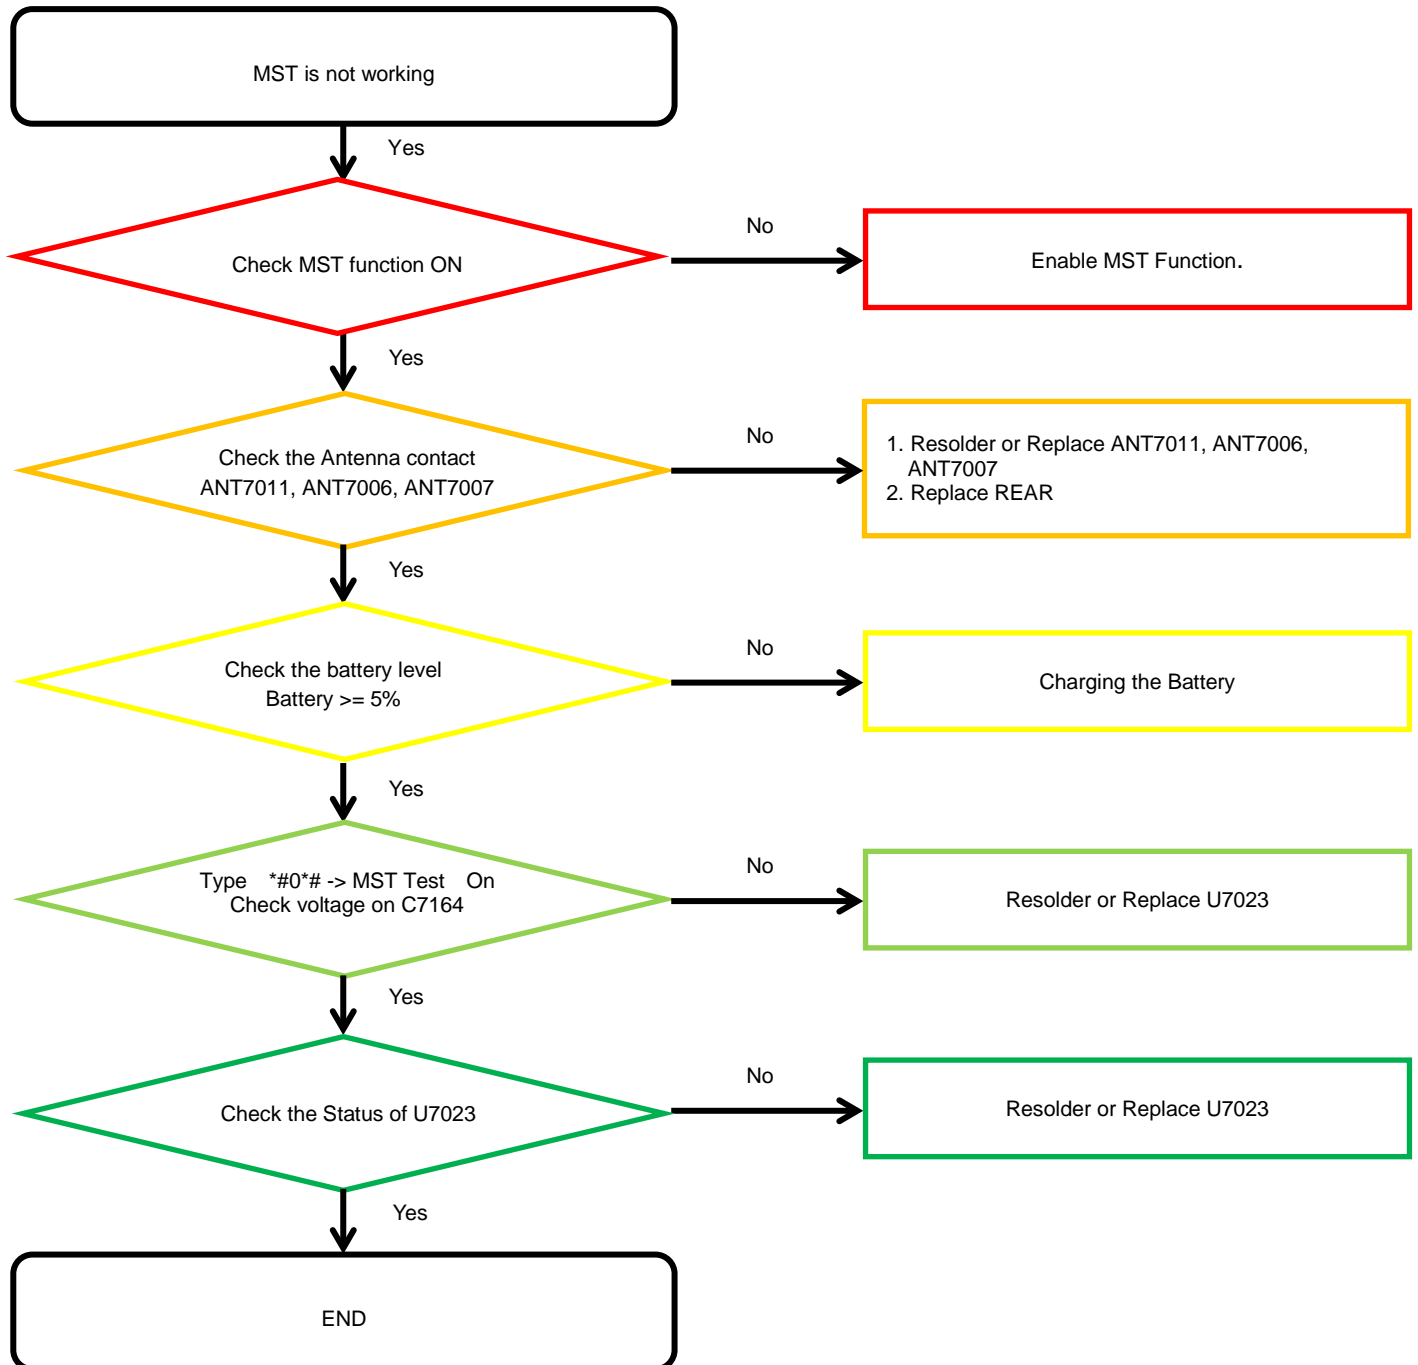


8. Level 3 Repair

8-4-22. GSM 850/900, WCDMA B5/8, LTE B5/8/12/13/17/18/19/20/26/28 Rx

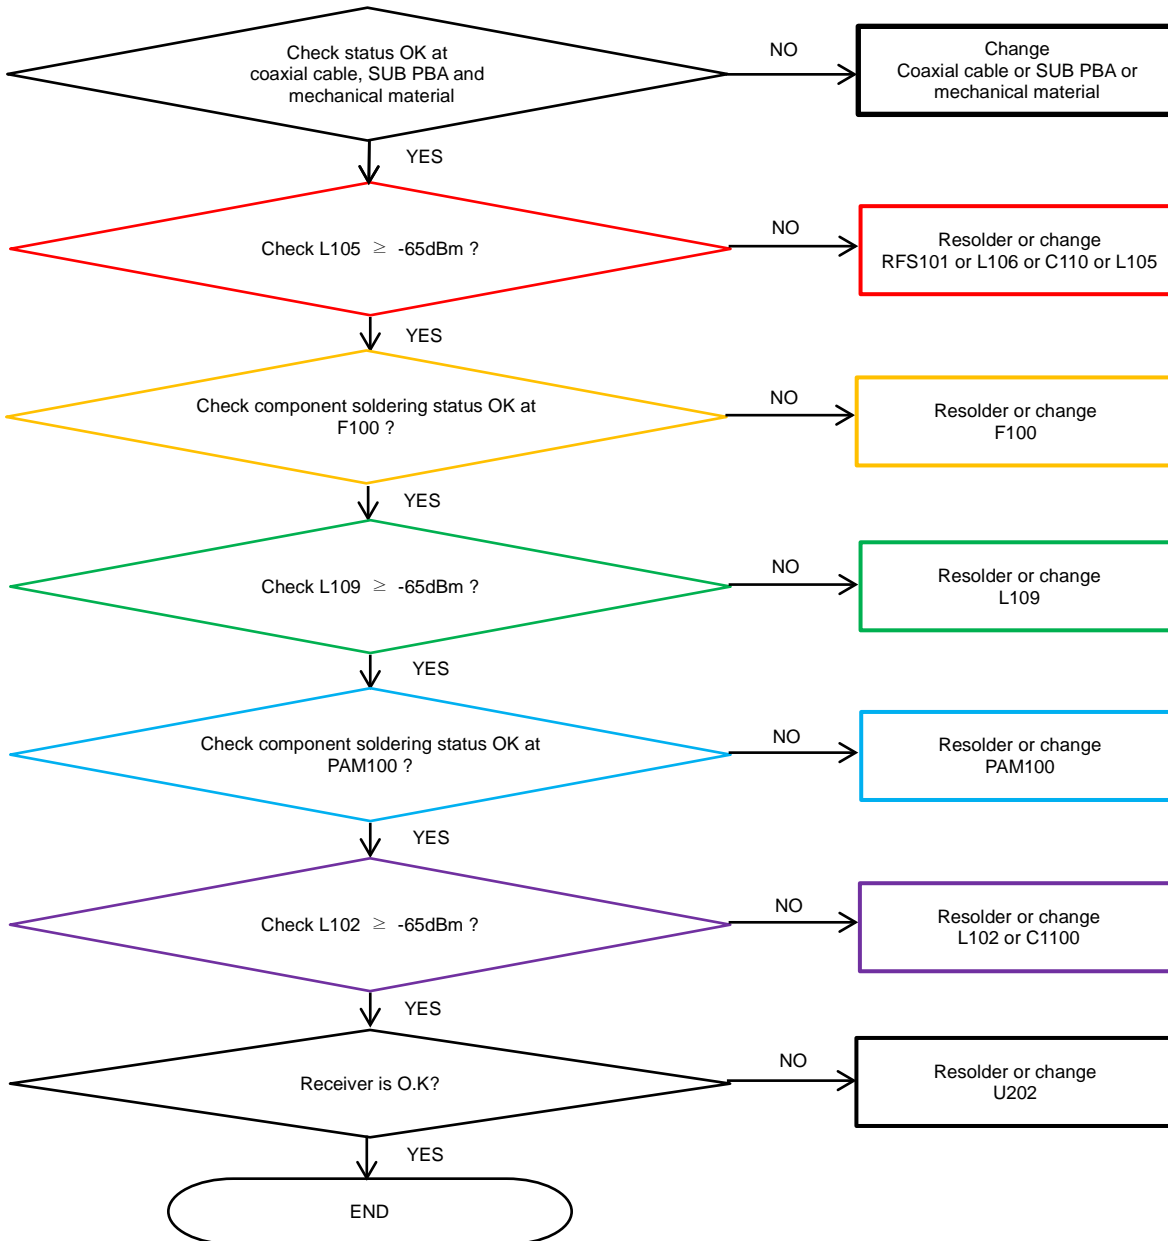


8. Level 3 Repair

8-4-23. LTE B7/40 4RxD

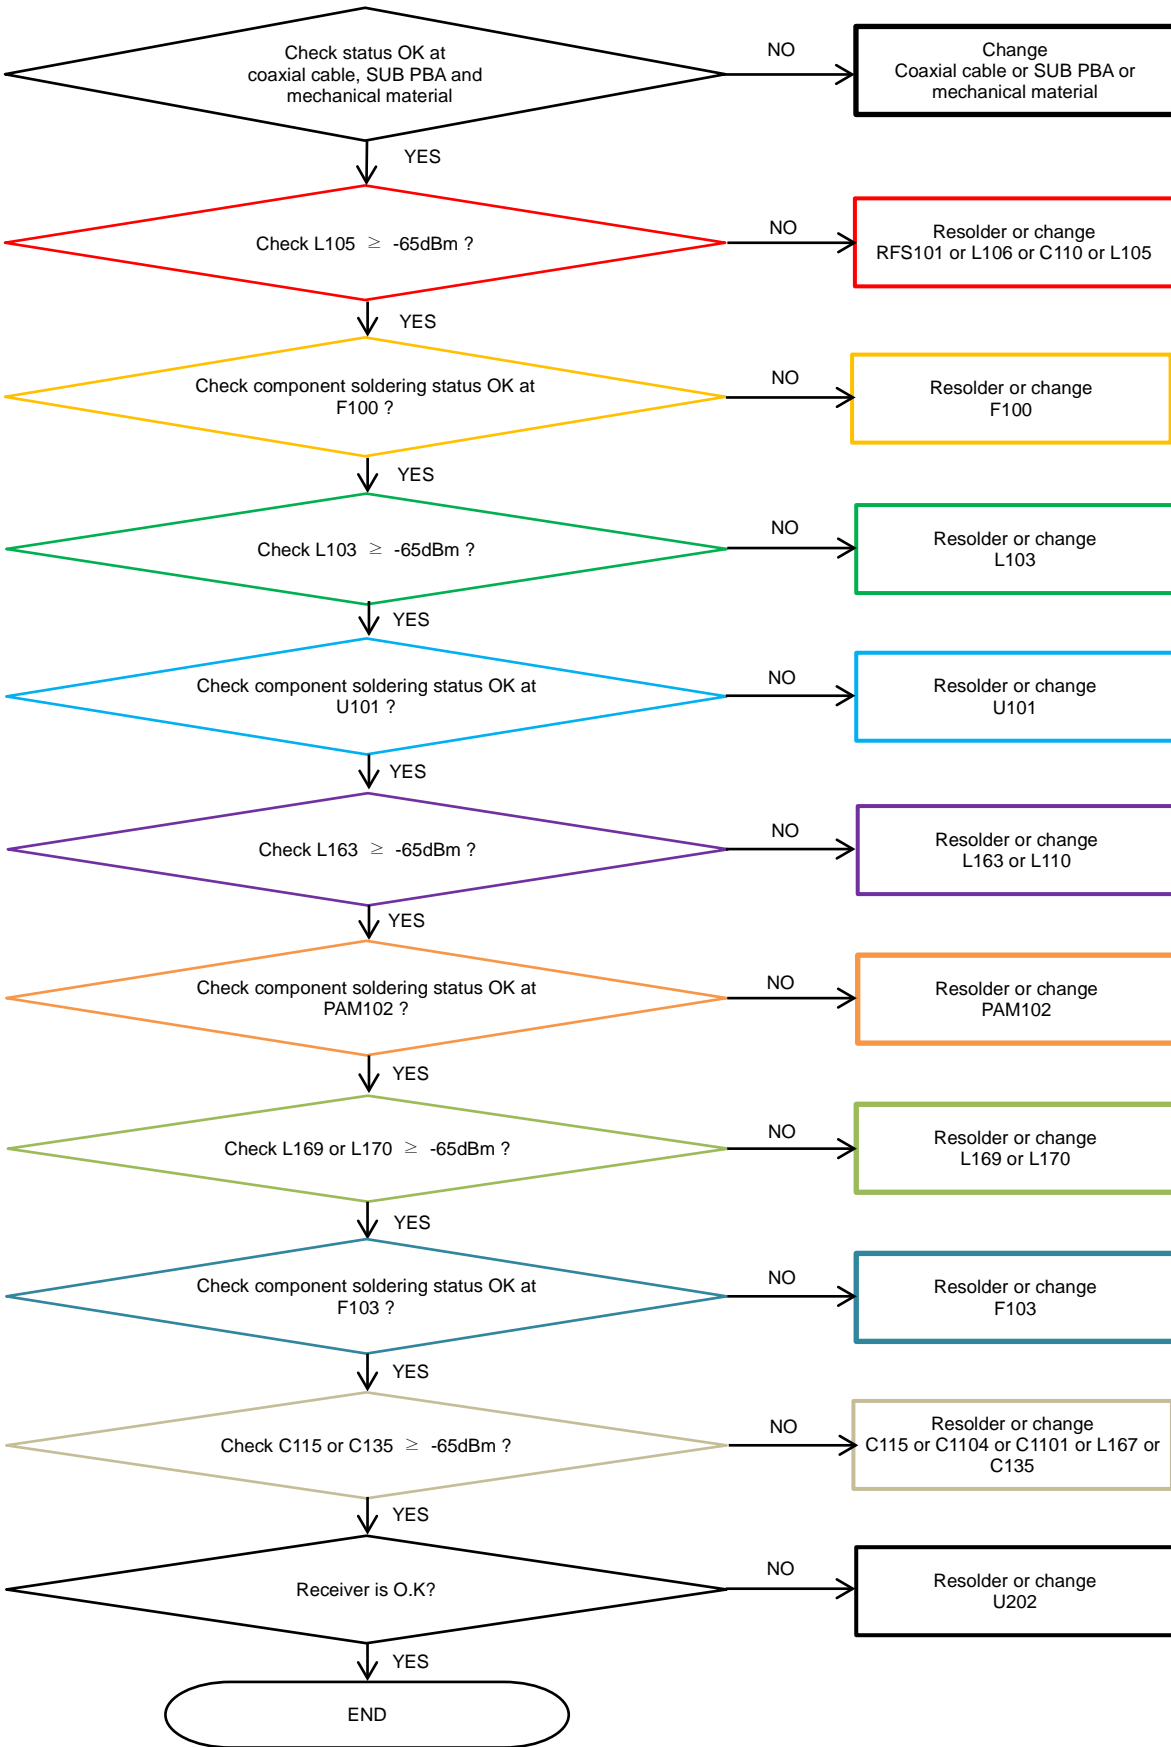


8. Level 3 Repair

8-4-24. WCDMA B1/4, TD-SCDMA B34/39, LTE B1/4/39/66 Rx

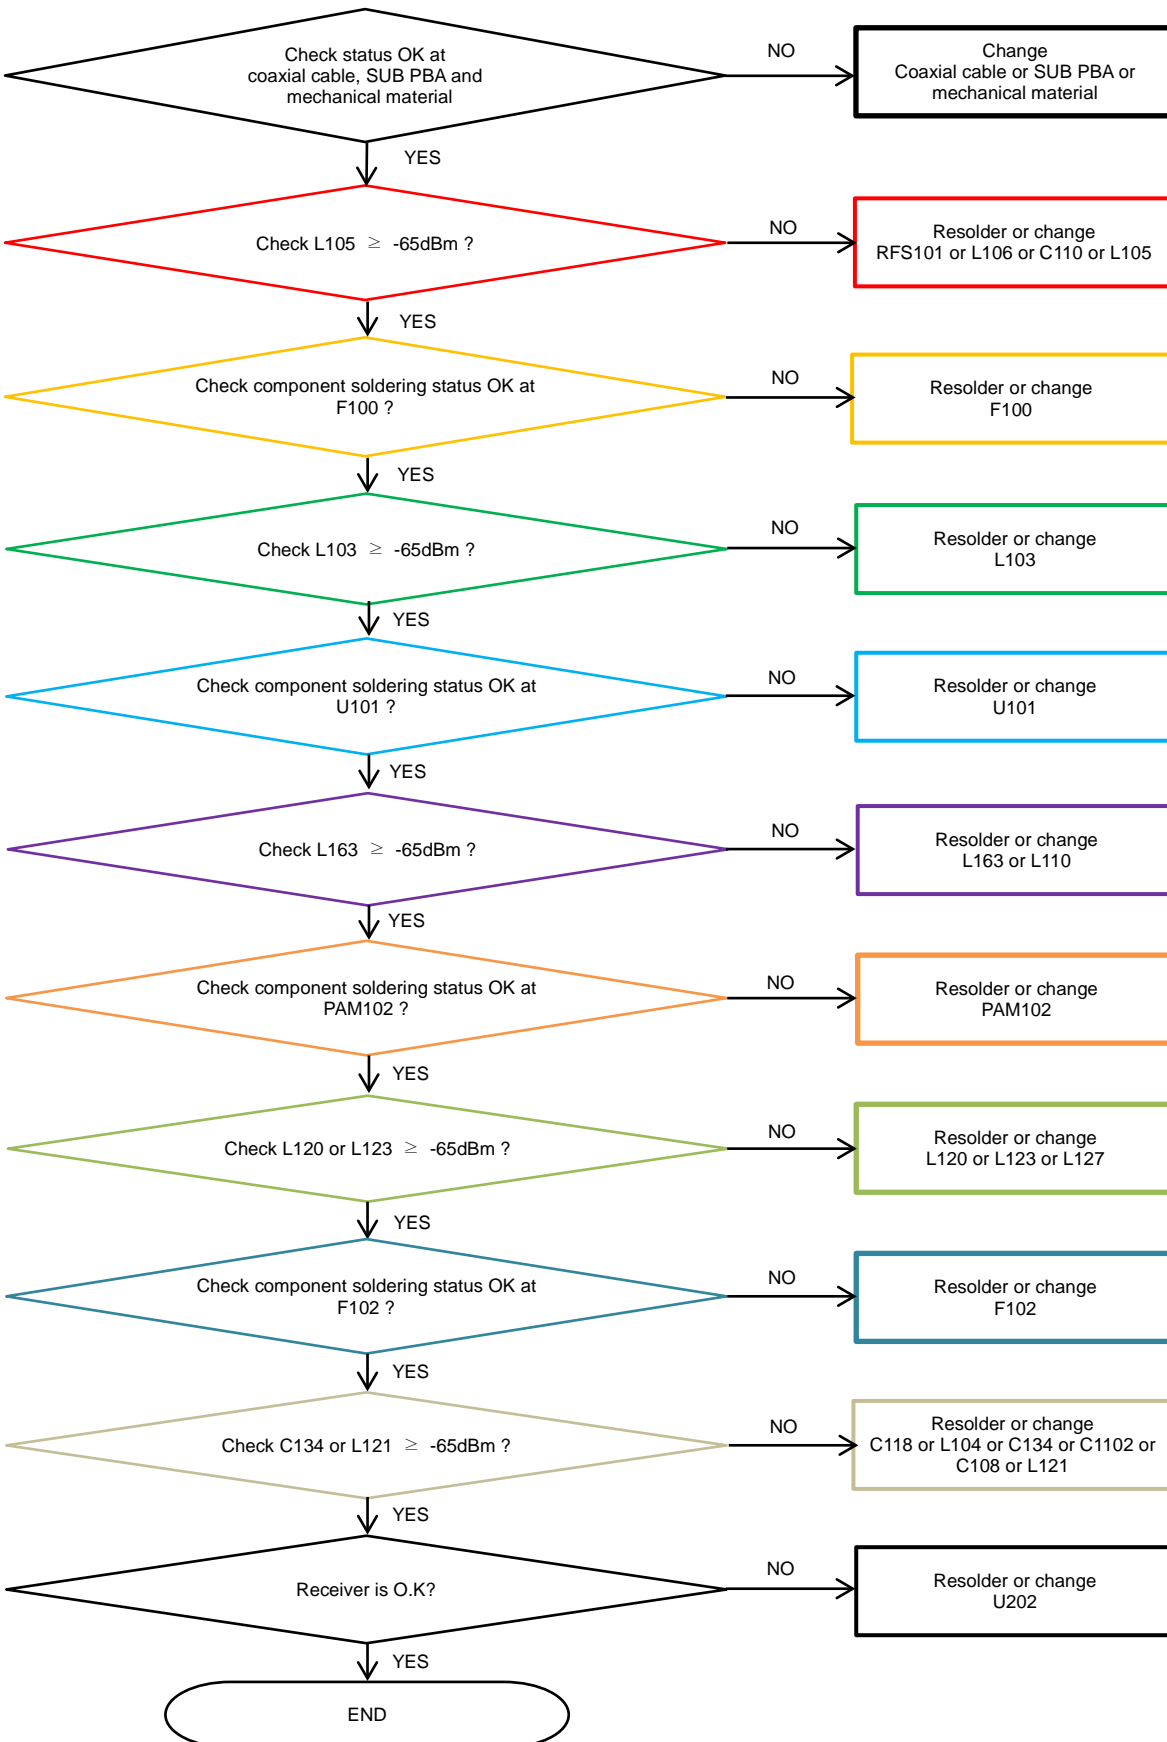


8. Level 3 Repair

8-4-25. LTE B32 Rx

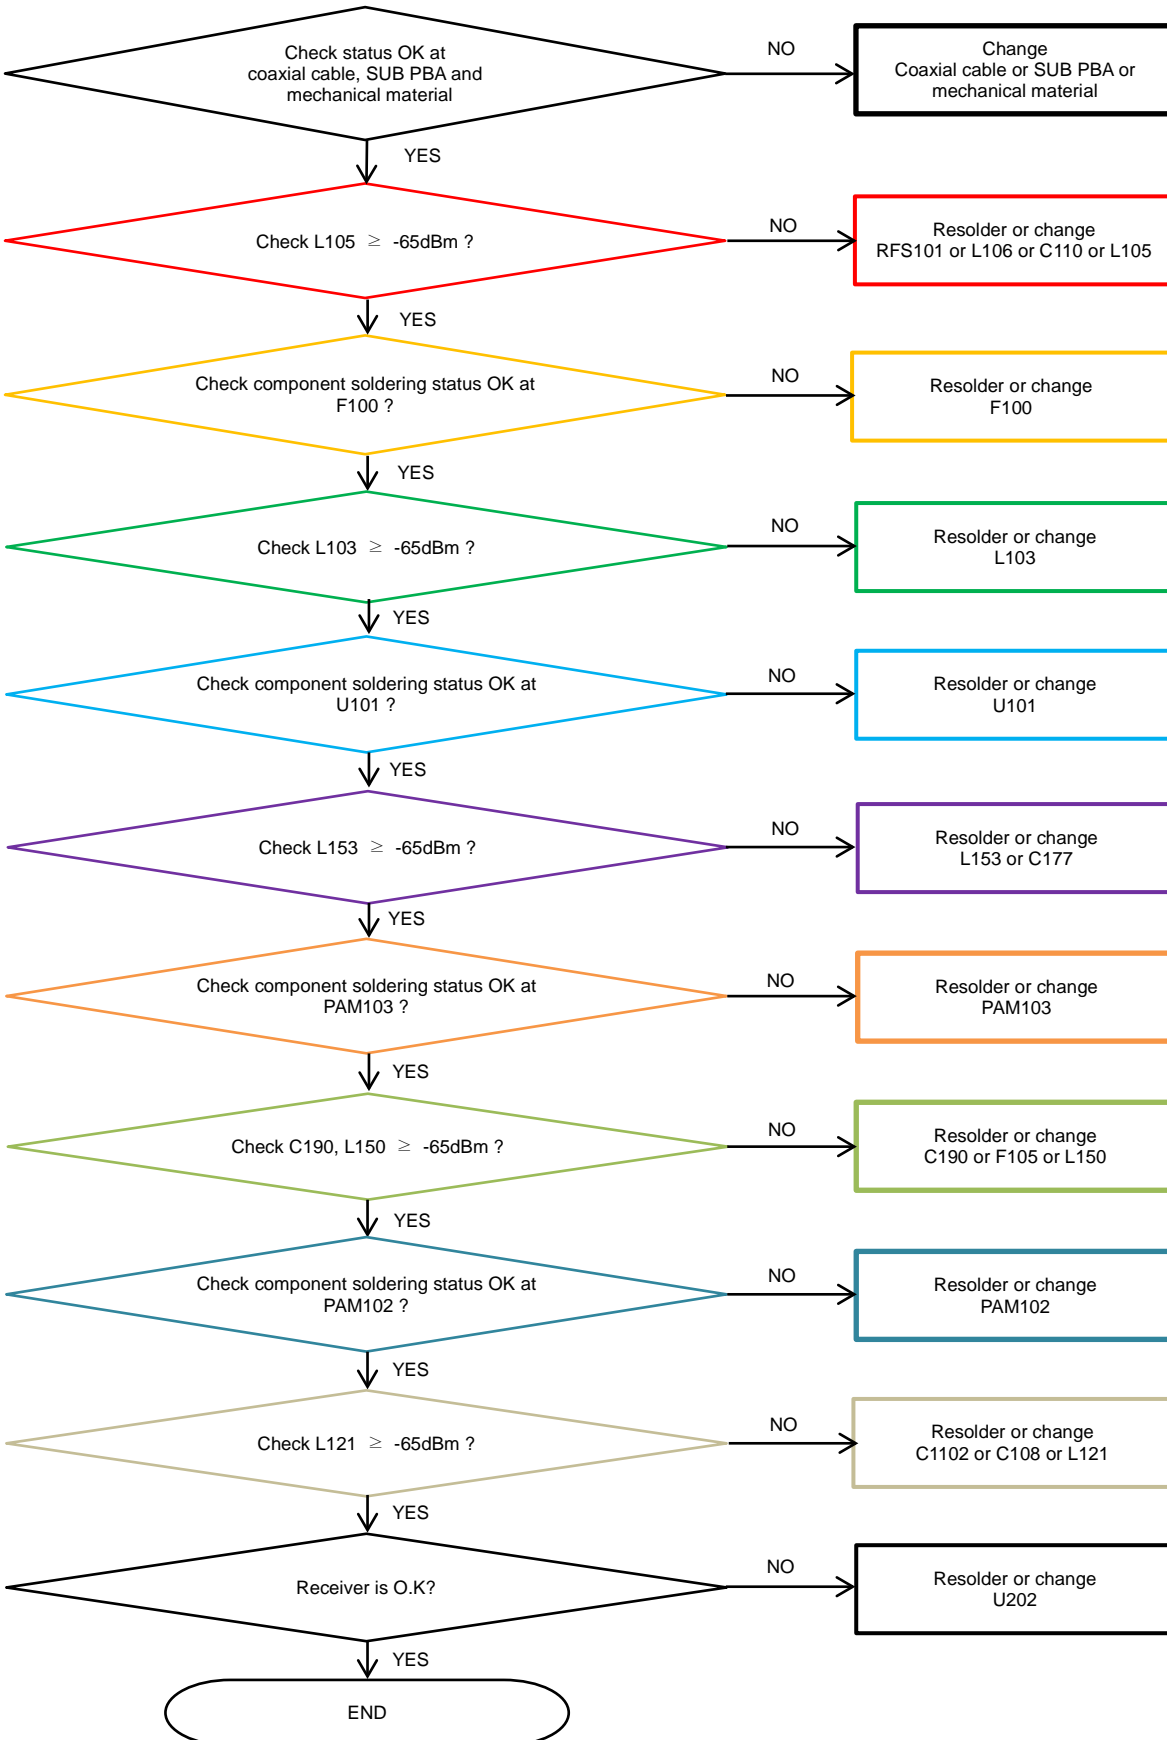


8. Level 3 Repair

8-4-26. GSM1800/1900, WCDMA B2, LTE B2/3/25 Rx

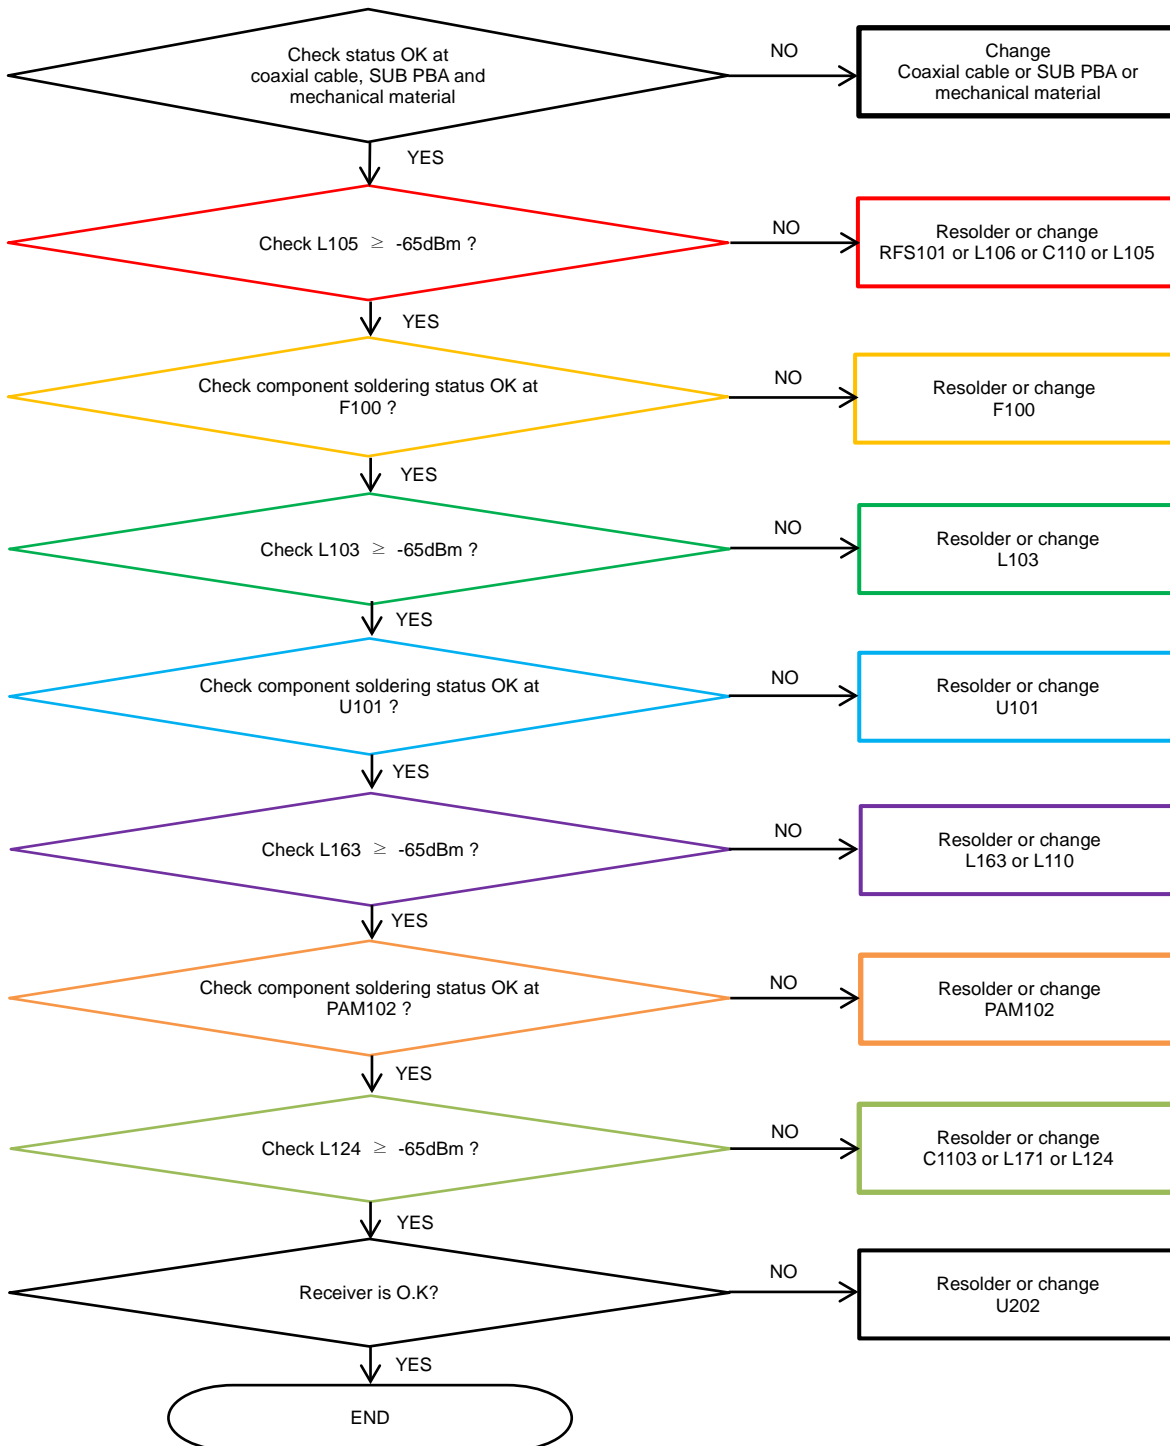


8. Level 3 Repair

8-4-27. LTE B3 4Rx D

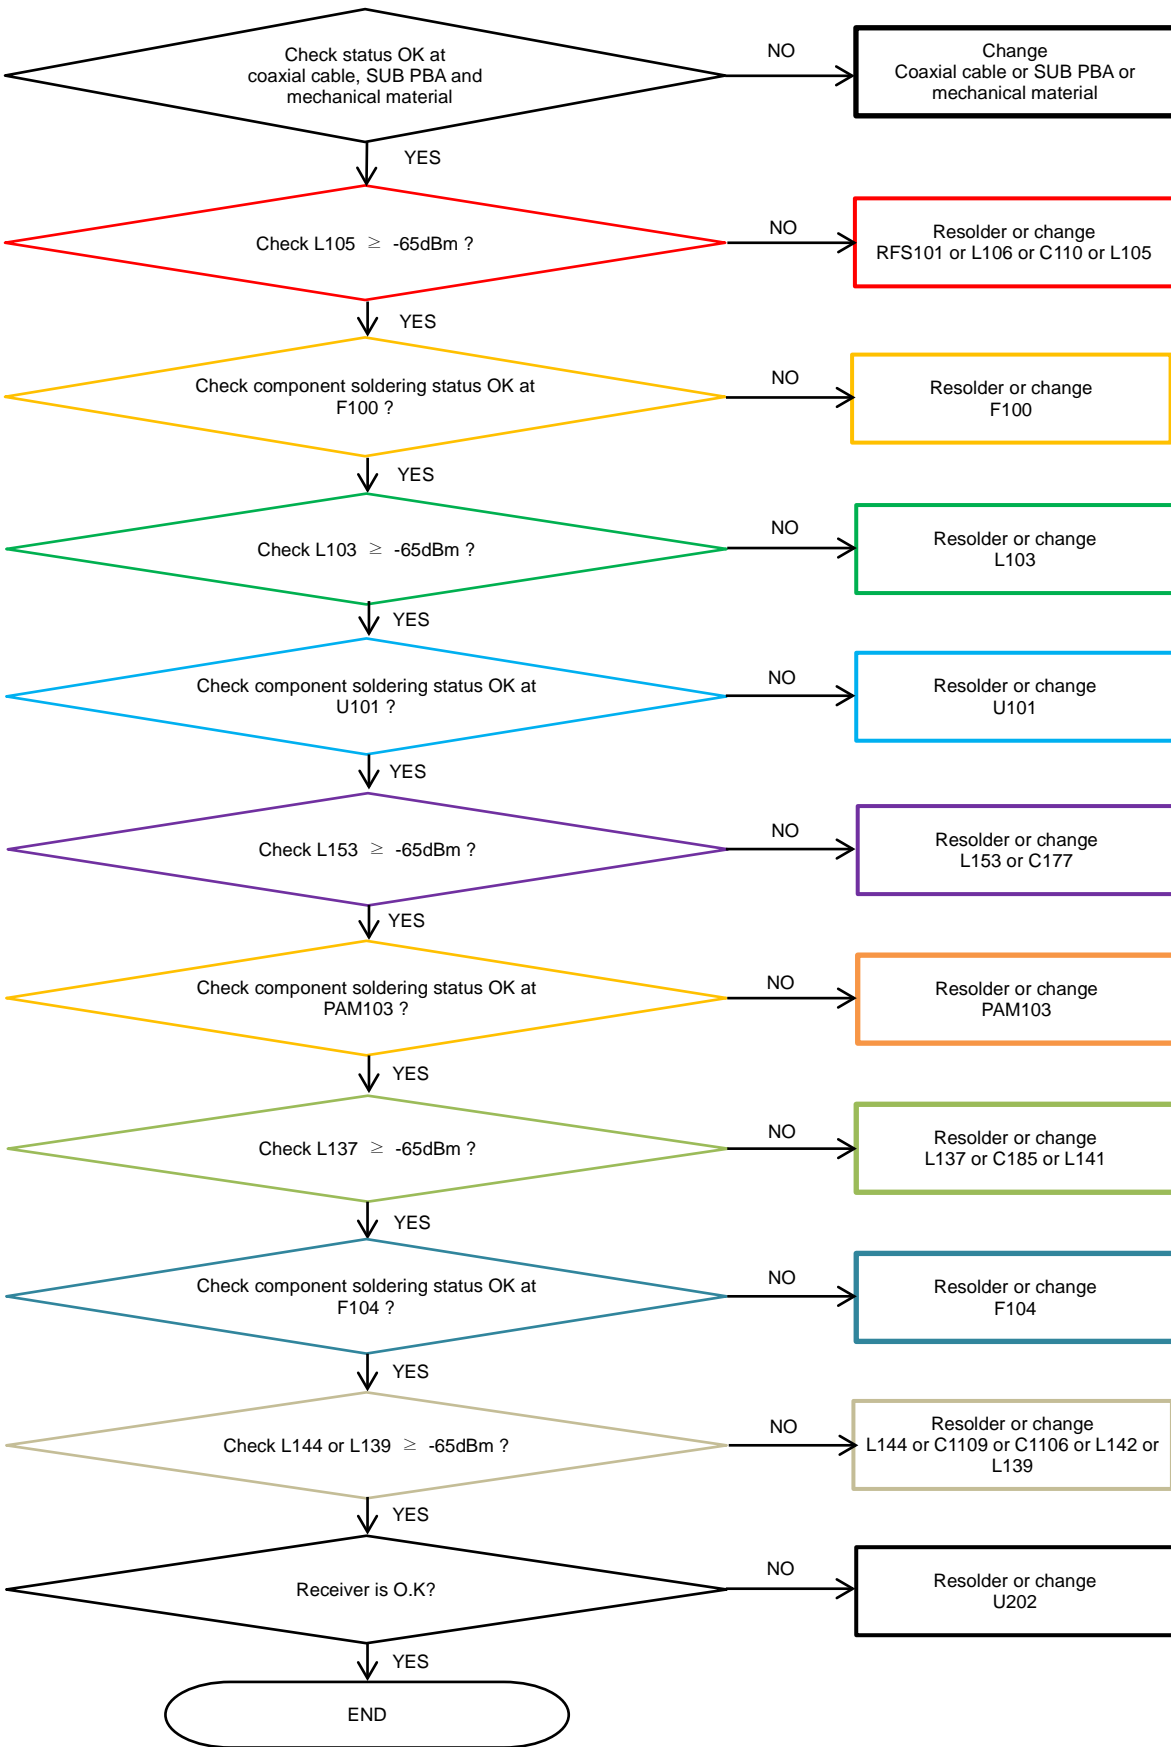


8. Level 3 Repair

8-4-28. LTE B1/4 4Rx

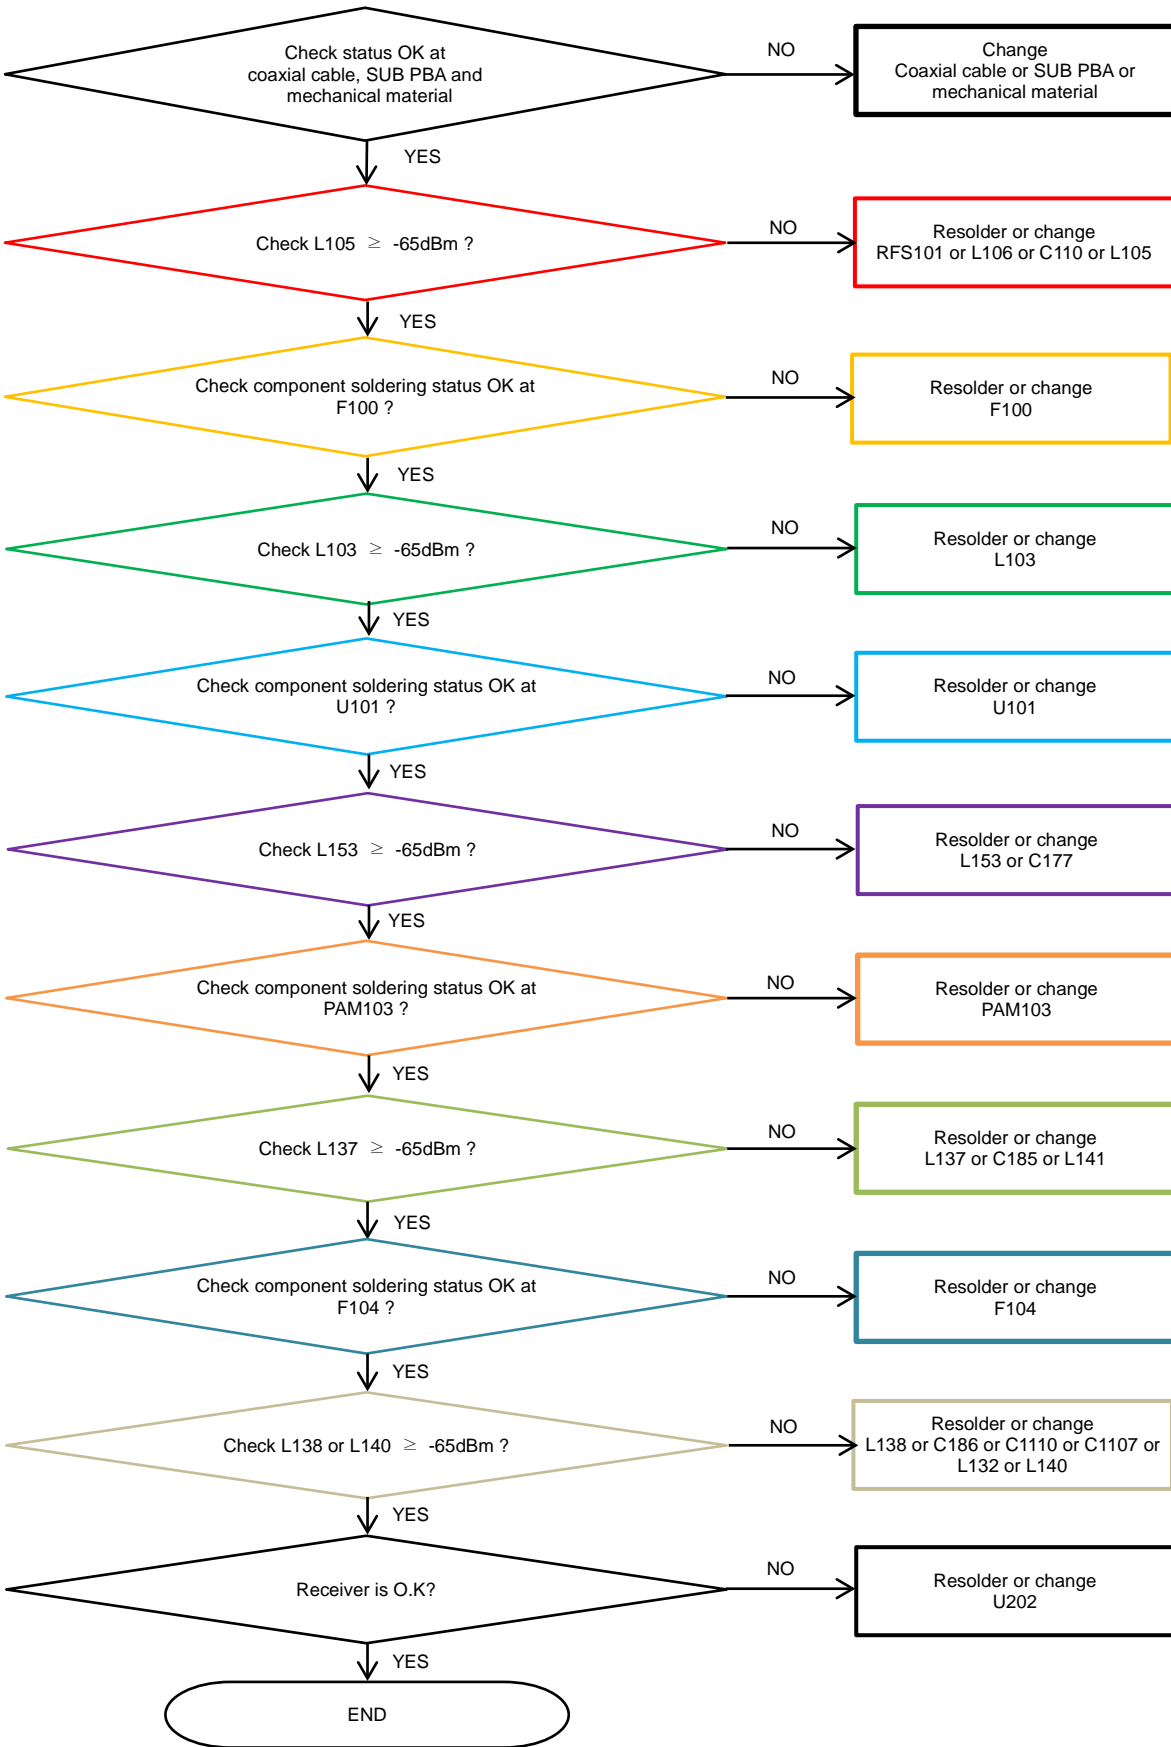


8. Level 3 Repair

8-4-29. LTE B7/38/40/41 Rx

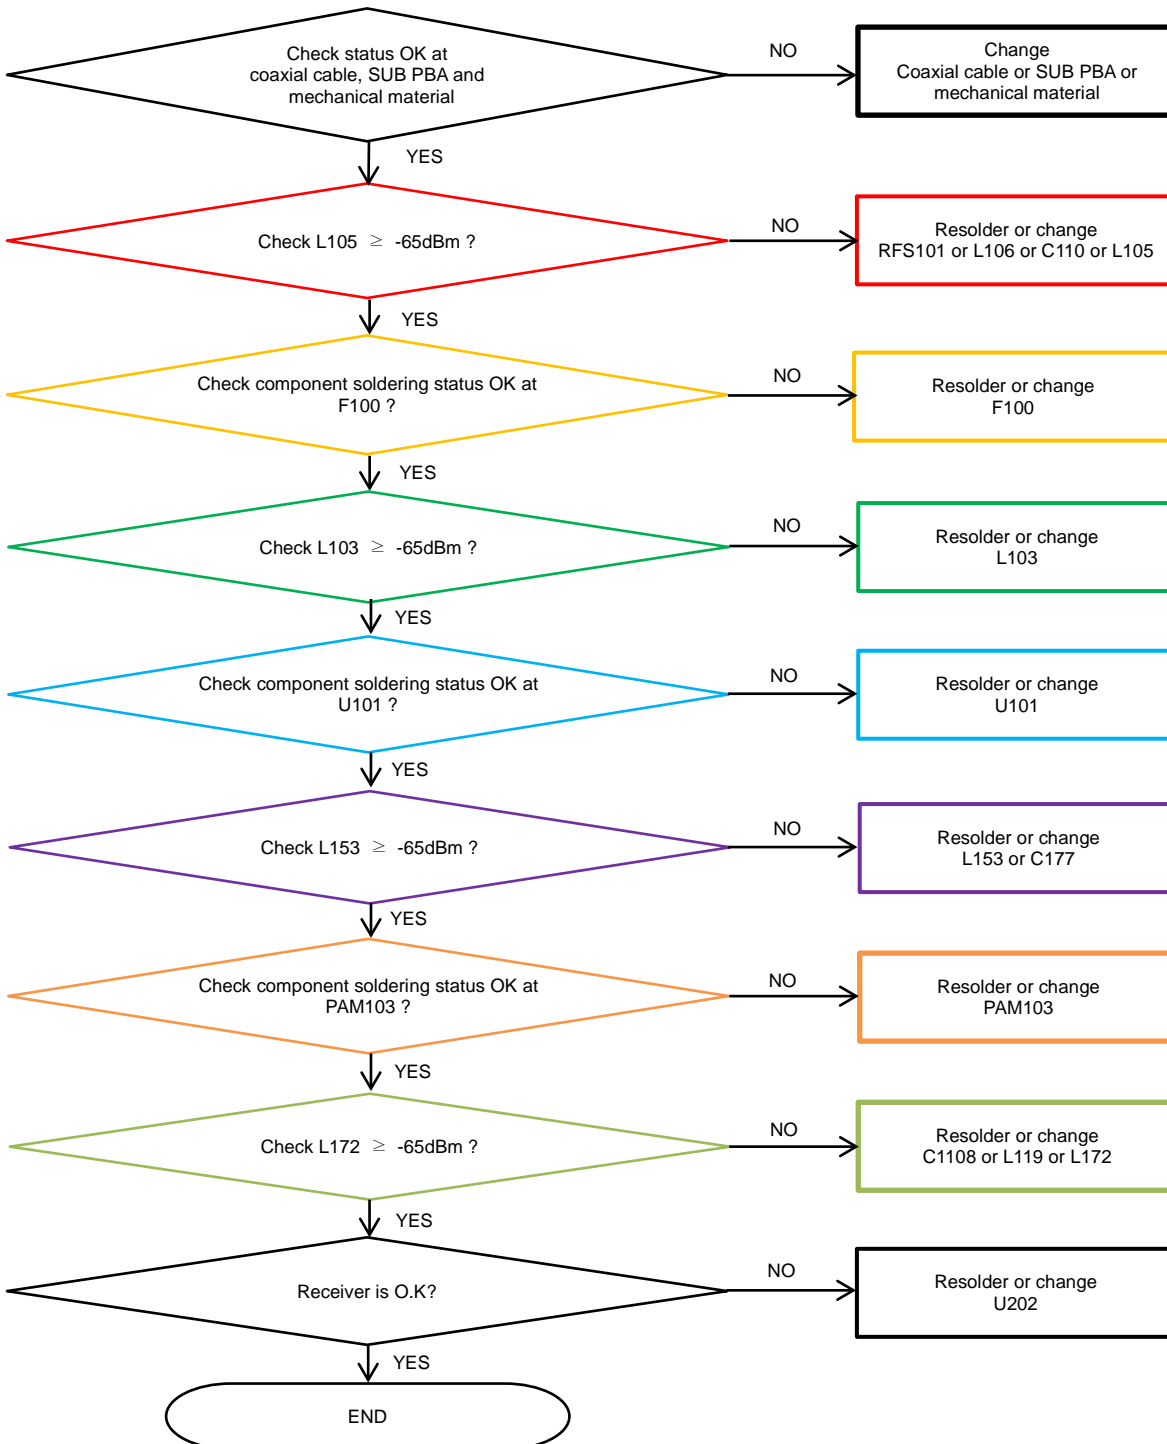


8. Level 3 Repair

8-4-30. LTE B5/8/12/13/17/18/19/20/26/28 , WCDMA B5/8 , GSM850/900 DRx

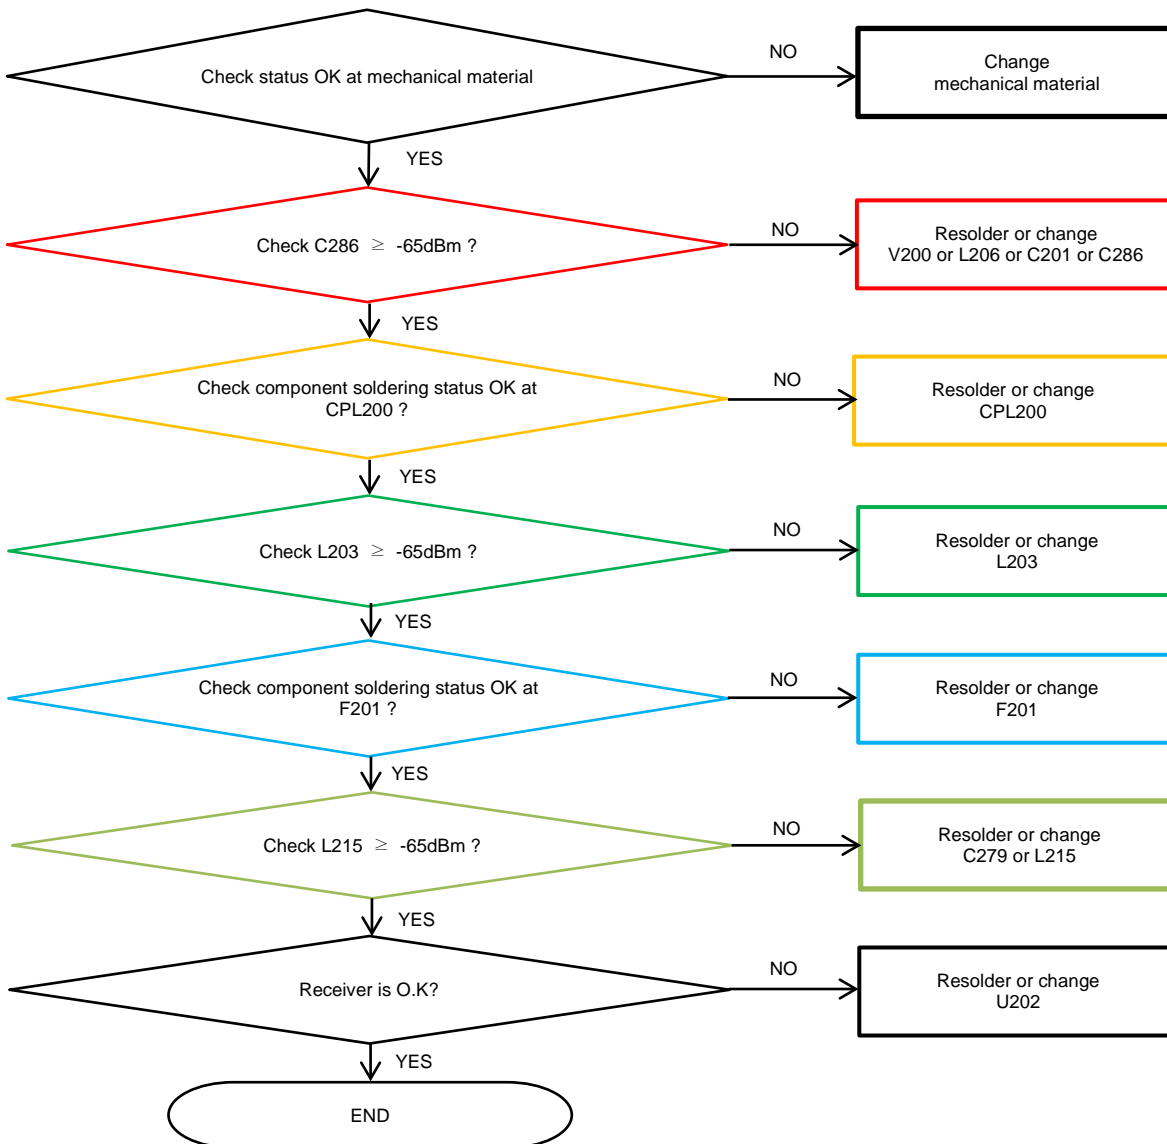


8. Level 3 Repair

8-4-31. LTE B1/4/7/38/40/41/66 , WCDMA B1/4 DRx

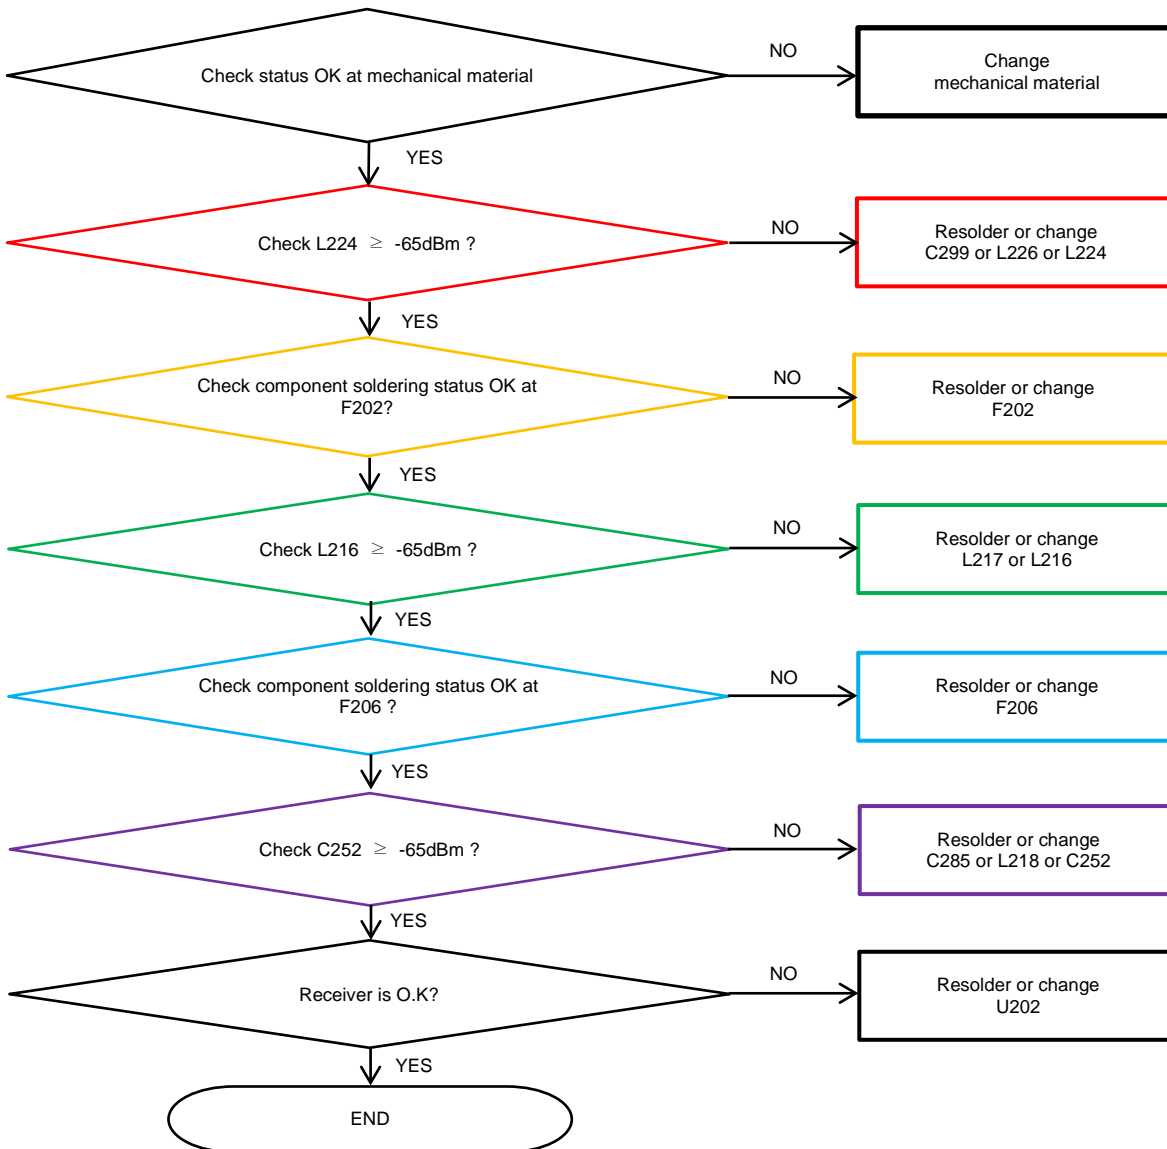


8. Level 3 Repair

8-4-32. LTE B2/3/25 , WCDMA B2 , GSM1800/1900 DRx

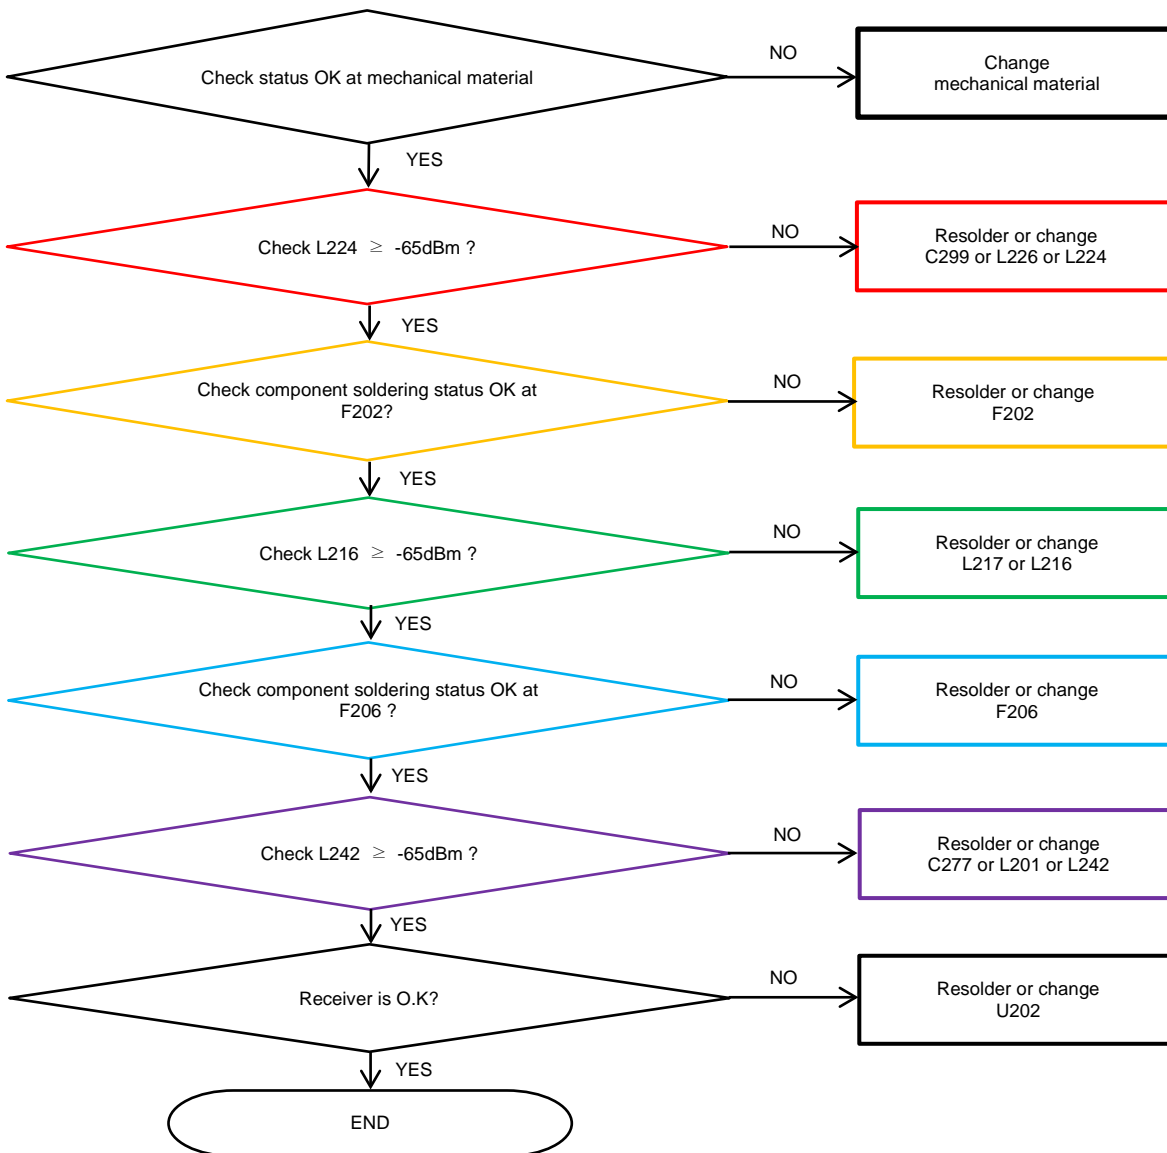


8. Level 3 Repair

8-4-33. LTE B32 DRx

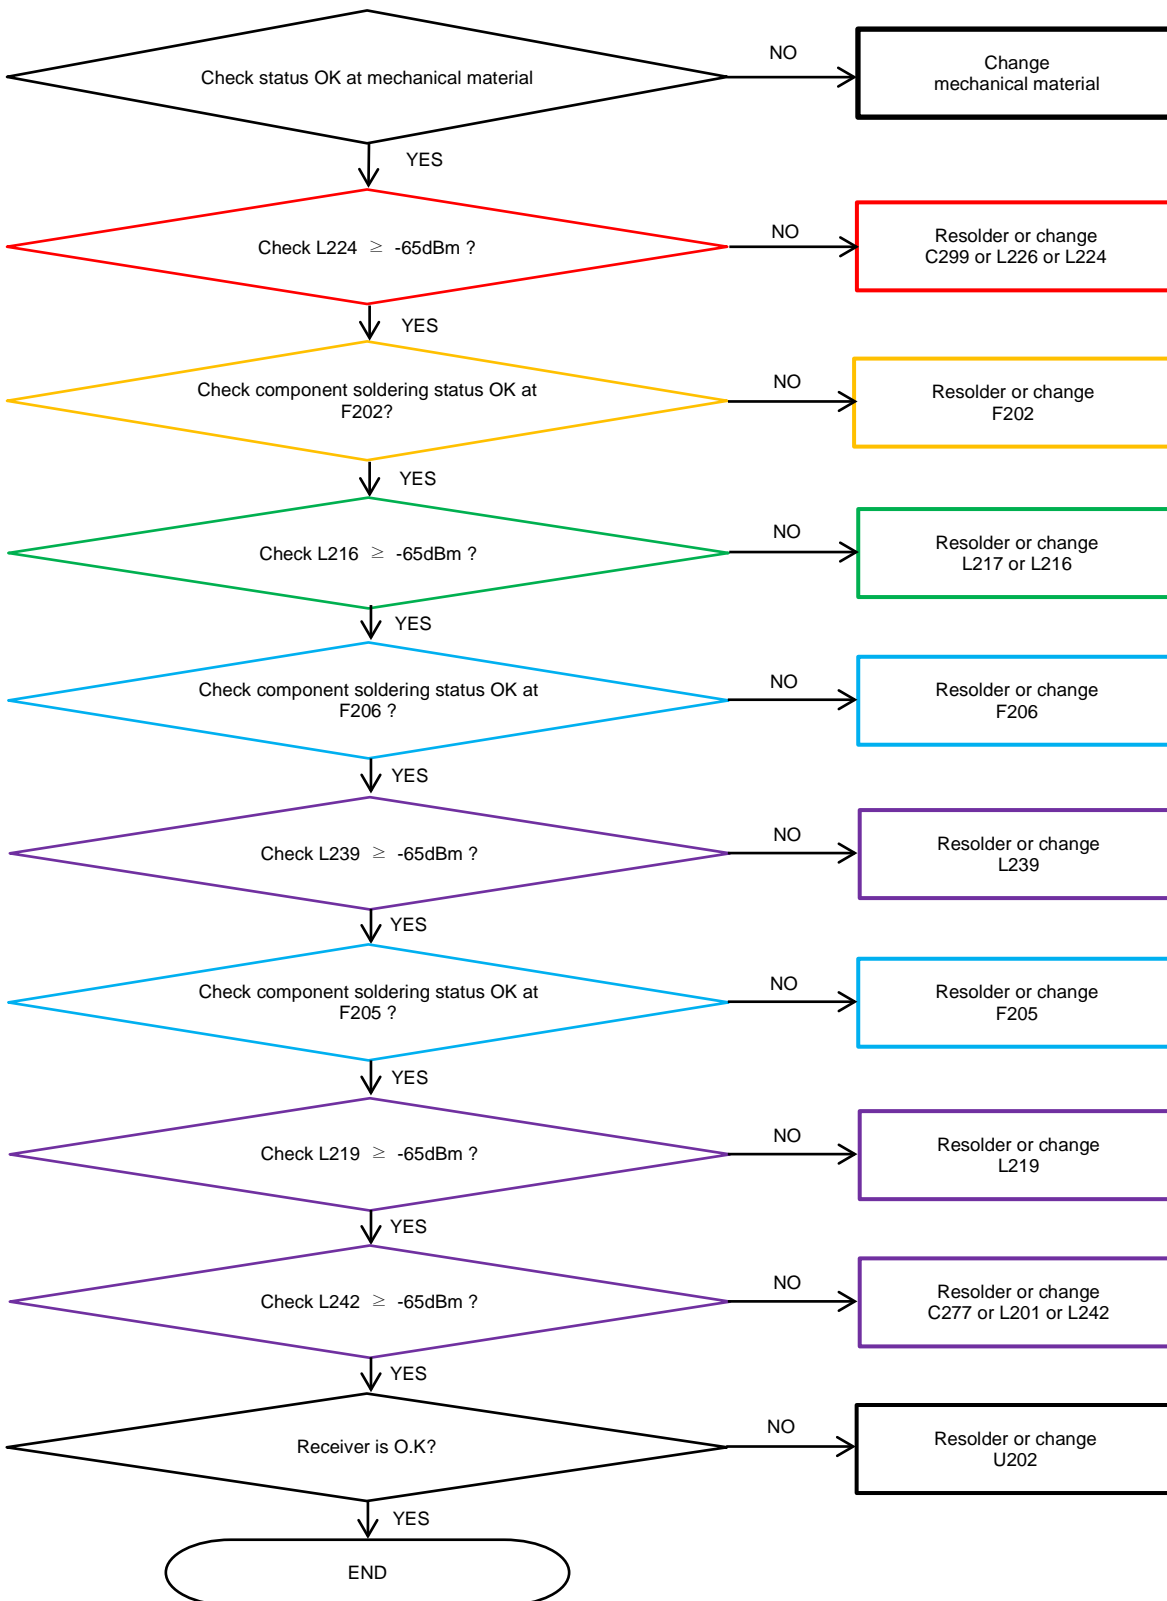


8. Level 3 Repair

8-4-34. LTE B39 DRx , B1/4/7 4Rx(DRx2)

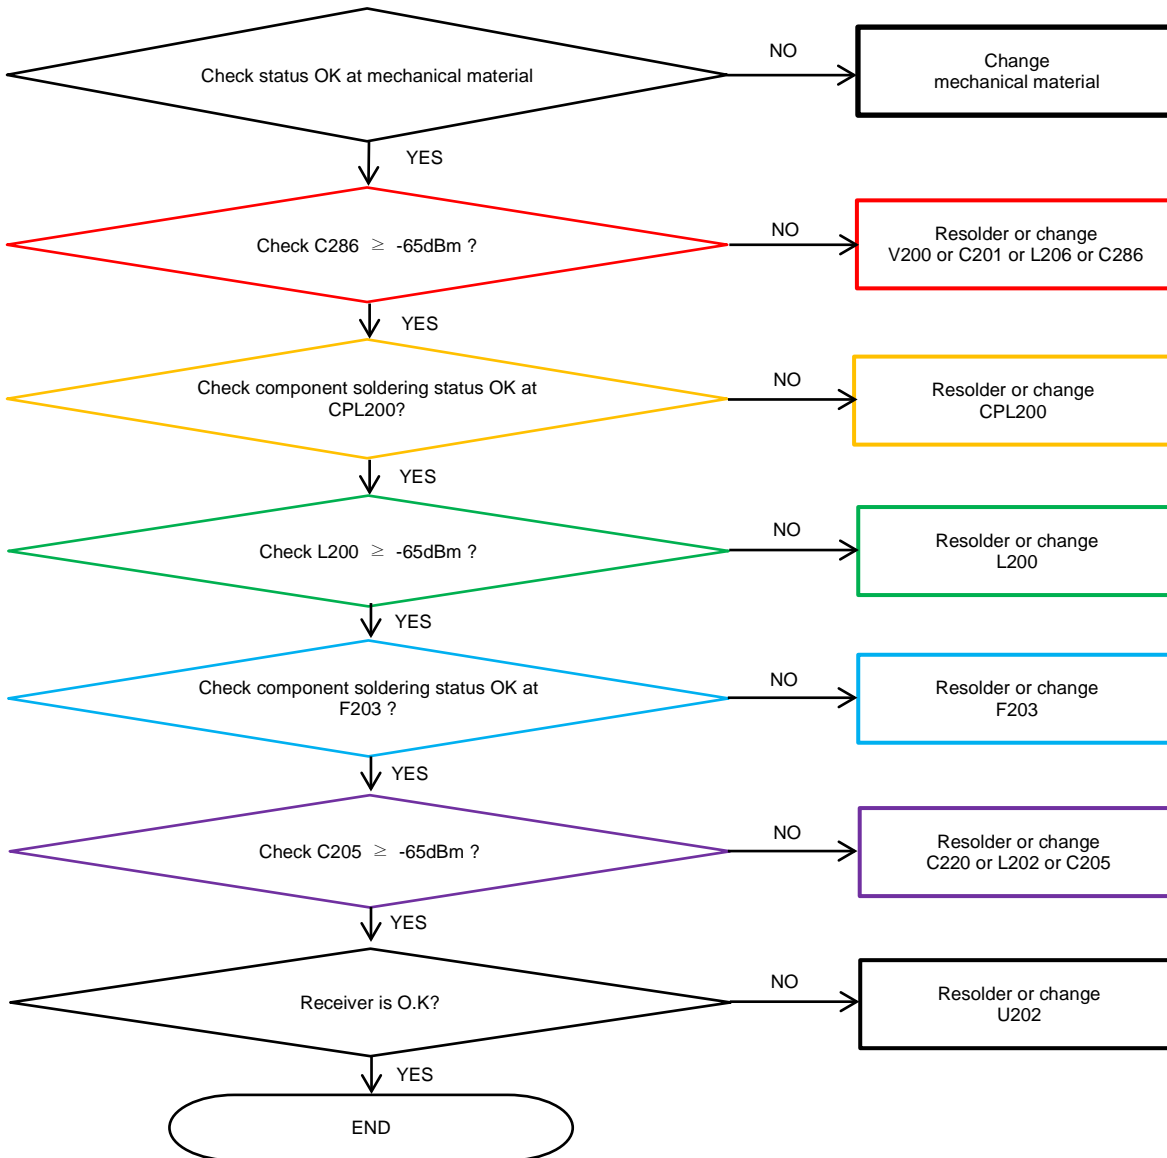


8. Level 3 Repair

8-4-35. LTE B40 4Rx(DRx2)

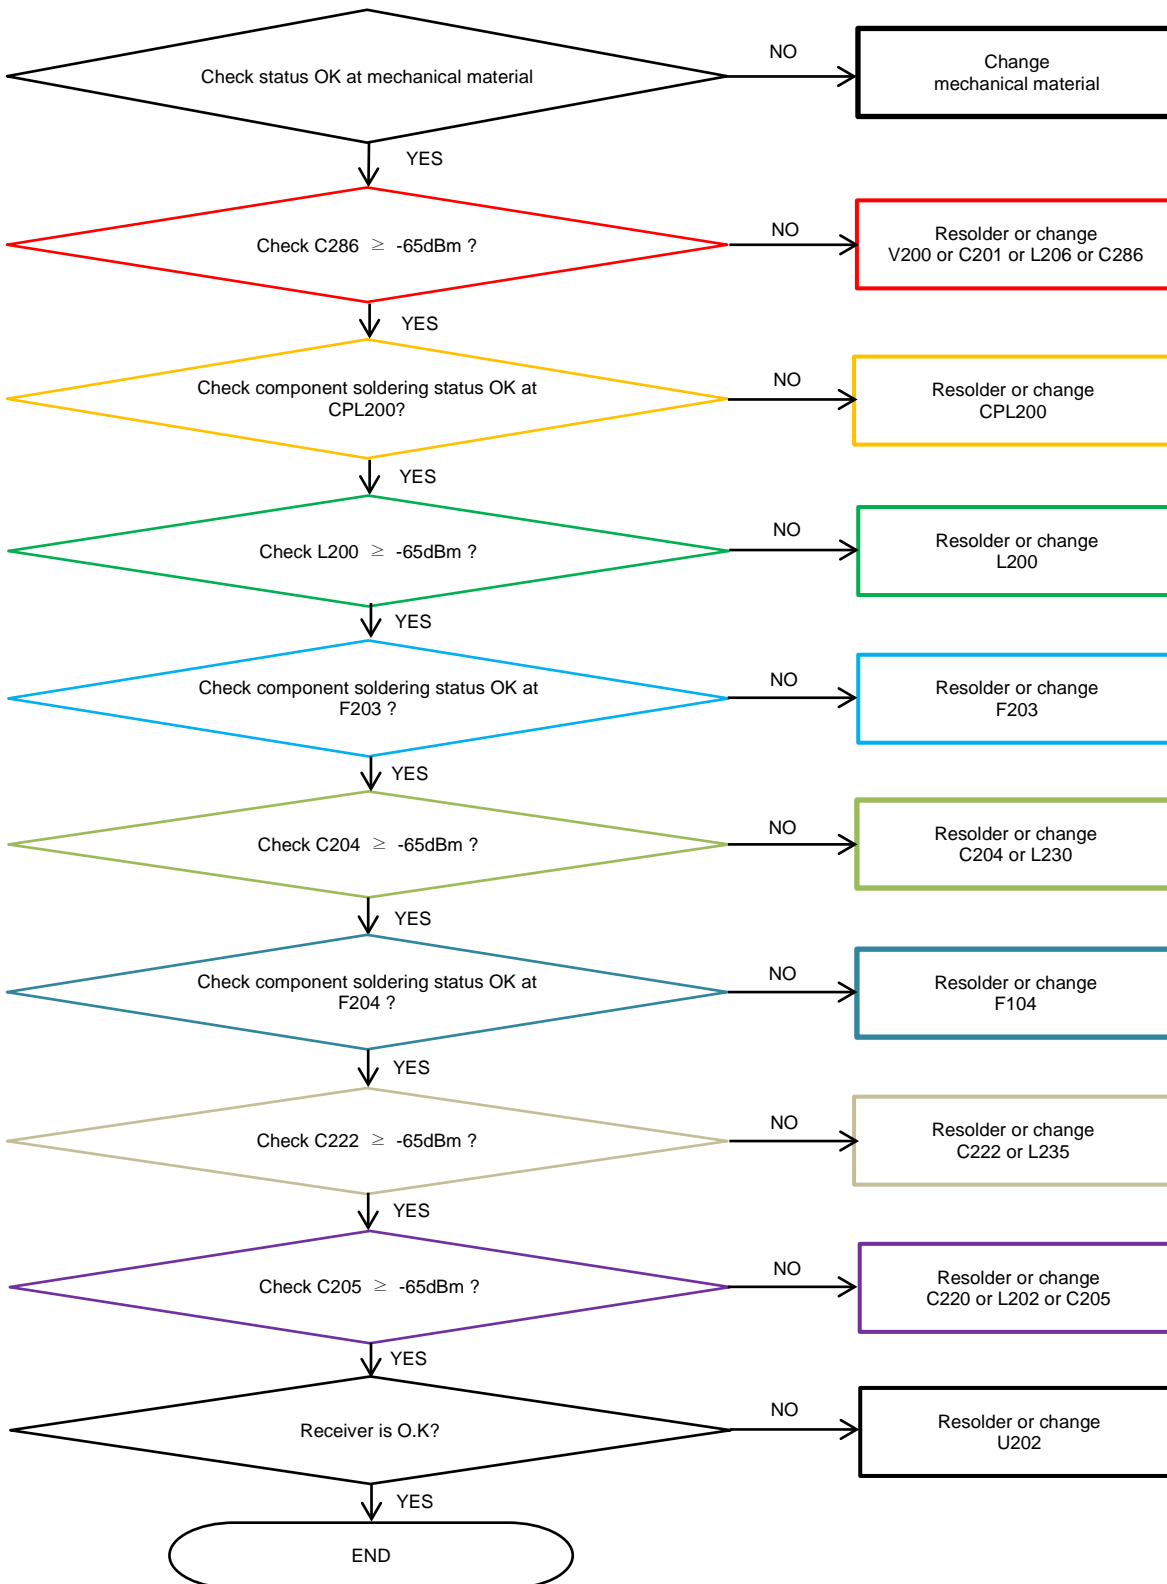


8. Level 3 Repair

8-4-36. LTE B3 4RxDRx2

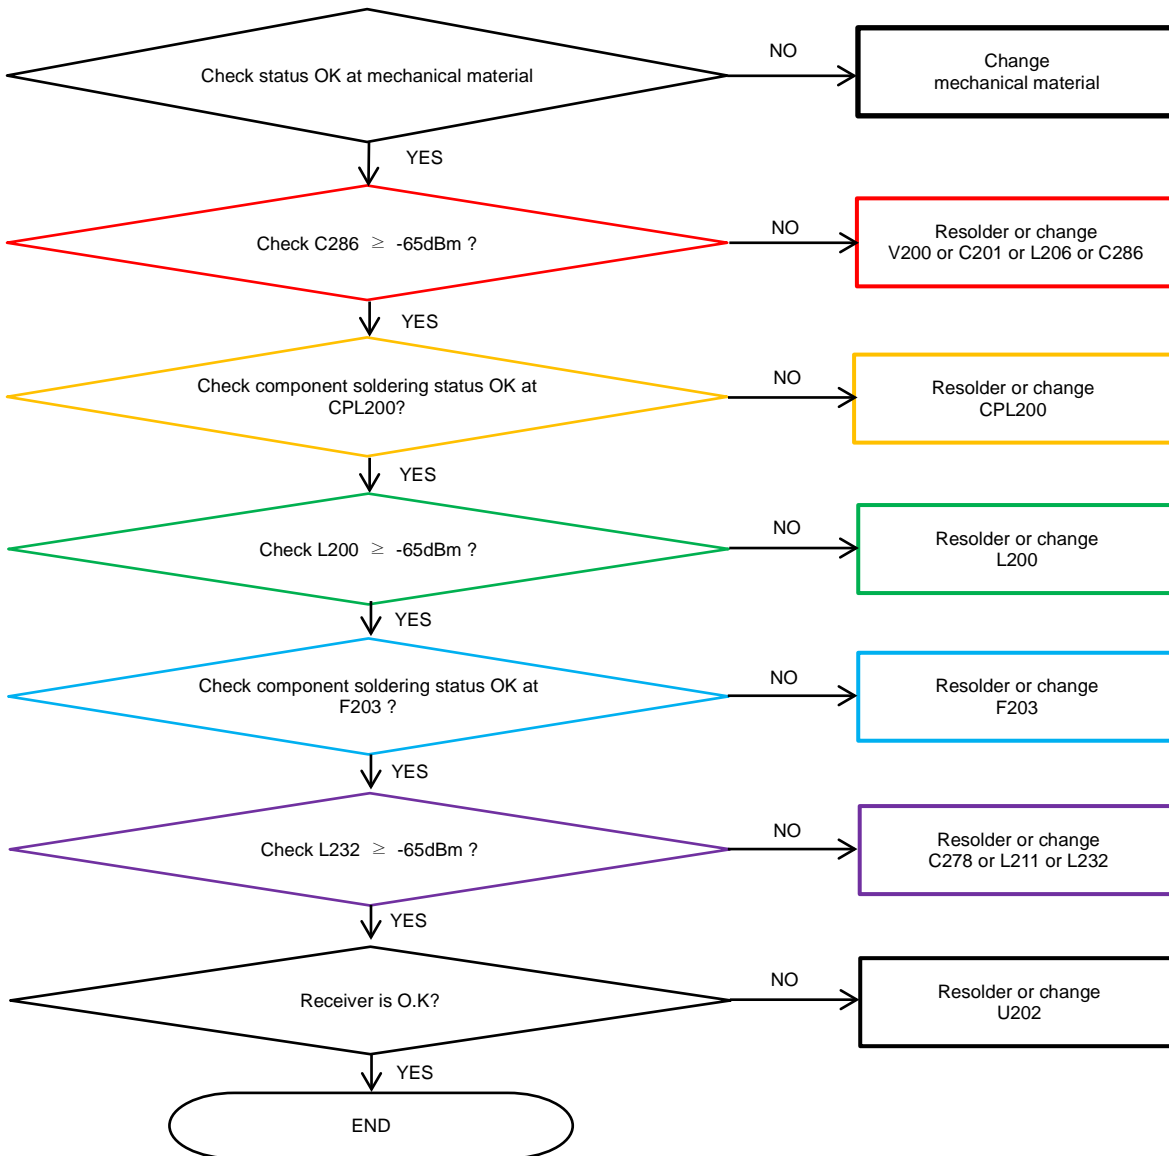


8. Level 3 Repair

8-4-37. WCDMA B5/8, LTE B5/8/12/17/18/19/20/26/28 Tx

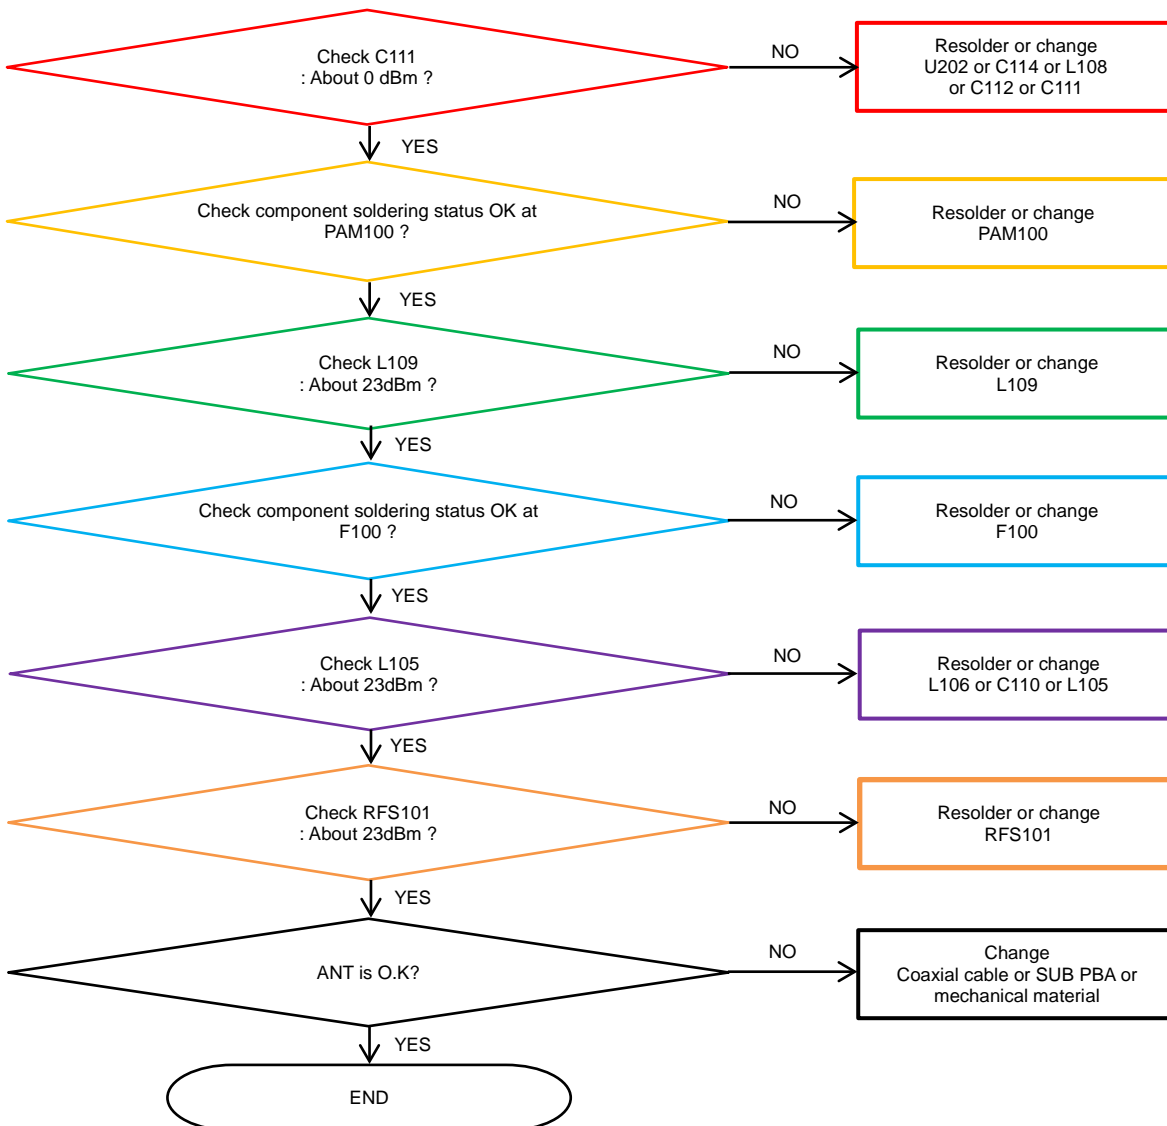


8. Level 3 Repair

8-4-38. LTE B13 Tx

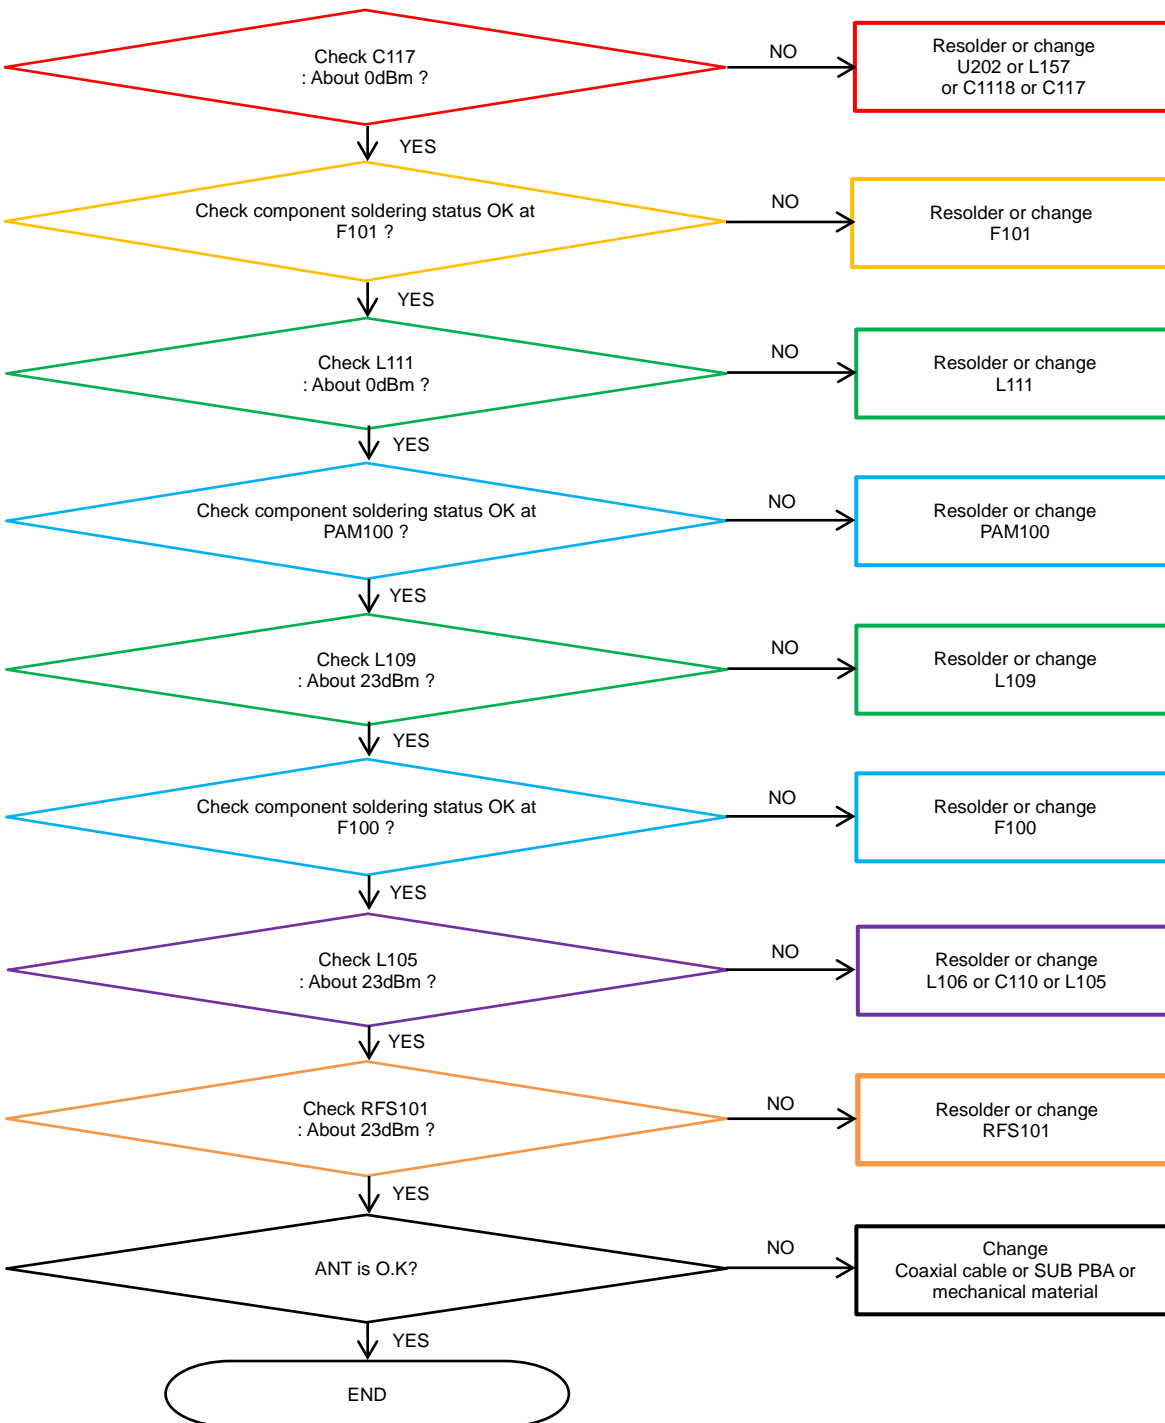


8. Level 3 Repair

8-4-39. GSM 850/900 Tx

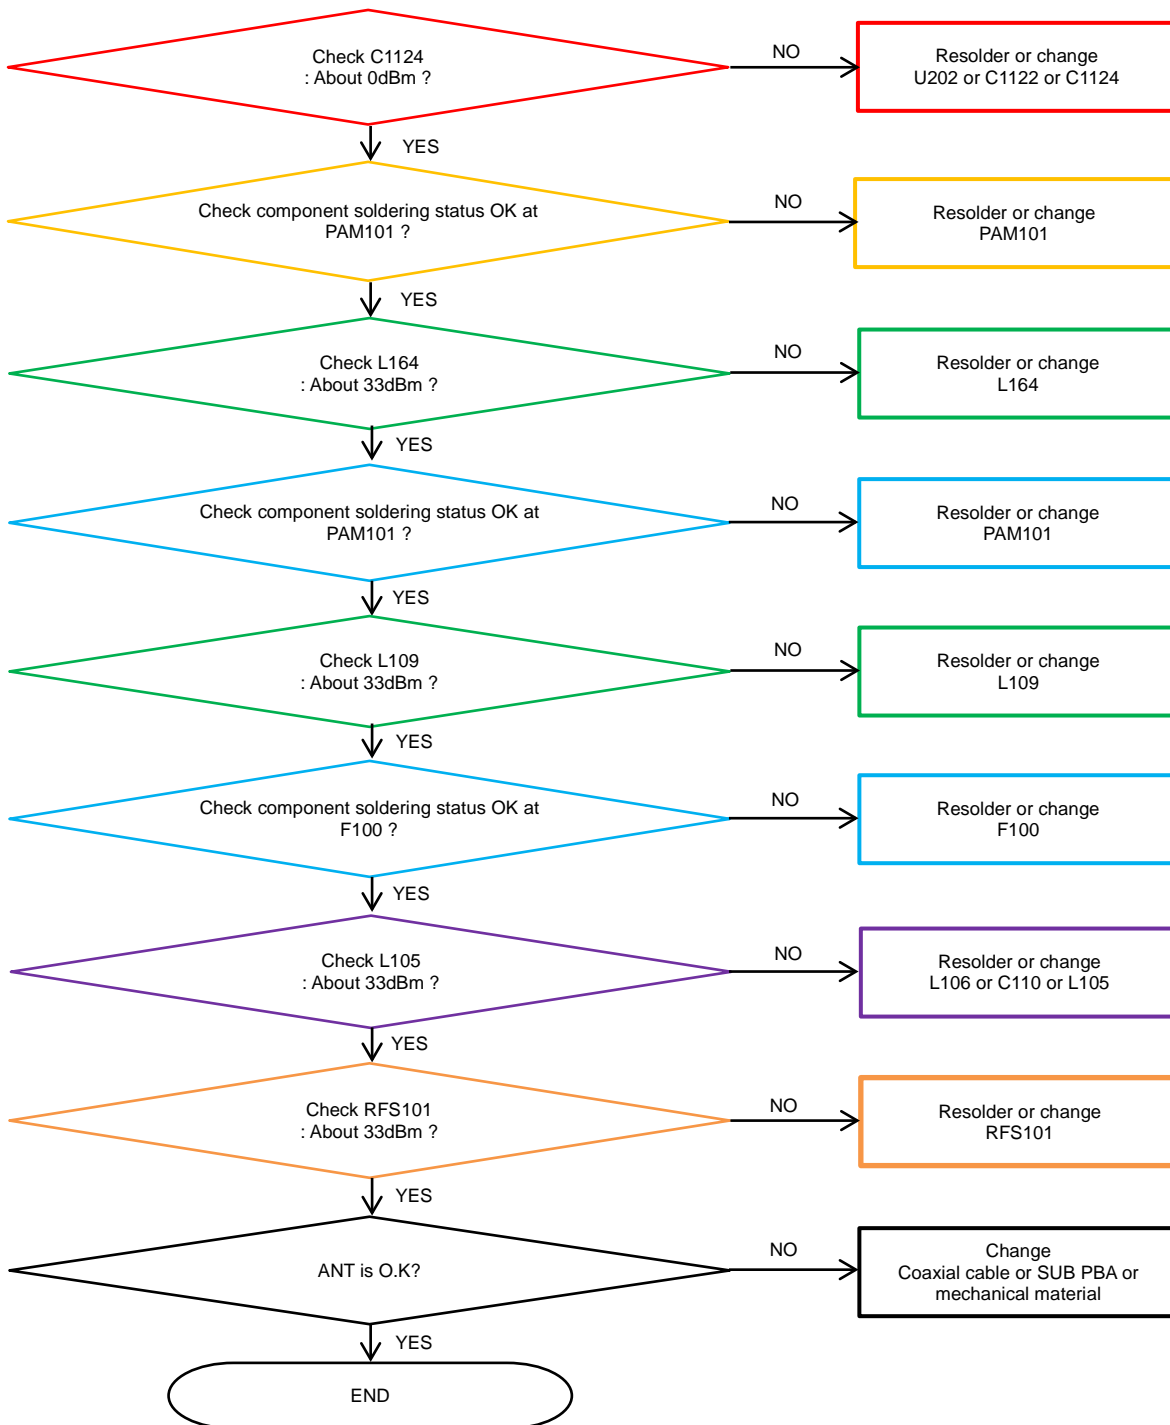


8. Level 3 Repair

8-4-40. GSM 1800/1900 Tx

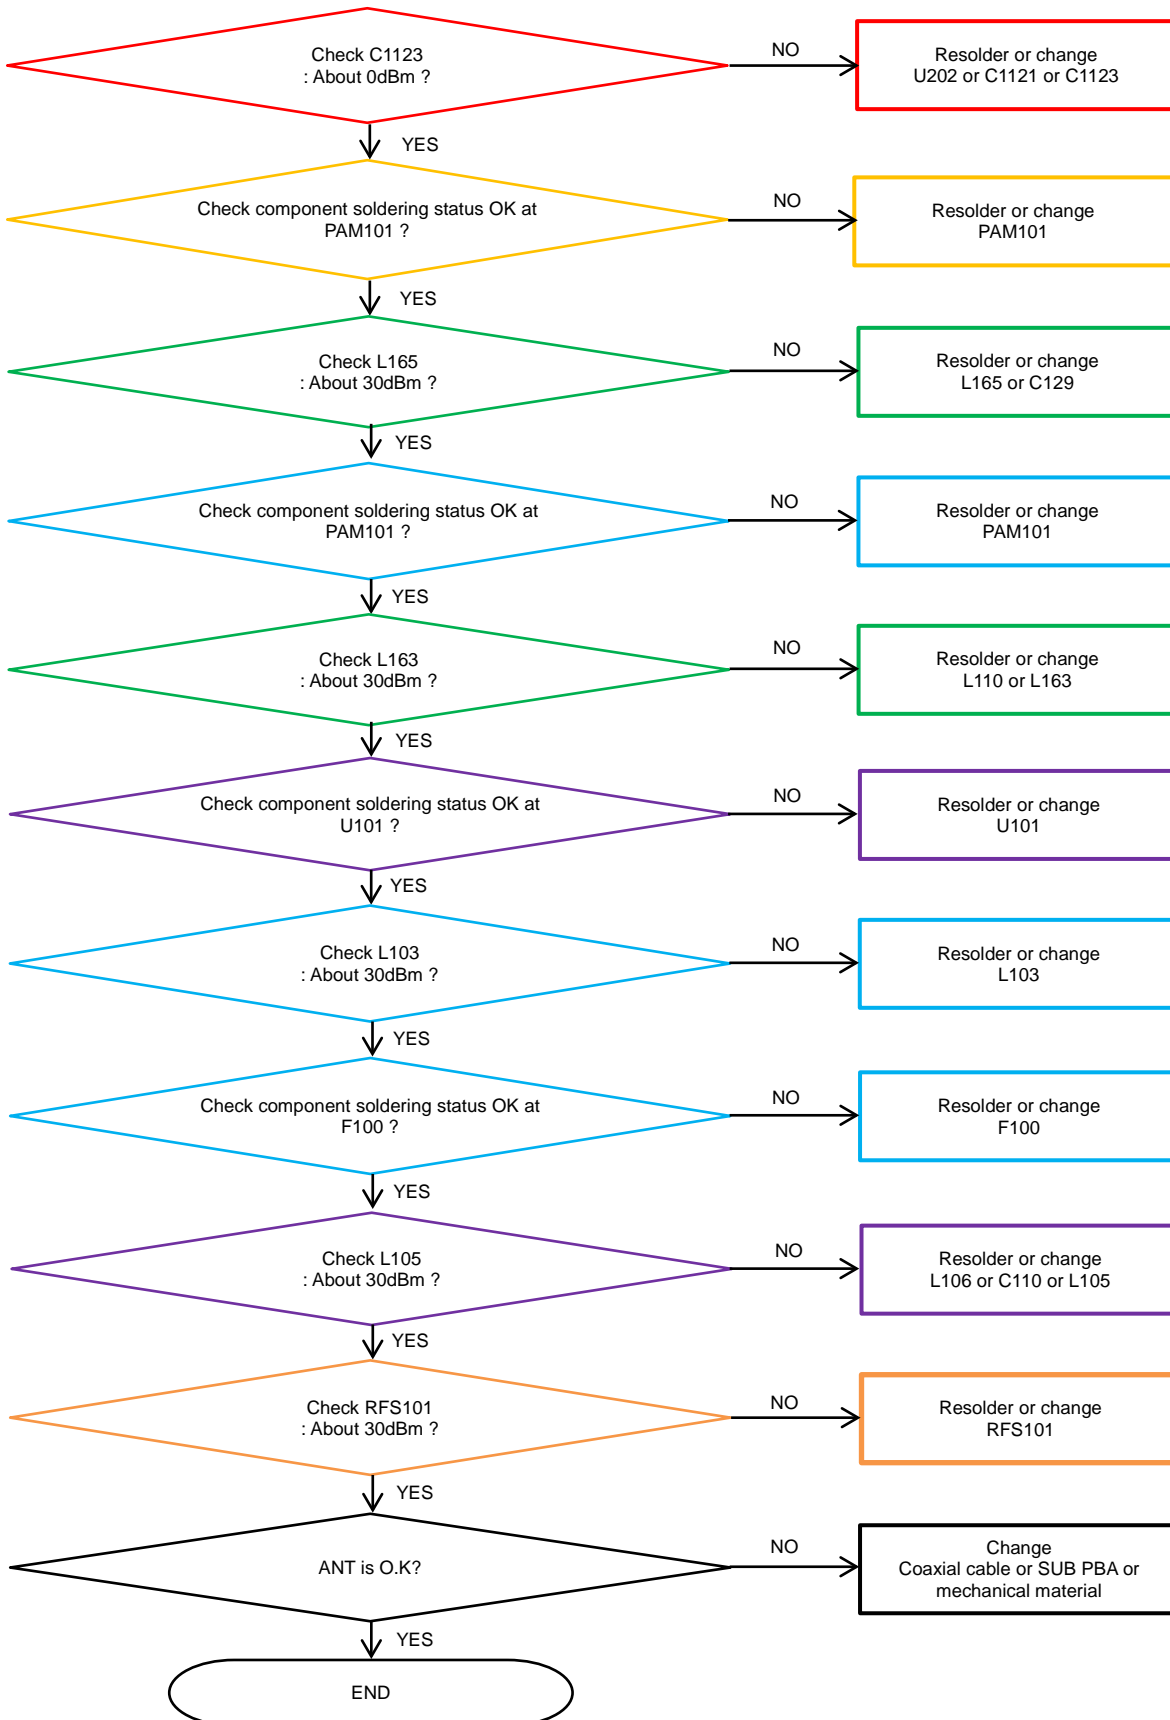


8. Level 3 Repair

8-4-41. WCDMA B1/2/4, TD-SCDMA B34/39, LTE B1/2/3/4/25/39 Tx

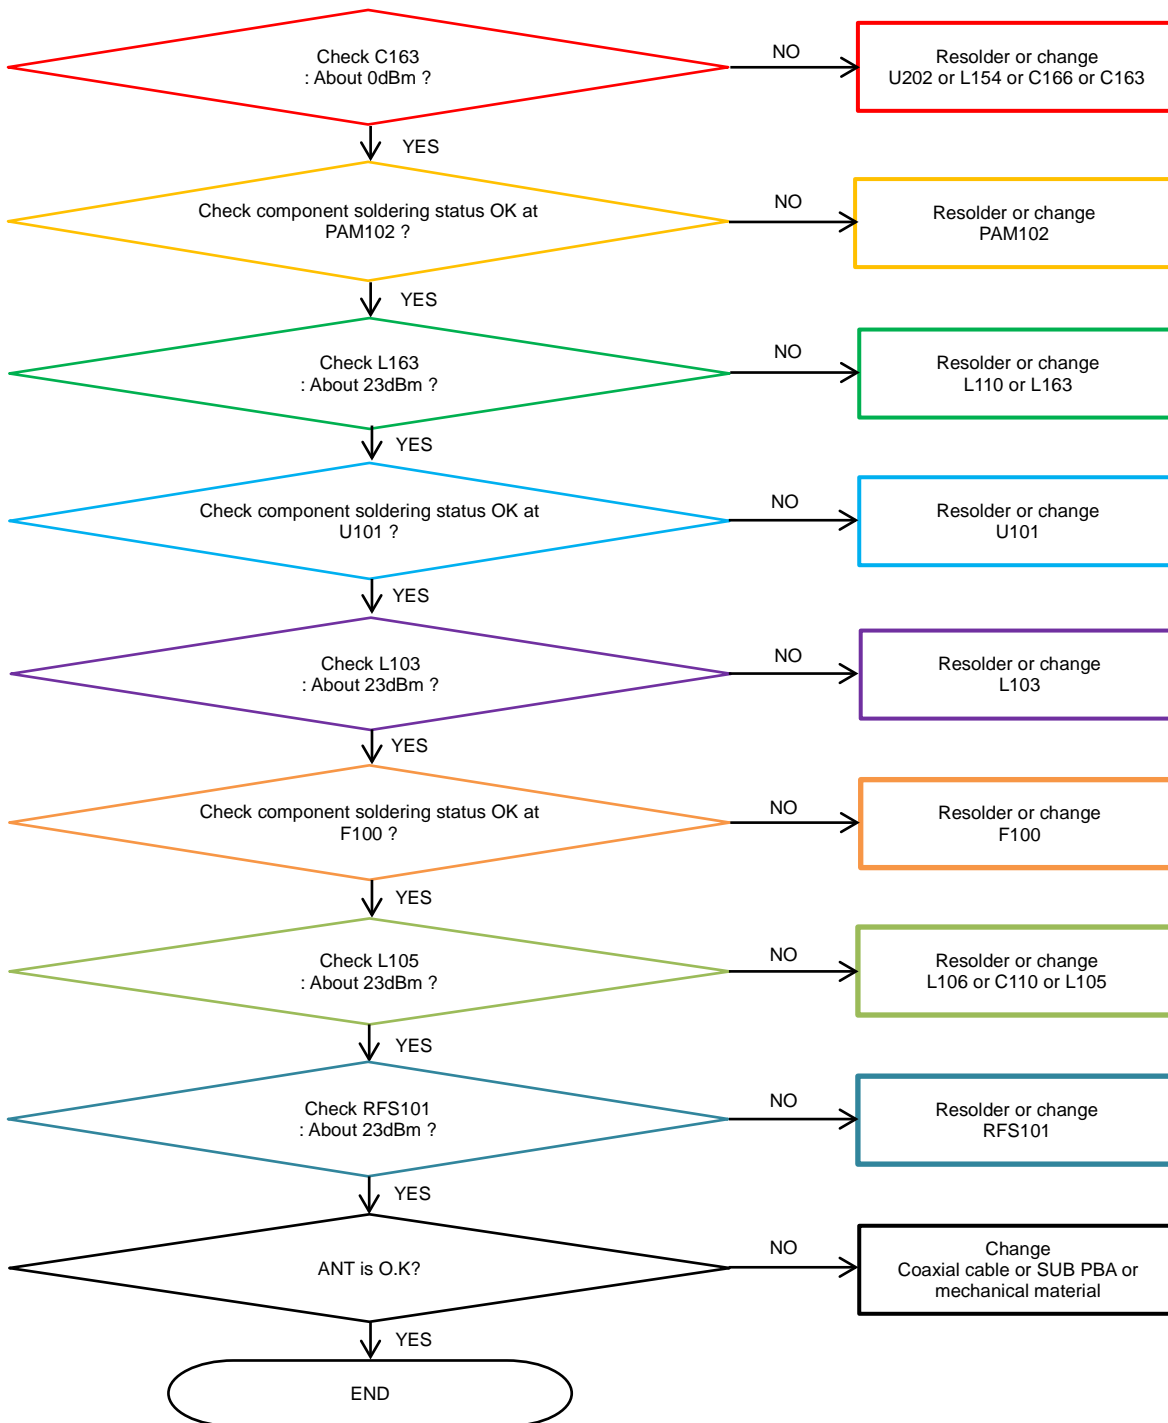


8. Level 3 Repair

8-4-42. LTE B7 Tx

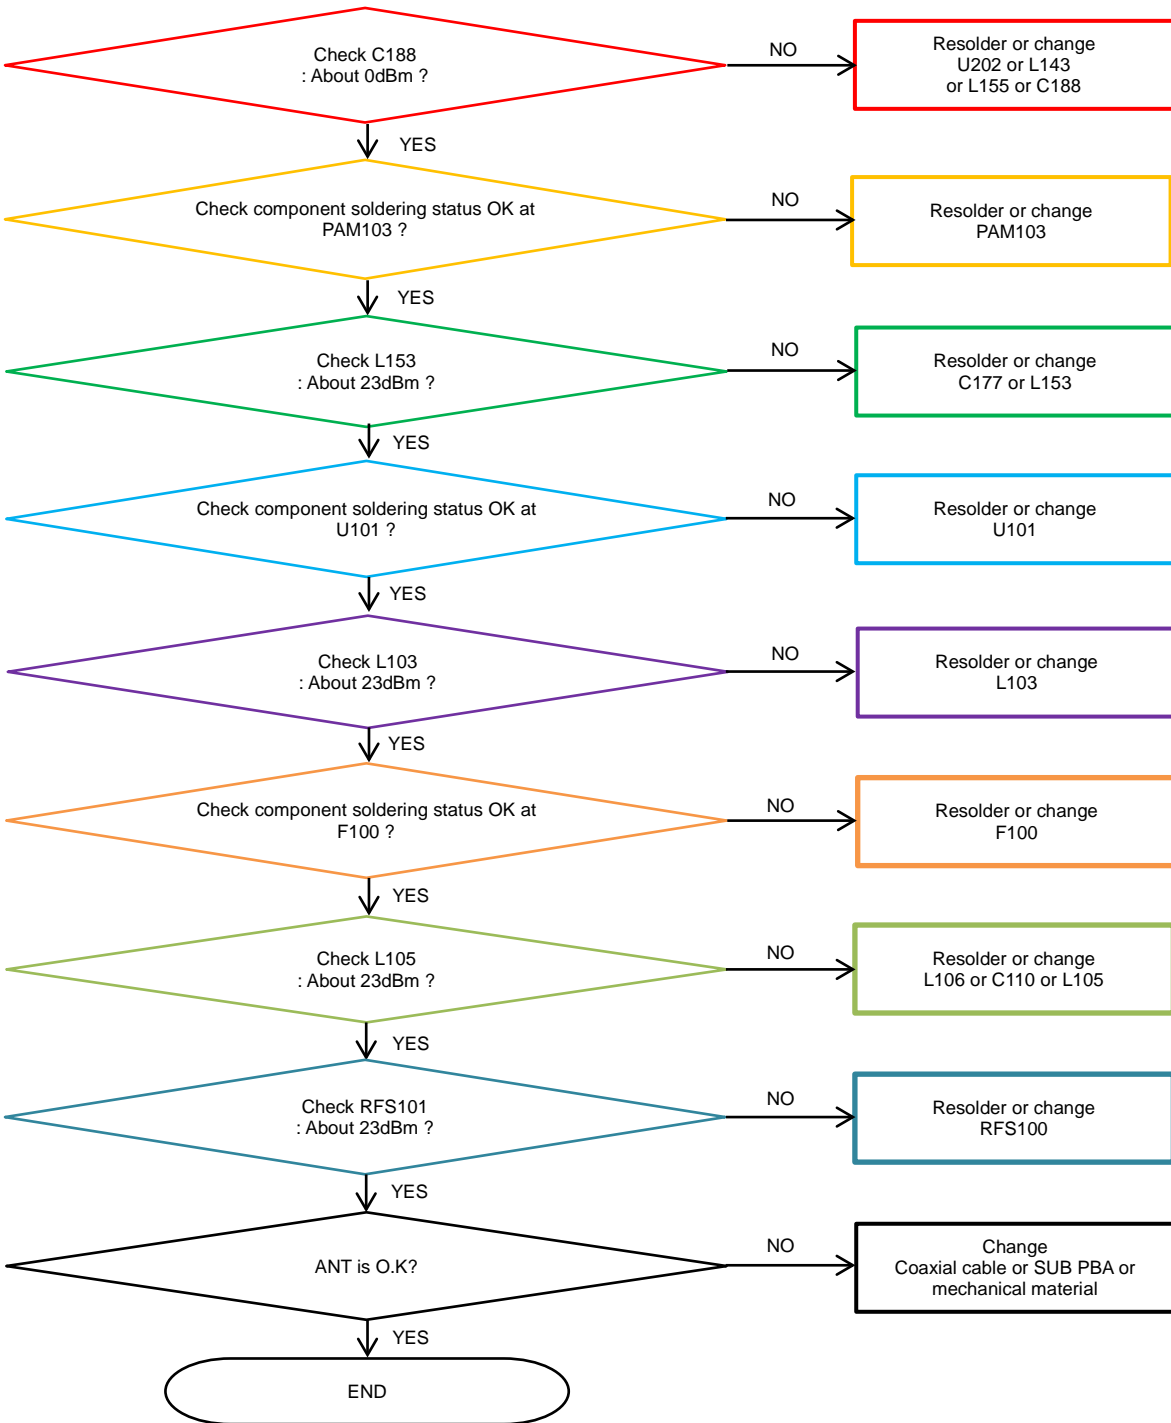


8. Level 3 Repair

8-4-43. LTE B38/40/41 Tx

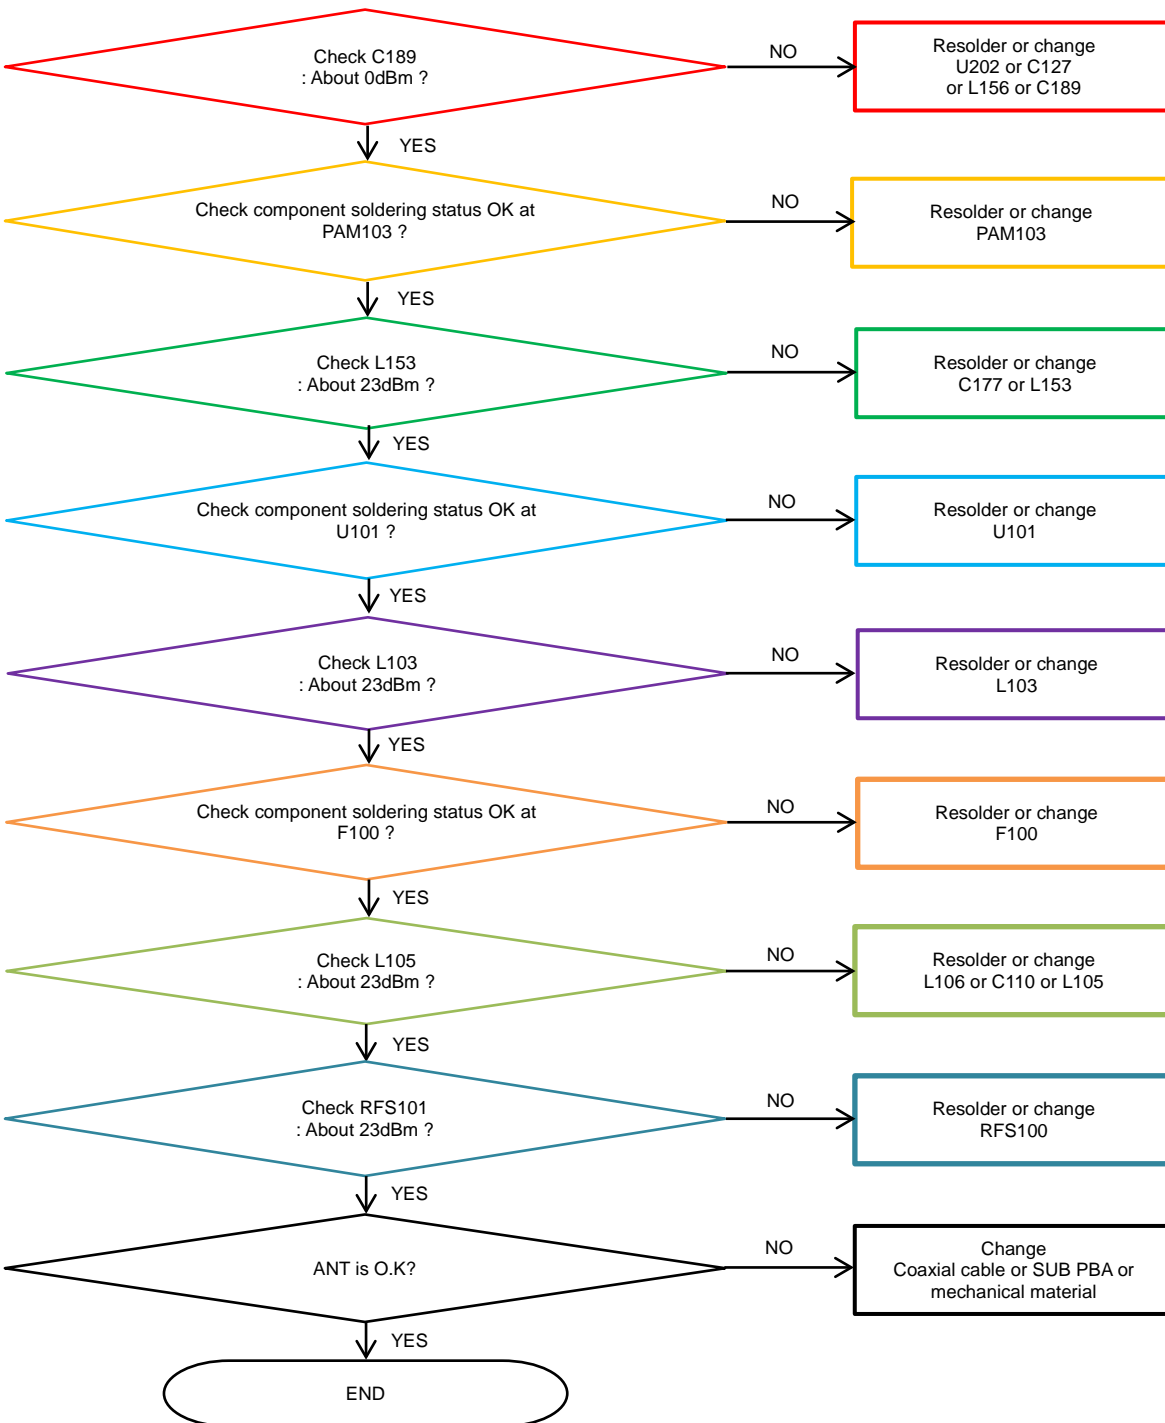


8. Level 3 Repair

8-4-44. Fingerprint Sensor

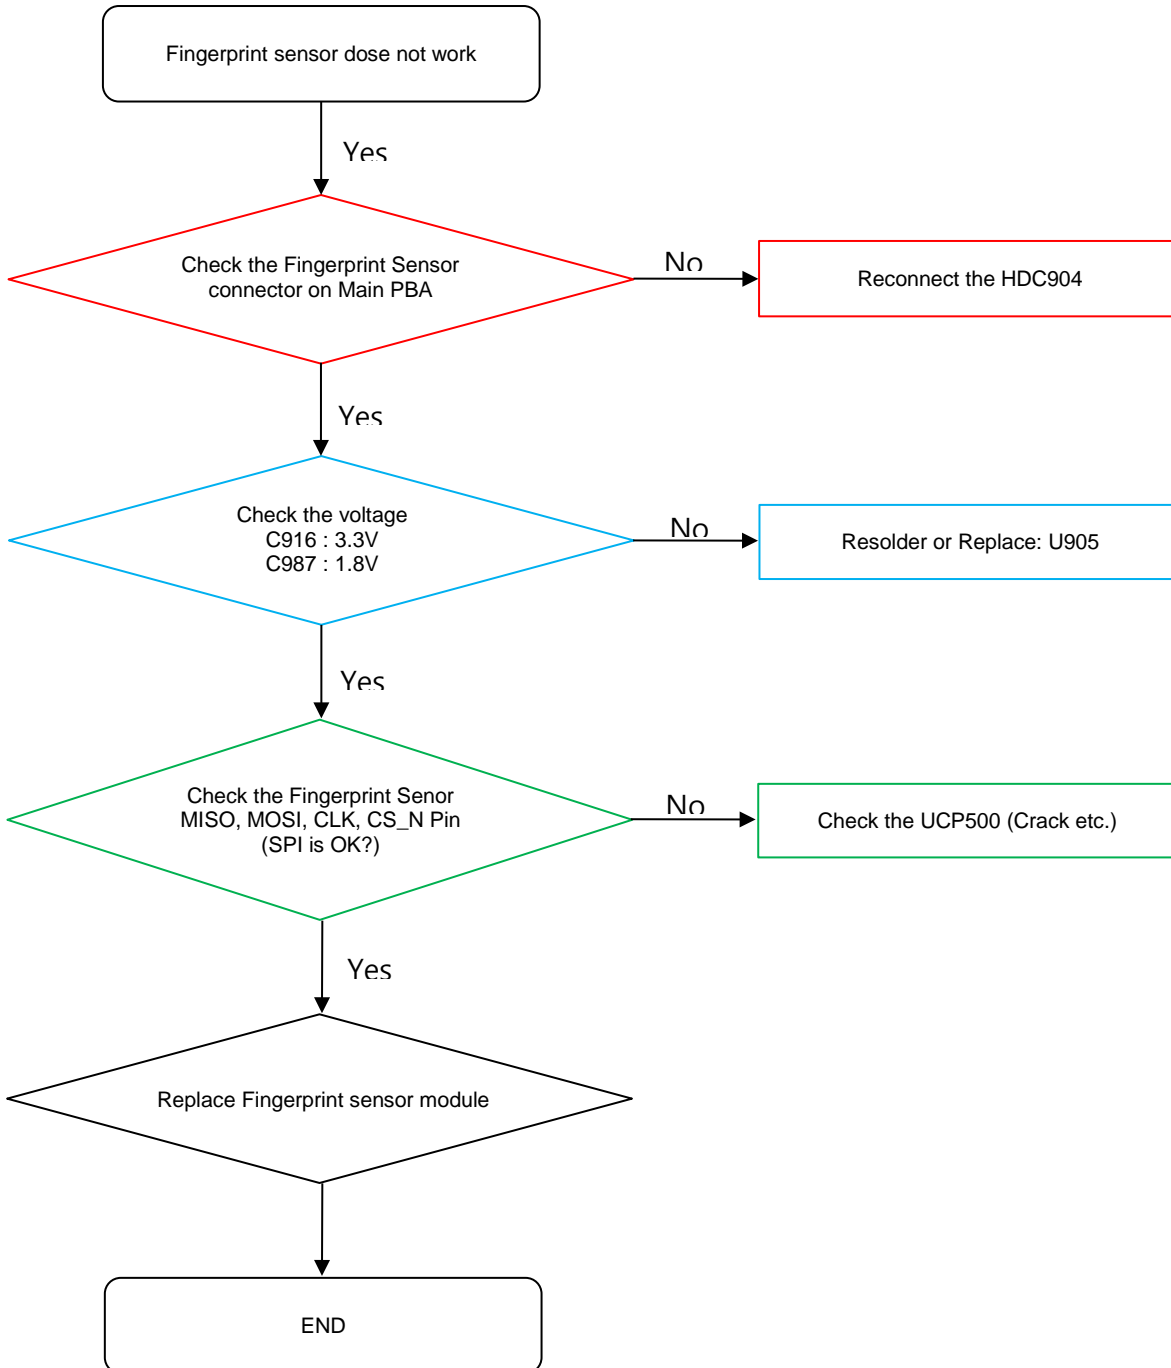

8. Level 3 Repair


8-4-45. DeX Station

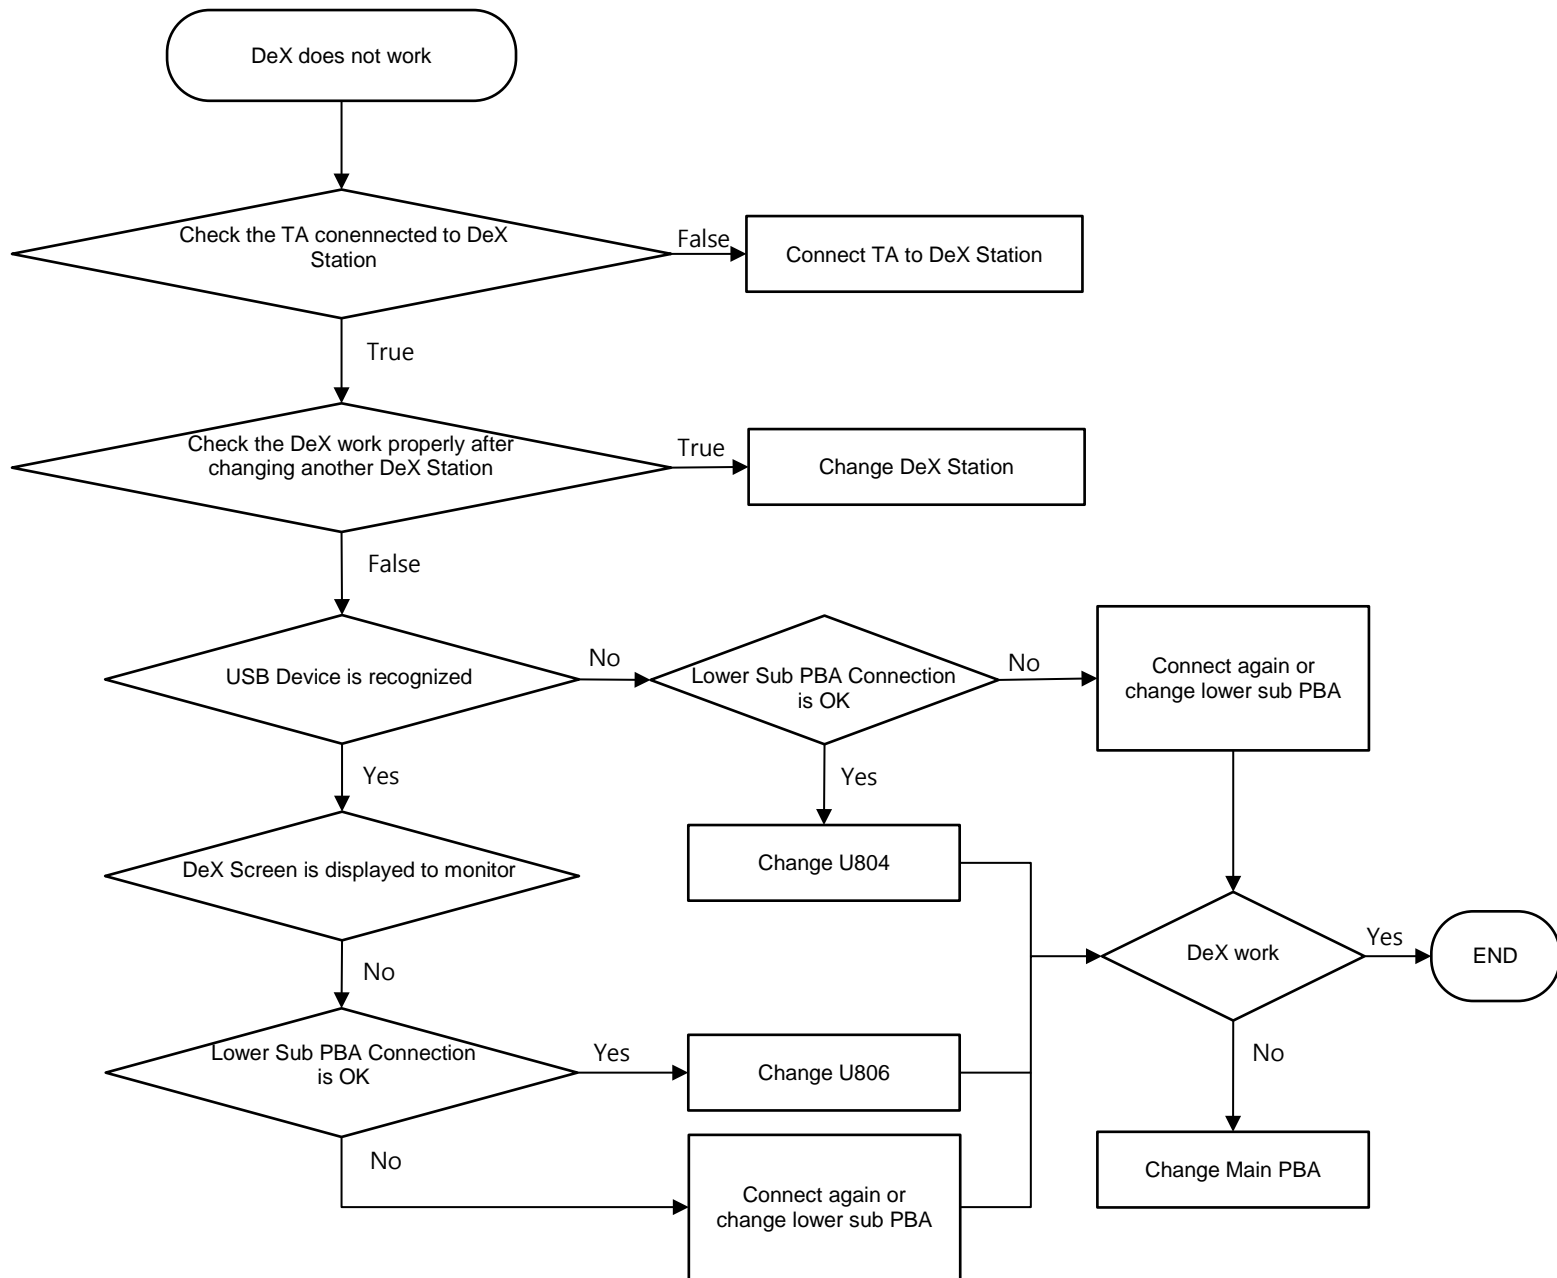

8. Level 3 Repair

8-5. Service Schematics

- NC Point(Top View)

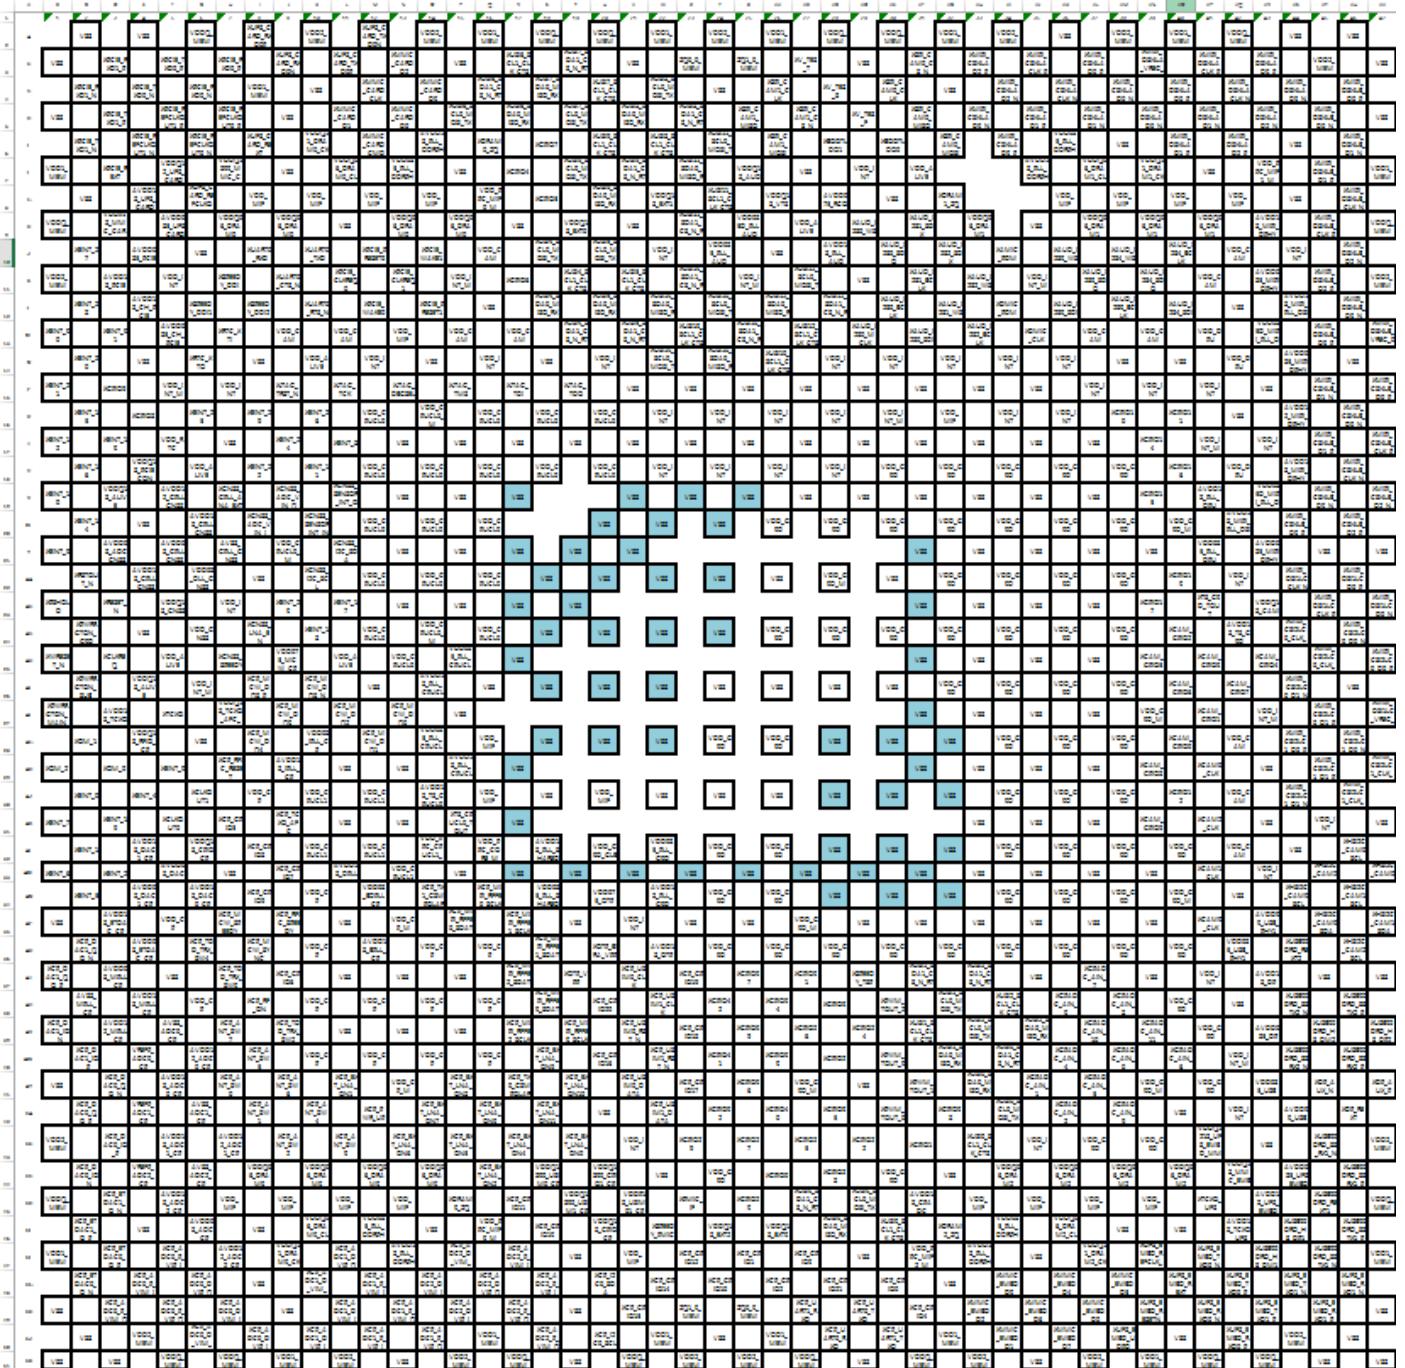

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.