

5. MAIN Electrical Parts List

Code	Design Loc	Description
0401-001110	D5000	DIODE-TVS
0406-001459	ZD5002	DIODE-TVS
0406-001514	ZD5003	DIODE-TVS
0406-001637	ZD2003,ZD2004	DIODE-TVS
0406-001675	ZD4002	DIODE-TVS
0406-001678	ZD5004,ZD5006,ZD5011	DIODE-TVS
0406-001678	ZD5012	DIODE-TVS
0406-001709	ZD5005,ZD5007,ZD5008	DIODE-TVS
0406-001709	ZD5010	DIODE-TVS
0406-001711	ZD5000,ZD5001	DIODE-TVS
0406-001733	ZD4000	DIODE-TVS
0406-001738	ZD6009,ZD6010,ZD6011	DIODE-TVS
0406-001738	ZD6012,ZD6013,ZD6015	DIODE-TVS
0406-001738	ZD6016,ZD6017,ZD6018	DIODE-TVS
0406-001738	ZD6019	DIODE-TVS
0407-001055	ZD4001	DIODE-ARRAY
0505-002388	Q2000	FET-SILICON
0601-003511	LED4000	LED
0601-003569	LED6000	LED
0801-003437	U2009	IC
1001-001964	U1000,U1100	IC
1001-001968	U5003	IC
1001-001970	U1102	IC
1009-001066	U5000	IC
1108-000596	UME4000	MEMORY
1201-003790	U2007	IC
1201-003990	L1044	IC
1201-004049	TXM1000	IC
1201-004056	U1001	IC
1201-004057	PAM1000	IC
1203-007000	U4000	IC
1203-007196	U2000	IC
1203-007324	U6003	IC
1203-007884	U6006	IC
1203-008250	U2004,U4004,U6004	IC
1203-008295	U6000	IC
1203-008324	U4001	IC
1203-008326	U5004,U5006,U6005	IC

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

1203-008379	U1004	IC
1203-008395	U6002	IC
1203-008490	U6001	IC
1203-008646	U4003	IC
1205-004981	U2006	IC
1205-005162	UCP3000	IC
1205-005214	U1103	IC
1205-005239	U2003	IC
1205-005301	U2005	IC
1205-005315	U4002	IC
1209-002275	U5001	IC
1209-002335	U5002	IC
1209-002345	U2008	IC
1404-001664	TH4000	THERMISTOR
1404-001724	TH1000,TH3000	THERMISTOR
1405-001395	V4003,V4004,V4006	VARISTOR
1405-001395	V4007,V4008,V4009	VARISTOR
1405-001395	VR1000	VARISTOR
1405-001403	V1002,V2000,VR1001	VARISTOR
1405-001403	VR1002,VR1004,VR1005	VARISTOR
1405-001409	V4000,V4002	VARISTOR
1405-001420	V4005,V4010,VR1003	VARISTOR
1405-001420	VR1011	VARISTOR
1405-001425	V1000	VARISTOR
2007-001284	R4027	R-CHIP
2007-007315	R3014	R-CHIP
2007-008045	R2020	R-CHIP
2007-008052	R3002,R3004,R3019	R-CHIP
2007-008052	R3021,R3023,R5033	R-CHIP
2007-008055	R4023,R5028,R5030	R-CHIP
2007-008055	R6013	R-CHIP
2007-008137	R6024	R-CHIP
2007-008210	R1002,R6002	R-CHIP
2007-008419	R2007,R2008,R4009	R-CHIP
2007-008419	R4031	R-CHIP
2007-008486	R4026,R4028	R-CHIP
2007-008516	R2000,R4011,R5001	R-CHIP
2007-008516	R5002,R5010,R5019	R-CHIP
2007-008516	R5020,R5910,R6006	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2007-008516	R6008,R6010,R6015	R-CHIP
2007-008516	R6025	R-CHIP
2007-008582	R1003,R1004	R-CHIP
2007-008587	R2001,R2002	R-CHIP
2007-008588	R2011,R2012,R2019	R-CHIP
2007-008588	R3006,R3007,R3008	R-CHIP
2007-008588	R3009,R3010,R3011	R-CHIP
2007-008588	R3012,R3013,R3024	R-CHIP
2007-008588	R3025,R4032,R4033	R-CHIP
2007-008588	R4034,R4035,R4036	R-CHIP
2007-008588	R4037,R6016,R6017	R-CHIP
2007-008588	R6018	R-CHIP
2007-008774	R4017,R4018	R-CHIP
2007-008788	R3026	R-CHIP
2007-008808	R5008	R-CHIP
2007-009084	R2010,R3017,R6007	R-CHIP
2007-009157	R1005,R3015,R4003	R-CHIP
2007-009157	R4005	R-CHIP
2007-009182	R5005	R-CHIP
2007-009223	R5023	R-CHIP
2007-009361	R1001	R-CHIP
2007-009410	R5022	R-CHIP
2007-009766	R5027,R5029	R-CHIP
2007-009801	R2009,R4016	R-CHIP
2007-009866	R5006	R-CHIP
2007-009879	R2003	R-CHIP
2007-009920	R3000,R4012	R-CHIP
2007-009954	R5024	R-CHIP
2007-010856	R4015	R-CHIP
2007-011043	R3016	R-CHIP
2007-011648	R4020	R-CHIP
2203-000233	C2018,C2019	C-CERAMIC,CHIP
2203-000438	C4100	C-CERAMIC,CHIP
2203-001072	C2020,C2021	C-CERAMIC,CHIP
2203-001153	C4107	C-CERAMIC,CHIP
2203-005344	C4098	C-CERAMIC,CHIP
2203-005682	C1004,C1025,C1034	C-CERAMIC,CHIP
2203-005682	C1063,C1078,C1091	C-CERAMIC,CHIP
2203-005682	C2035,C2054,C2059	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005682	C2060,C5001,C5011	C-CERAMIC,CHIP
2203-005717	C1035,C1048,C1075	C-CERAMIC,CHIP
2203-005717	C1080,C1082,C1086	C-CERAMIC,CHIP
2203-005717	C1087,C1093,C1094	C-CERAMIC,CHIP
2203-005717	C1097	C-CERAMIC,CHIP
2203-005719	C4117	C-CERAMIC,CHIP
2203-005725	C2056	C-CERAMIC,CHIP
2203-005726	C5000	C-CERAMIC,CHIP
2203-005727	C5002,C6000,C6021	C-CERAMIC,CHIP
2203-005729	C5004,C5005,C5019	C-CERAMIC,CHIP
2203-005729	C5021,C5032,C5033	C-CERAMIC,CHIP
2203-005732	C4076,C4077	C-CERAMIC,CHIP
2203-005734	C2045	C-CERAMIC,CHIP
2203-005736	C1007,C1008,C1023	C-CERAMIC,CHIP
2203-005736	C1024,C1028,C1032	C-CERAMIC,CHIP
2203-005736	C1033,C1036,C1043	C-CERAMIC,CHIP
2203-005736	C1058,C1060,C1061	C-CERAMIC,CHIP
2203-005736	C1066,C1088,C1089	C-CERAMIC,CHIP
2203-005736	C1092,C1099,C1100	C-CERAMIC,CHIP
2203-005736	C1104,C1106,C1107	C-CERAMIC,CHIP
2203-005736	C1108,C1116,C1120	C-CERAMIC,CHIP
2203-005736	C1125,C1126,C1130	C-CERAMIC,CHIP
2203-005736	C1136,C1137,C1141	C-CERAMIC,CHIP
2203-005736	C1142,C1143,C1144	C-CERAMIC,CHIP
2203-005736	C1145,C1149,C1150	C-CERAMIC,CHIP
2203-005736	C1155,C1156,C1160	C-CERAMIC,CHIP
2203-005736	C1162,C1163,C1164	C-CERAMIC,CHIP
2203-005736	C1169,C1170,C2034	C-CERAMIC,CHIP
2203-005736	C2042,C2043,C2047	C-CERAMIC,CHIP
2203-005736	C2055,C2058,C2061	C-CERAMIC,CHIP
2203-005736	L1054,L1062	C-CERAMIC,CHIP
2203-005777	C1012,C1022,C1042	C-CERAMIC,CHIP
2203-005777	C1067,C1083,C1095	C-CERAMIC,CHIP
2203-005777	C2052,L1064	C-CERAMIC,CHIP
2203-005789	C1020,C1039,C1090	C-CERAMIC,CHIP
2203-005789	L1056,L1065,L1108	C-CERAMIC,CHIP
2203-005792	C1021,C1047,C1096	C-CERAMIC,CHIP
2203-005806	C1002,C1018,C1073	C-CERAMIC,CHIP
2203-005806	C2024,C2025,C3049	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005806	C4000,C4026	C-CERAMIC,CHIP
2203-006048	C4049,C4075	C-CERAMIC,CHIP
2203-006123	C1006	C-CERAMIC,CHIP
2203-006187	C1049,C1050,C1051	C-CERAMIC,CHIP
2203-006187	C1101,C1109	C-CERAMIC,CHIP
2203-006194	C2039,C2040,C2041	C-CERAMIC,CHIP
2203-006194	C2044,C3025	C-CERAMIC,CHIP
2203-006208	C6024	C-CERAMIC,CHIP
2203-006305	C1005	C-CERAMIC,CHIP
2203-006318	C1085	C-CERAMIC,CHIP
2203-006379	C3012,C3036,C3037	C-CERAMIC,CHIP
2203-006379	C3040,C3041,C3042	C-CERAMIC,CHIP
2203-006379	C3043	C-CERAMIC,CHIP
2203-006399	C1117,C1124,C3022	C-CERAMIC,CHIP
2203-006399	C4073,C4074,C5013	C-CERAMIC,CHIP
2203-006399	C5911,C6018,C6023	C-CERAMIC,CHIP
2203-006399	C6029	C-CERAMIC,CHIP
2203-006400	C1129,C2057,C5020	C-CERAMIC,CHIP
2203-006400	C5022	C-CERAMIC,CHIP
2203-006423	C1041,C1046,C1056	C-CERAMIC,CHIP
2203-006423	C1081,C1098,C1121	C-CERAMIC,CHIP
2203-006423	C1122,C1123,C1140	C-CERAMIC,CHIP
2203-006423	C2016,C2062,C2063	C-CERAMIC,CHIP
2203-006423	C2064,C3003,C3015	C-CERAMIC,CHIP
2203-006423	C3020,C3021,C3030	C-CERAMIC,CHIP
2203-006423	C3031,C3032,C3033	C-CERAMIC,CHIP
2203-006423	C3034,C3045,C3047	C-CERAMIC,CHIP
2203-006423	C3048,C3050,C3051	C-CERAMIC,CHIP
2203-006423	C3053,C3054,C3055	C-CERAMIC,CHIP
2203-006423	C3060,C3061,C3062	C-CERAMIC,CHIP
2203-006423	C3063,C3064,C3065	C-CERAMIC,CHIP
2203-006423	C3066,C4010,C4012	C-CERAMIC,CHIP
2203-006423	C4021,C4025,C4057	C-CERAMIC,CHIP
2203-006423	C4072,C5007,C5008	C-CERAMIC,CHIP
2203-006423	C5023,C5024,C5029	C-CERAMIC,CHIP
2203-006423	C6013,C6015	C-CERAMIC,CHIP
2203-006426	C2022,C2023,R5021	C-CERAMIC,CHIP
2203-006556	C4096,C4097,C5012	C-CERAMIC,CHIP
2203-006562	C1013,C1016,C1072	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-006562	C2000,C4089,C4094	C-CERAMIC,CHIP
2203-006562	C4104,C4108,C5014	C-CERAMIC,CHIP
2203-006562	C5910,C6017,C6022	C-CERAMIC,CHIP
2203-006562	C6028,C6041,C6042	C-CERAMIC,CHIP
2203-006562	C6043	C-CERAMIC,CHIP
2203-006604	C6016	C-CERAMIC,CHIP
2203-006611	C1019,C1040	C-CERAMIC,CHIP
2203-006642	C4078,C4079,C4080	C-CERAMIC,CHIP
2203-006647	C3011,C3013	C-CERAMIC,CHIP
2203-006648	C2049	C-CERAMIC,CHIP
2203-006712	C4110	C-CERAMIC,CHIP
2203-006815	C3035,C4084	C-CERAMIC,CHIP
2203-006824	C3014	C-CERAMIC,CHIP
2203-006839	C1014,C1064,C4033	C-CERAMIC,CHIP
2203-006839	C6012	C-CERAMIC,CHIP
2203-006844	C2031	C-CERAMIC,CHIP
2203-006872	C2013,C2065,C4016	C-CERAMIC,CHIP
2203-006872	C5006	C-CERAMIC,CHIP
2203-006896	C1017	C-CERAMIC,CHIP
2203-006979	C5030	C-CERAMIC,CHIP
2203-007143	C6019	C-CERAMIC,CHIP
2203-007194	C2053	C-CERAMIC,CHIP
2203-007210	C1059,C4051,C4053	C-CERAMIC,CHIP
2203-007210	C4066,C5010	C-CERAMIC,CHIP
2203-007240	C4018,C4019,C4035	C-CERAMIC,CHIP
2203-007240	C4036,C4037,C4038	C-CERAMIC,CHIP
2203-007240	C4044,C4045	C-CERAMIC,CHIP
2203-007269	C6003,C6004,C6007	C-CERAMIC,CHIP
2203-007270	C2051	C-CERAMIC,CHIP
2203-007271	C3052,C4009,C4020	C-CERAMIC,CHIP
2203-007271	C4022,C4023,C4088	C-CERAMIC,CHIP
2203-007279	C4007,C4102	C-CERAMIC,CHIP
2203-007317	C6025,C6031	C-CERAMIC,CHIP
2203-007369	C2014,C2015	C-CERAMIC,CHIP
2203-007391	C1118,C2037,C2048	C-CERAMIC,CHIP
2203-007391	C4071,C6020	C-CERAMIC,CHIP
2203-007393	C1065,C1076,C2038	C-CERAMIC,CHIP
2203-007393	C4003,C4004,C4005	C-CERAMIC,CHIP
2203-007393	C4008,C4024,C4043	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007393	C4050,C4052,C4083	C-CERAMIC,CHIP
2203-007393	C4092,C6014	C-CERAMIC,CHIP
2203-007449	C2017,C3000,C3001	C-CERAMIC,CHIP
2203-007449	C3002,C3005,C3007	C-CERAMIC,CHIP
2203-007449	C3008,C3009,C3010	C-CERAMIC,CHIP
2203-007449	C3016,C3017,C3018	C-CERAMIC,CHIP
2203-007449	C3019,C3023,C3024	C-CERAMIC,CHIP
2203-007449	C3026,C3027,C3028	C-CERAMIC,CHIP
2203-007449	C3038,C3039,C3044	C-CERAMIC,CHIP
2203-007449	C3046,C3056,C3057	C-CERAMIC,CHIP
2203-007449	C3058,C3059,C4011	C-CERAMIC,CHIP
2203-007449	C4014,C4015,C4017	C-CERAMIC,CHIP
2203-007449	C4027,C4028,C4030	C-CERAMIC,CHIP
2203-007449	C4031,C4032,C4034	C-CERAMIC,CHIP
2203-007449	C4048,C4054,C4061	C-CERAMIC,CHIP
2203-007449	C4093,C4103,C4109	C-CERAMIC,CHIP
2203-007449	C5009,C5034,C6026	C-CERAMIC,CHIP
2203-007449	C6027,C6030,C6032	C-CERAMIC,CHIP
2203-007449	C6033	C-CERAMIC,CHIP
2203-007474	C2046,C2050	C-CERAMIC,CHIP
2203-007775	C1084,C2028,C6044	C-CERAMIC,CHIP
2203-007775	C6045	C-CERAMIC,CHIP
2203-007796	C1000,C1001,C2026	C-CERAMIC,CHIP
2203-007796	C2029,C4101,C6038	C-CERAMIC,CHIP
2203-007796	C6040	C-CERAMIC,CHIP
2203-008097	C2027,C2030	C-CERAMIC,CHIP
2203-008242	C4056,C4060,C4065	C-CERAMIC,CHIP
2203-008242	C5003,C6034,C6035	C-CERAMIC,CHIP
2203-008242	C6036,C6039	C-CERAMIC,CHIP
2203-008394	C1011	C-CERAMIC,CHIP
2203-008527	C1003,C4099,C4112	C-CERAMIC,CHIP
2203-008527	C4113,C4114,C4115	C-CERAMIC,CHIP
2203-008654	C4086	C-CERAMIC,CHIP
2203-008689	C4087	C-CERAMIC,CHIP
2203-008844	C4091	C-CERAMIC,CHIP
2203-008860	C4090	C-CERAMIC,CHIP
2203-008876	C4041,C4042,C4081	C-CERAMIC,CHIP
2203-008876	C4082	C-CERAMIC,CHIP
2203-009048	C6001,C6002	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-009049	C6046	C-CERAMIC,CHIP
2203-009733	C4095,L1071	C-CERAMIC,CHIP
2703-001231	L4008	INDUCTOR-SMD
2703-002313	L5013	INDUCTOR-SMD
2703-002649	L2004	INDUCTOR-SMD
2703-002858	L1090,L1091,L1093	INDUCTOR-SMD
2703-002858	L2010	INDUCTOR-SMD
2703-002900	L1028	INDUCTOR-SMD
2703-002903	L6007	INDUCTOR-SMD
2703-002907	L1006,L1025	INDUCTOR-SMD
2703-002959	R6009,R6012	INDUCTOR-SMD
2703-002960	L1005,L1014,L1103	INDUCTOR-SMD
2703-002960	L1107,L1112,L5012	INDUCTOR-SMD
2703-002960	L5020,L5021	INDUCTOR-SMD
2703-002961	L5007,L5008	INDUCTOR-SMD
2703-003064	L1000	INDUCTOR-SMD
2703-003686	L3000,L4010	INDUCTOR-SMD
2703-003878	L5022	INDUCTOR-SMD
2703-004000	L1004,L1105,L2006	INDUCTOR-SMD
2703-004012	C1044,C1069,L1024	INDUCTOR-SMD
2703-004012	L1068,L1069,L1079	INDUCTOR-SMD
2703-004012	L1113	INDUCTOR-SMD
2703-004013	L1008,L1050,L1051	INDUCTOR-SMD
2703-004013	L1067,L1073	INDUCTOR-SMD
2703-004014	C1029,L1018,L1110	INDUCTOR-SMD
2703-004018	L1012,L1023,L1120	INDUCTOR-SMD
2703-004034	L1009,L1013,L1077	INDUCTOR-SMD
2703-004034	L1106	INDUCTOR-SMD
2703-004035	C2036,L1011,L1021	INDUCTOR-SMD
2703-004035	L1075,L1114,L1115	INDUCTOR-SMD
2703-004035	L1116,L1118,L1119	INDUCTOR-SMD
2703-004037	L1045	INDUCTOR-SMD
2703-004038	L1063	INDUCTOR-SMD
2703-004193	L1003	INDUCTOR-SMD
2703-004259	L1109	INDUCTOR-SMD
2703-004286	L1092	INDUCTOR-SMD
2703-004287	C1026,L1078,L1083	INDUCTOR-SMD
2703-004288	C1074,C1115,L1001	INDUCTOR-SMD
2703-004288	L1046,L1072,L1080	INDUCTOR-SMD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2703-004288	L1082,L1084	INDUCTOR-SMD
2703-004297	L6006	INDUCTOR-SMD
2703-004298	L1007,L1026	INDUCTOR-SMD
2703-004328	L1042	INDUCTOR-SMD
2703-004363	L1074	INDUCTOR-SMD
2703-004366	L1002,L1055	INDUCTOR-SMD
2703-004368	C1148,L1015,L1020	INDUCTOR-SMD
2703-004369	L1019,L1052	INDUCTOR-SMD
2703-004764	L2008	INDUCTOR-SMD
2703-005102	L4003	INDUCTOR-SMD
2703-005106	L1076	INDUCTOR-SMD
2703-005117	L6001,L6002	INDUCTOR-SMD
2703-005118	L6000	INDUCTOR-SMD
2703-005339	L4000,L4001	INDUCTOR-SMD
2703-005340	L4004,L4011	INDUCTOR-SMD
2703-005435	L2002,L2003	INDUCTOR-SMD
2801-005300	OSC4000	CRYSTAL-UNIT
2901-001798	F605,F606,F607,F608	FILTER-EMI
2901-001798	F609	FILTER-EMI
2904-002169	F2001	FILTER-SAW
2904-002211	F1011	FILTER-SAW
2904-002257	F1016	FILTER-SAW
2904-002269	F1014	FILTER-SAW
2904-002314	F2000	FILTER-SAW
2904-002350	F1004	FILTER-SAW
2910-000296	F1008	FILTER
2910-000321	F1002	FILTER
2910-000342	F1009	FILTER
2910-000352	F1006	FILTER
2910-000363	F1000	FILTER
2910-000379	F1001	FILTER
2910-000385	F1007	FILTER
2911-000421	U1007	FILTER
3003-001219	MIC5000	MIC-CONDENSOR
3301-001729	L5010	CORE-FERRITE
3301-001789	L6003,L6004,L6005	CORE-FERRITE
3301-001812	L5000,L5001	CORE-FERRITE
3301-001885	L5002,L5009,L5016	CORE-FERRITE
3301-001885	L5017,L5018	CORE-FERRITE

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

3301-001895	L1104,L2009	CORE-FERRITE
3301-001914	L4002	CORE-FERRITE
3301-002035	L1066	CORE-FERRITE
3301-002078	L5011	CORE-FERRITE
3301-002122	L5005,L5006	CORE-FERRITE
3301-002235	L4006,L4007,L5014	CORE-FERRITE
3301-002235	L5015	CORE-FERRITE
3301-002236	L4005,L5003,L5019	CORE-FERRITE
3301-002237	L2000	CORE-FERRITE
3301-002248	L2005	CORE-FERRITE
3301-002254	L4009,L4012	CORE-FERRITE
3404-001550	TAC5000,TAC5001	SWITCH-TACT
3705-001708	RFS1000	CONNECTOR-COAXIAL
3709-001799	CN6000,CN6002	CONNECTOR-CARD
3709-001899	CN6001	CONNECTOR-HEADER
3711-007295	HDC6003	CONNECTOR-HEADER
3711-007810	HEA5000	CONNECTOR-HEADER
3711-008182	HDC6002	CONNECTOR-HEADER
3711-008511	HDC6000	CONNECTOR-HEADER
3711-008737	BTC4000	CONNECTOR
3712-001621	ANT1001,ANT1004	CONNECTOR
3712-001621	ANT1005,ANT1008	CONNECTOR
3712-001621	ANT1011,ANT1013	CONNECTOR
3712-001621	ANT2002,PWR50,PWR51	CONNECTOR
3712-001626	RCV50,RCV51	CONNECTOR
3712-001634	ANT1000,ANT1002	CONNECTOR
3712-001634	ANT1003,ANT1006	CONNECTOR
3712-001634	ANT1009,ANT1010	CONNECTOR
3712-001634	ANT1012,ANT1014	CONNECTOR
3712-001634	ANT2000,ANT2001	CONNECTOR
3712-001634	ANT2003,MOT50,MOT51	CONNECTOR
3712-001666	SPK50,SPK51	CONNECTOR
3722-003708	IFC4000	JACK-PHONE
4709-002464	F1012	RF-MODULE
GH63-12570A	SC1003	SC-SMJ5108-WIFI
GH63-12571A	SC1001	SC-SMJ5108-OCTADC
GH63-12572A	SC1000	SC-SMJ5108-APT
GH80-03320A	R5000	PB-SHORT-0603
GH80-03321A	R1000,R1006,R1007	PB-SHORT-0603

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

GH80-03321A	R3028,R4006,R4008	PB-SHORT-0603
GH80-03321A	R4039,R5017,R5025	PB-SHORT-0603
GH80-03321A	R5026,R5034,R6020	PB-SHORT-0603
GH80-03321A	R6021,R6022	PB-SHORT-0603
GH98-39310A	SC1005	SC-SMJ5108-PMIC
GH98-39312A	SC1002	SC-SMJ5108-AP
GH98-39313A	SC1004	SC-SMJ5108-RF

Please consult the GSPN website (Samsung Portal) for the most recent version of the product's part list.