# Lenovo X2 Service Manual

**LENOVO** 

# Contents

1.	How to assemble and disassemble LENOVO X2		3
	1.1	The phone disassemble guide	3
	1.2	The phone assemble guide	6
2.	Main board and Sub FPC layout introduction		7
	2.1	Main board top view	7
	2.2	Main board bottom view	8
	2.3	Sub board top view	8
	2.4	Sub board bottom view	9
3.	Troubleshooting Procedure		10
	3.1	No boot	10
	3.2	Touch panel have no effect	11
	3.3	Charging anomaly	12
	3.4	Calling receiver sound has poor quality	14
	3.5	Speaker has no sound	15
	3.6	LCD has no display	16
	3.7	Phone crash	18
	3.8	Key has no effect	19
	3.9	Communication signal abnormality	20
	3.10	Calling receiver has no sound	21
	3.11	Microphone has no effect	22
	3.12	Display color distortion	23
	3.13	Speaker tone distortion	24
	3.14	Speaker tone smaller	25
	3.15	No charging	26
	3.16	Camera has no effect	27
	3.17	Auto shutdown	29
	3.18	SIM Card has not be detected	30

# 1. How to assemble and disassemble LENOVO X2

## 1.1 The phone disassemble guide

#### 1) Take out the sim-tray



#### 2) Disassemble the bottom of decoration

Use tweezer from the top of decoration and the battery cover gap ( the back right side with the red spot mentioned below), released the hooks remove the decoration $_{\circ}$ 







3) Disassemble the rear housing assemble

Note: 1, The solid red dots are hooks position

2. Disassemble tools: Tweezer. Disassemble bar; in order to protect the cover from destroy ,the disassemble bar insert just about 2mm

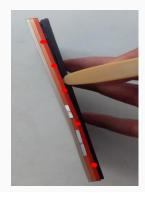

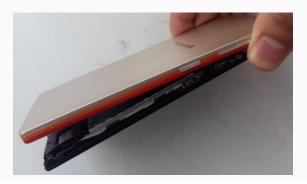


Using the disassemble bar to pry hooks

Released the hook 1 from the lower left corner . The direction of from bottom to top to released the hooks




#### 4) Disassemble the main board

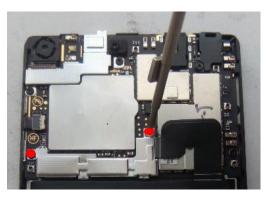

Disassemble the battery connector pressure sheet steel, 2 screws



Release the battery connector

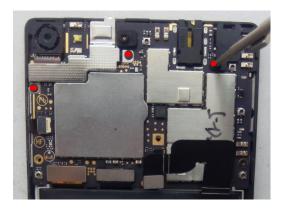

Release brackets



Release the TP connector , LCD connector and main FPC  $\,$ 



Remove screws as the solid red dots position

#### 5) Disassemble the sub board



SAN HERCEBS

Remove the SPK BOX, 3 screws red arrow board





Remove the RF cable connector from sub

Remove the sub board slowly, pay attention to protect the shrapnel and the hook ( The solid red

#### dots location)

#### 6) Disassemble battery




If you want disassemble the battery, need to pull out the battery adhesive. The red arrow location

# 1.2 The phone assemble guide

Assemble and disassemble process is opposite


# 2. Main board and Sub FPC layout introduction

# 2.1 Main board top view

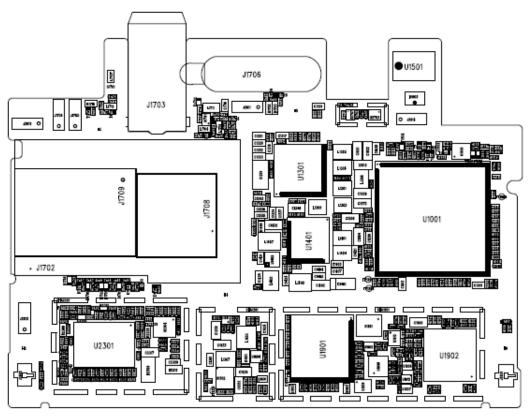


GLUE:U1301 U1401 U1001 U1901

## 2.2 Main board bottom view

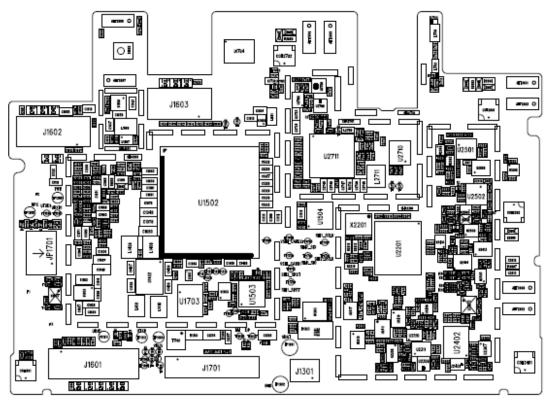


GLUE : U1502

# 2.3 Sub board top view

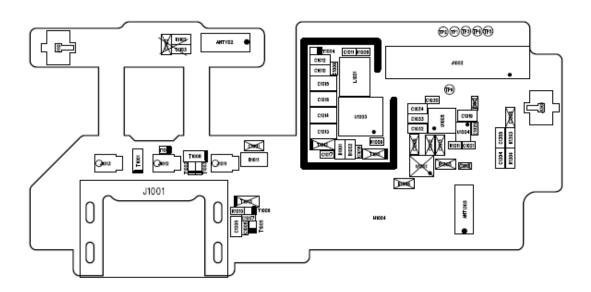


# 2.4 Sub board bottom view

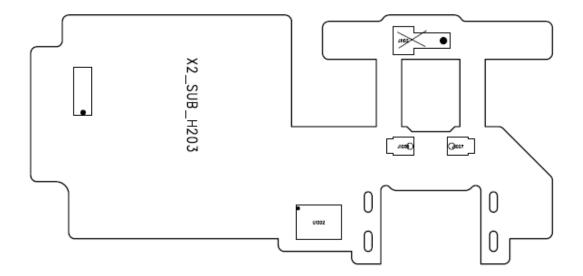


# 3. Troubleshooting Procedure

#### 3.1 No boot

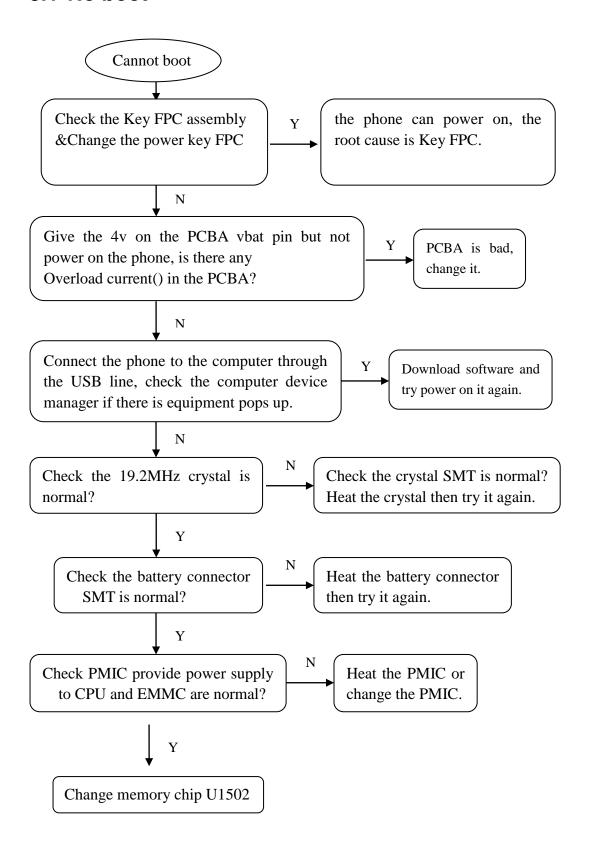


## 3.2 Touch panel have no effect

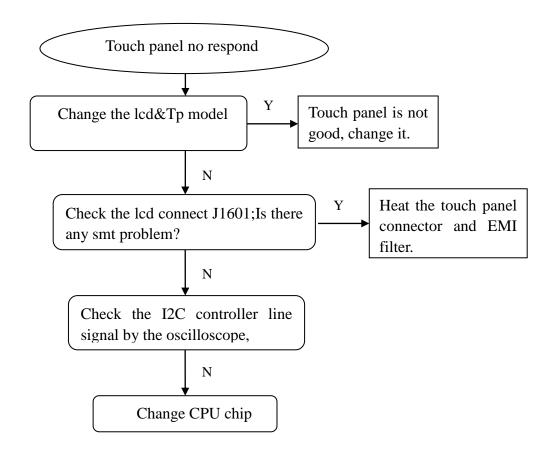


## 3.3 Charging anomaly


#### 3.3.1 The charger is plugged in, without charging display

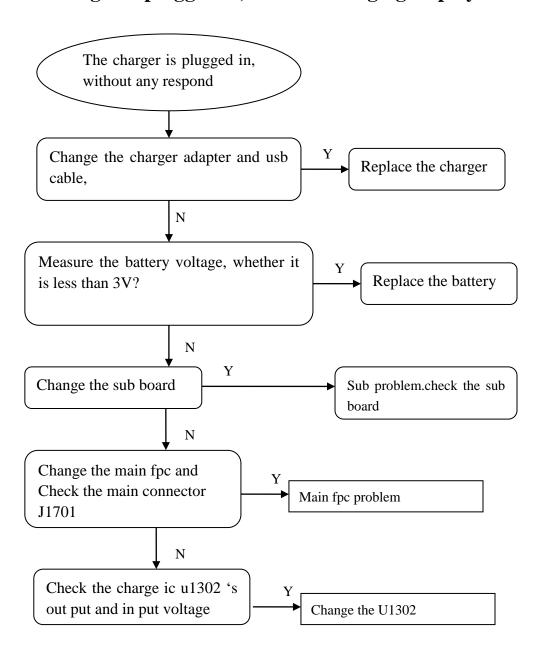


# 3.3.2 Connect the phone and computer through USB line, but not any new device was found in the computer

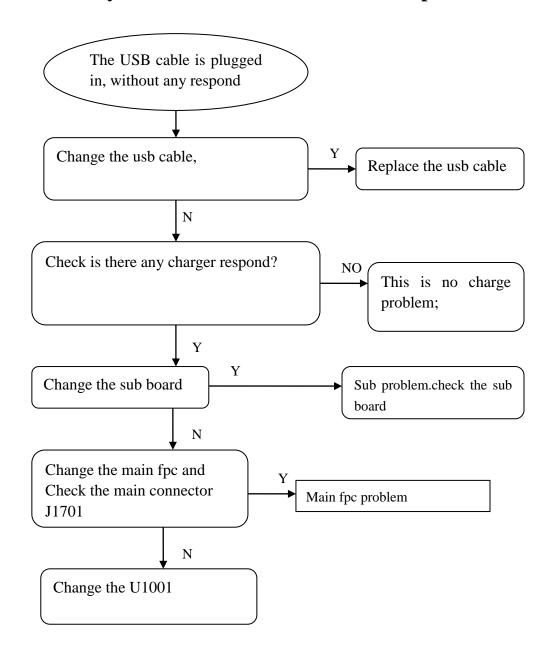

### 3.4 Calling receiver sound has poor quality

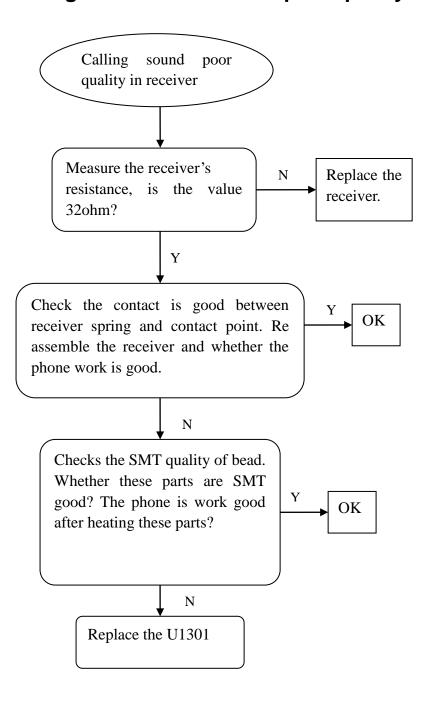


### 3.5 Speaker has no sound

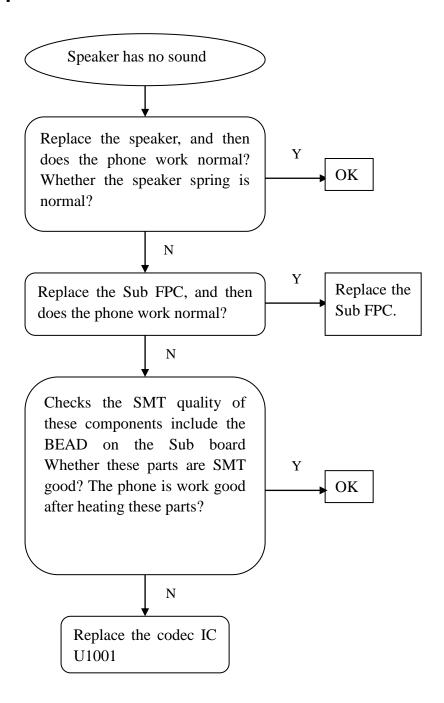


## 3.6 LCD has no display


### 3.6.1 Power on and no display

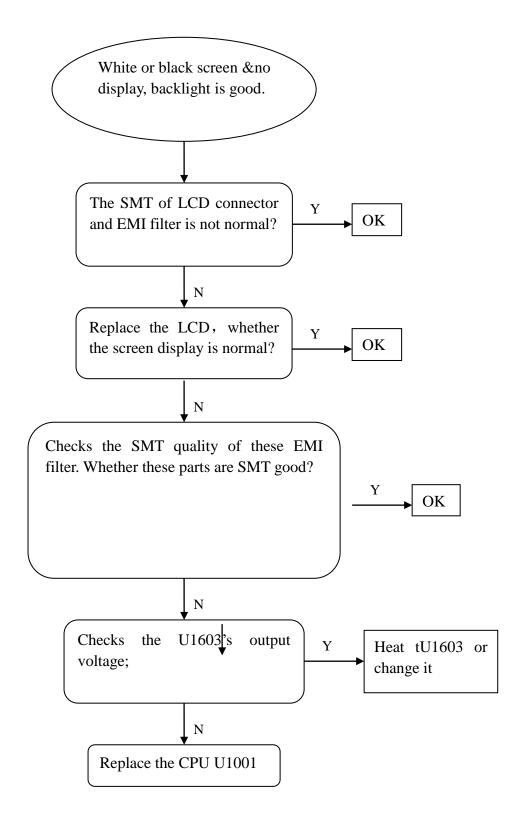


#### 3.6.2 LCD has no display

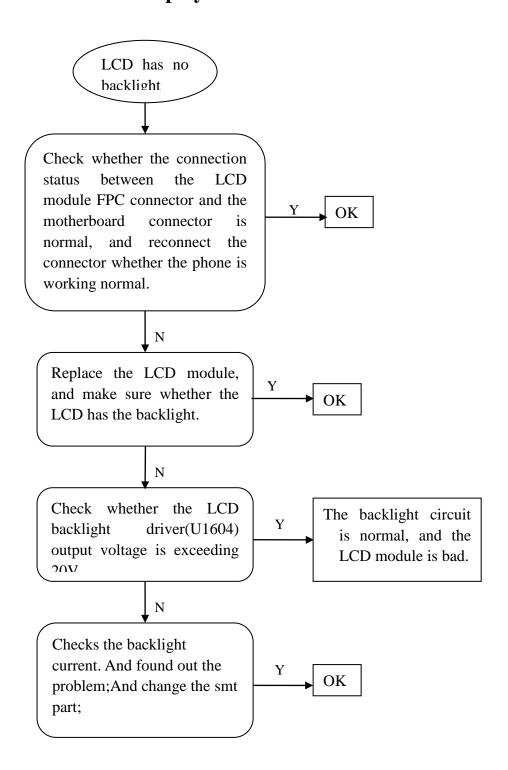


#### 3.7 Phone crash

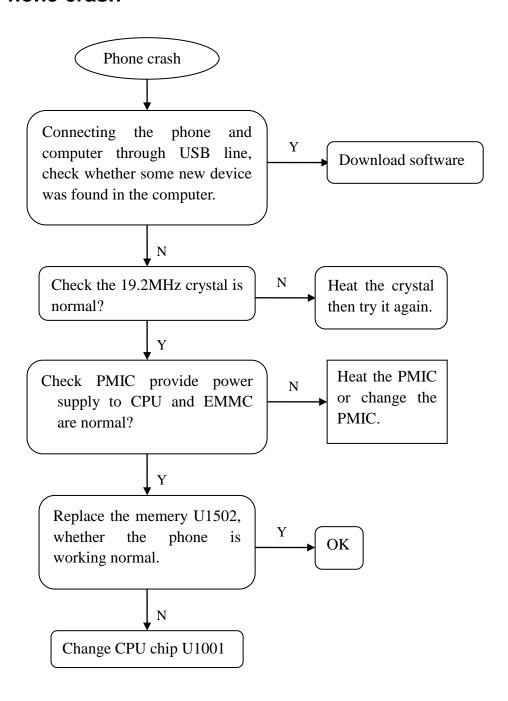


## 3.8 Key has no effect

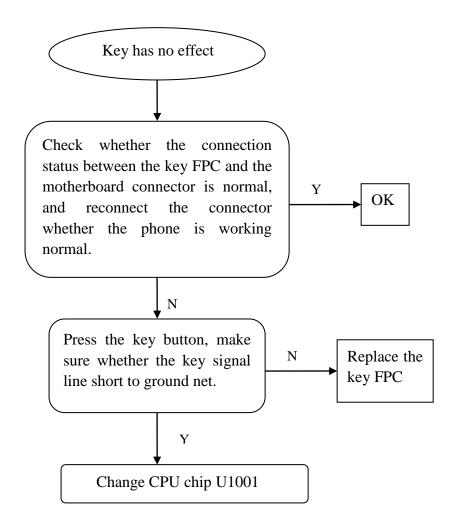


## 3.9 Communication signal abnormality

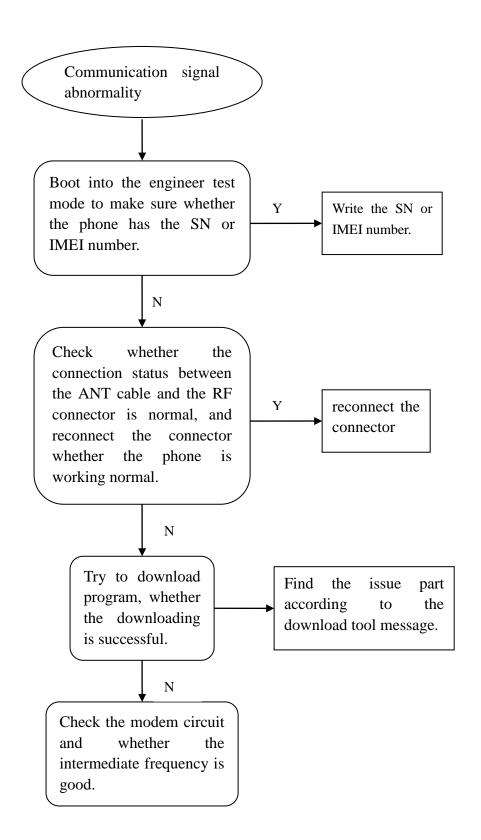


### 3.10 Calling receiver has no sound

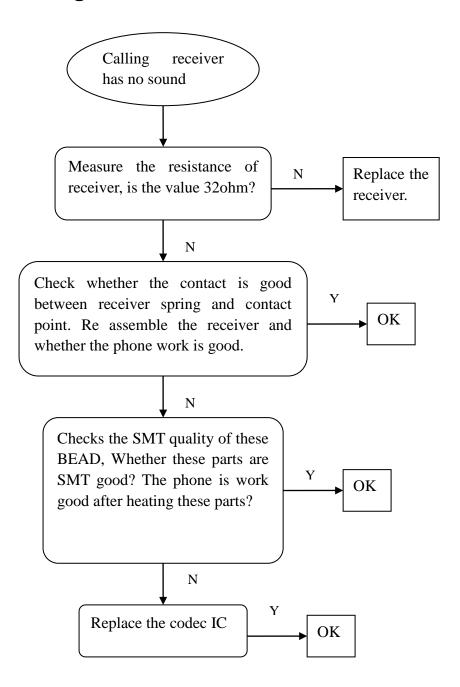


## 3.11 Microphone has no effect

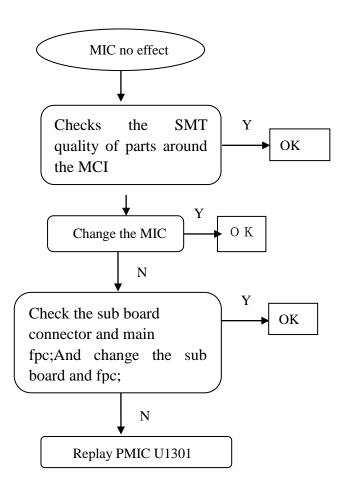


## 3.12 Display color distortion

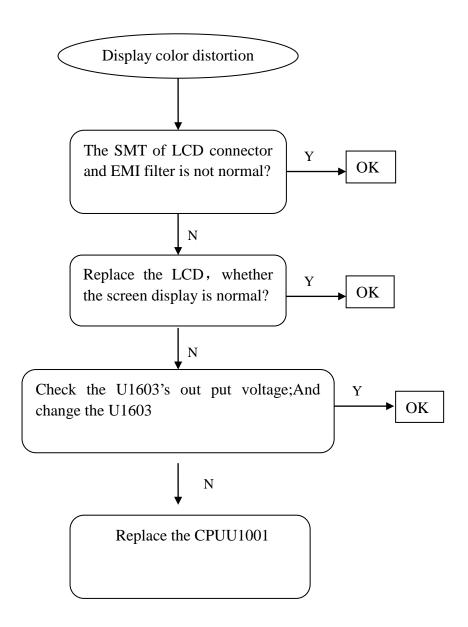


## 3.13 Speaker tone distortion

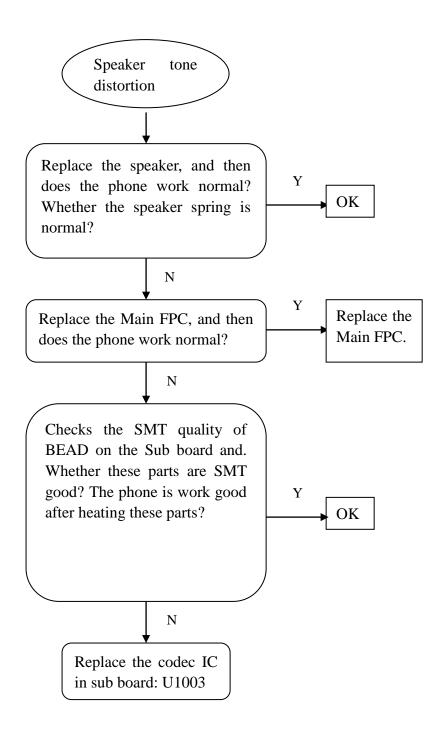

# 3.14 Speaker tone smaller

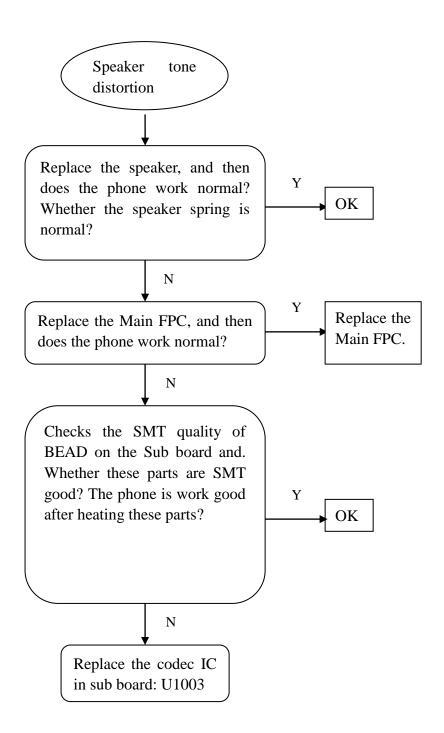


## 3.15 No charging

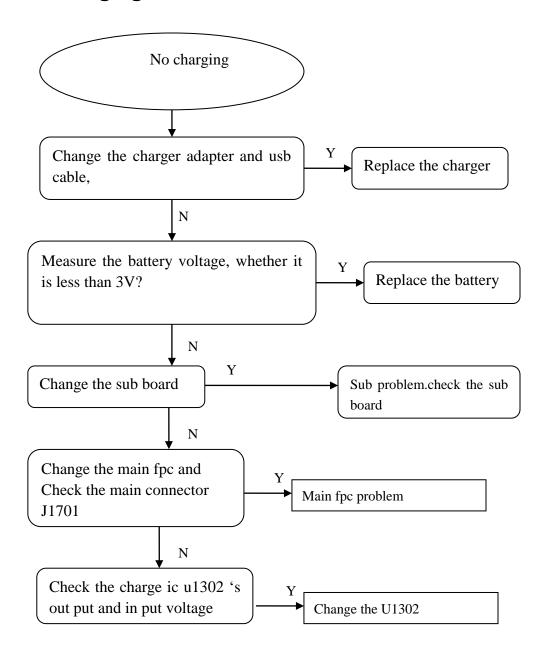


#### 3.16 Camera has no effect


#### 3.16.1 Main camera has no effect

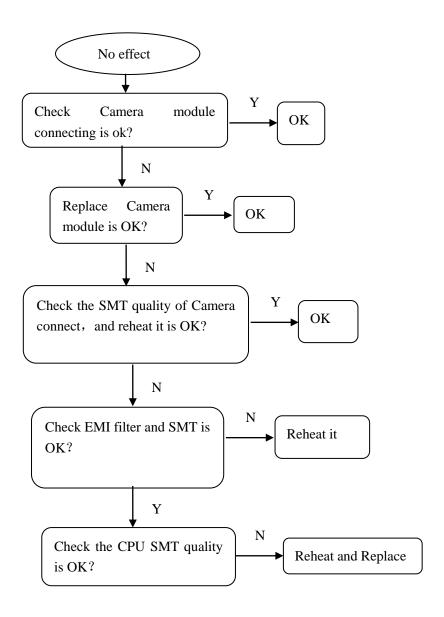

#### 3.16.2 Sub camera has no effect

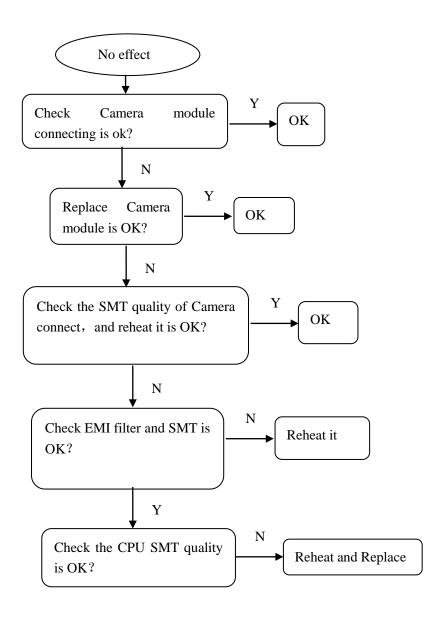

#### 3.17 Auto shutdown

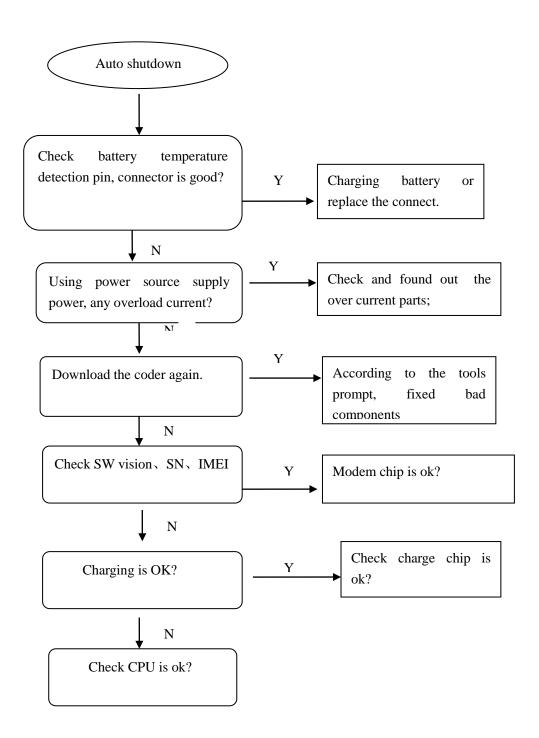

#### 3.18 SIM Card has not be detected

